



AARAIN INSTALLATION INSTRUCTIONS FOR FLOOR


Octagon 17 m²

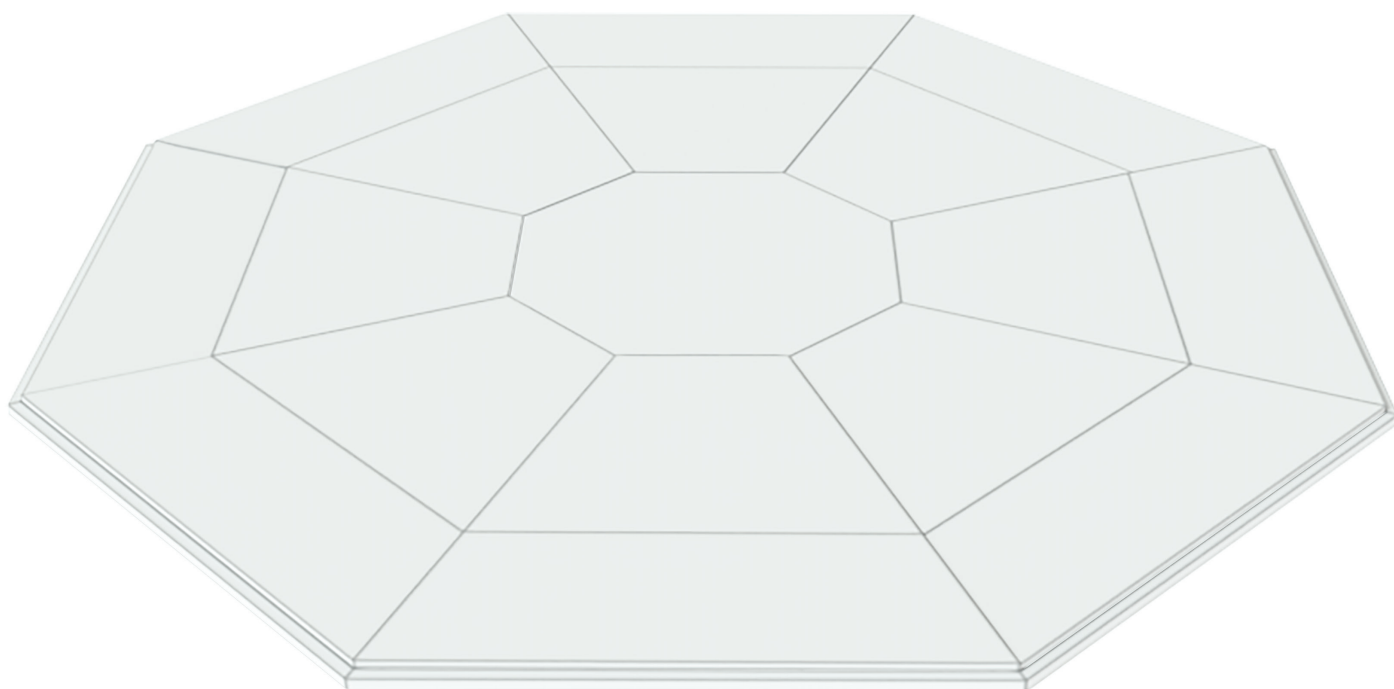


- Remove the board cover from four elements.

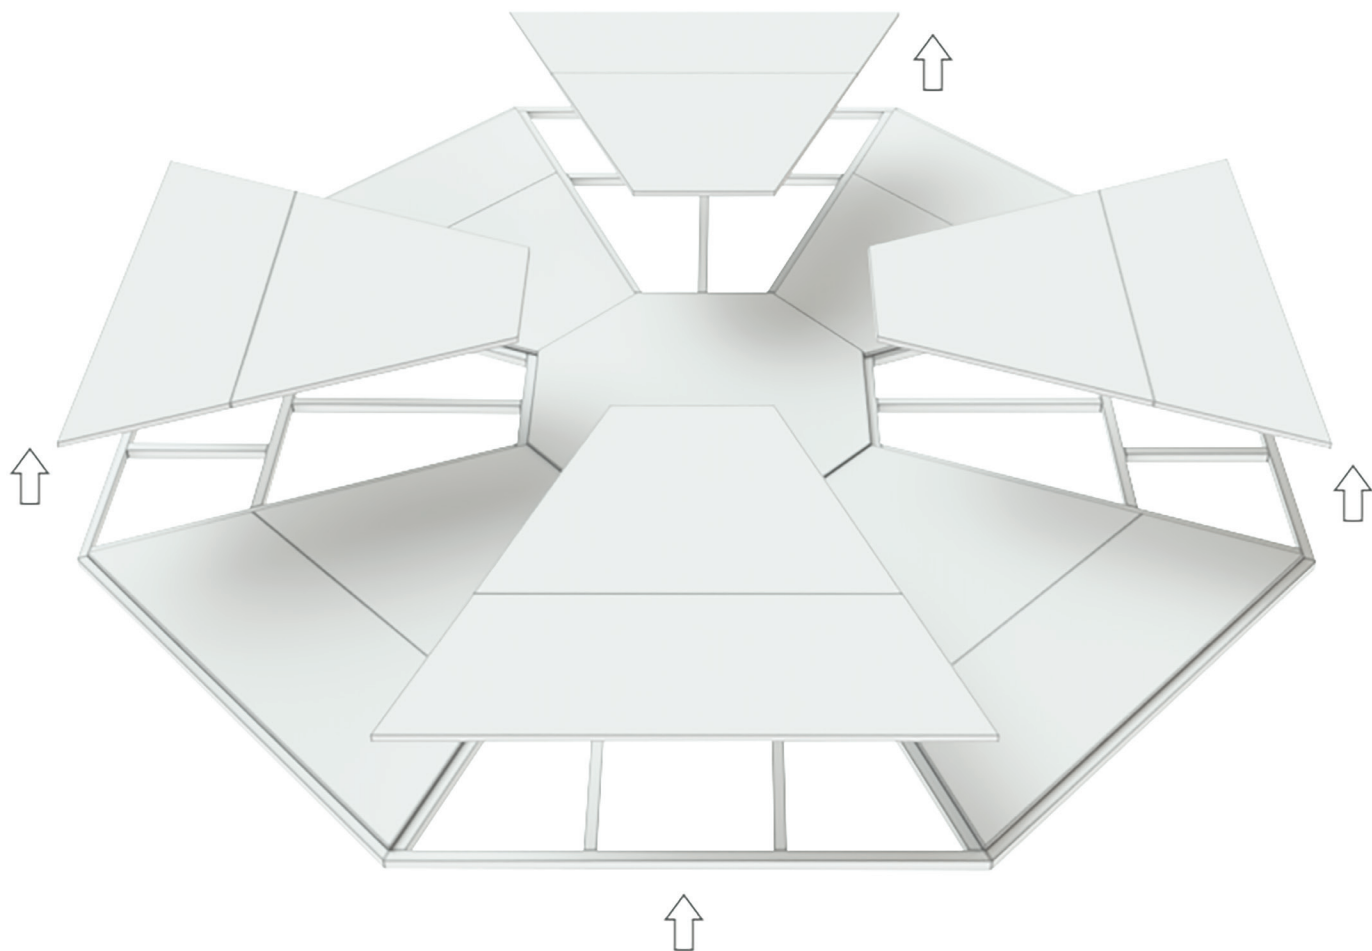

- Attach the frame parts to each other (ca four screws for one side).

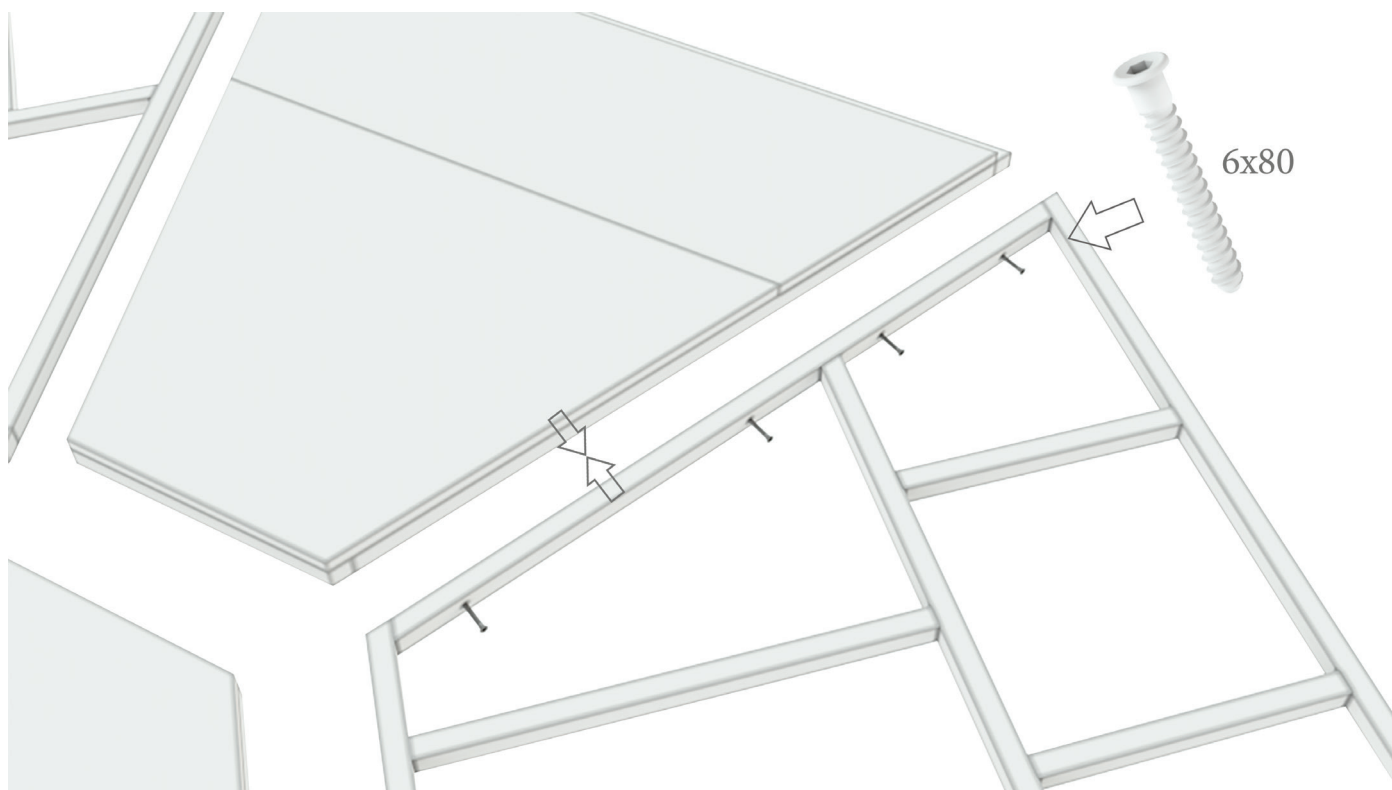

- Then attach the frame to eight square elements (ca two screws for one side).

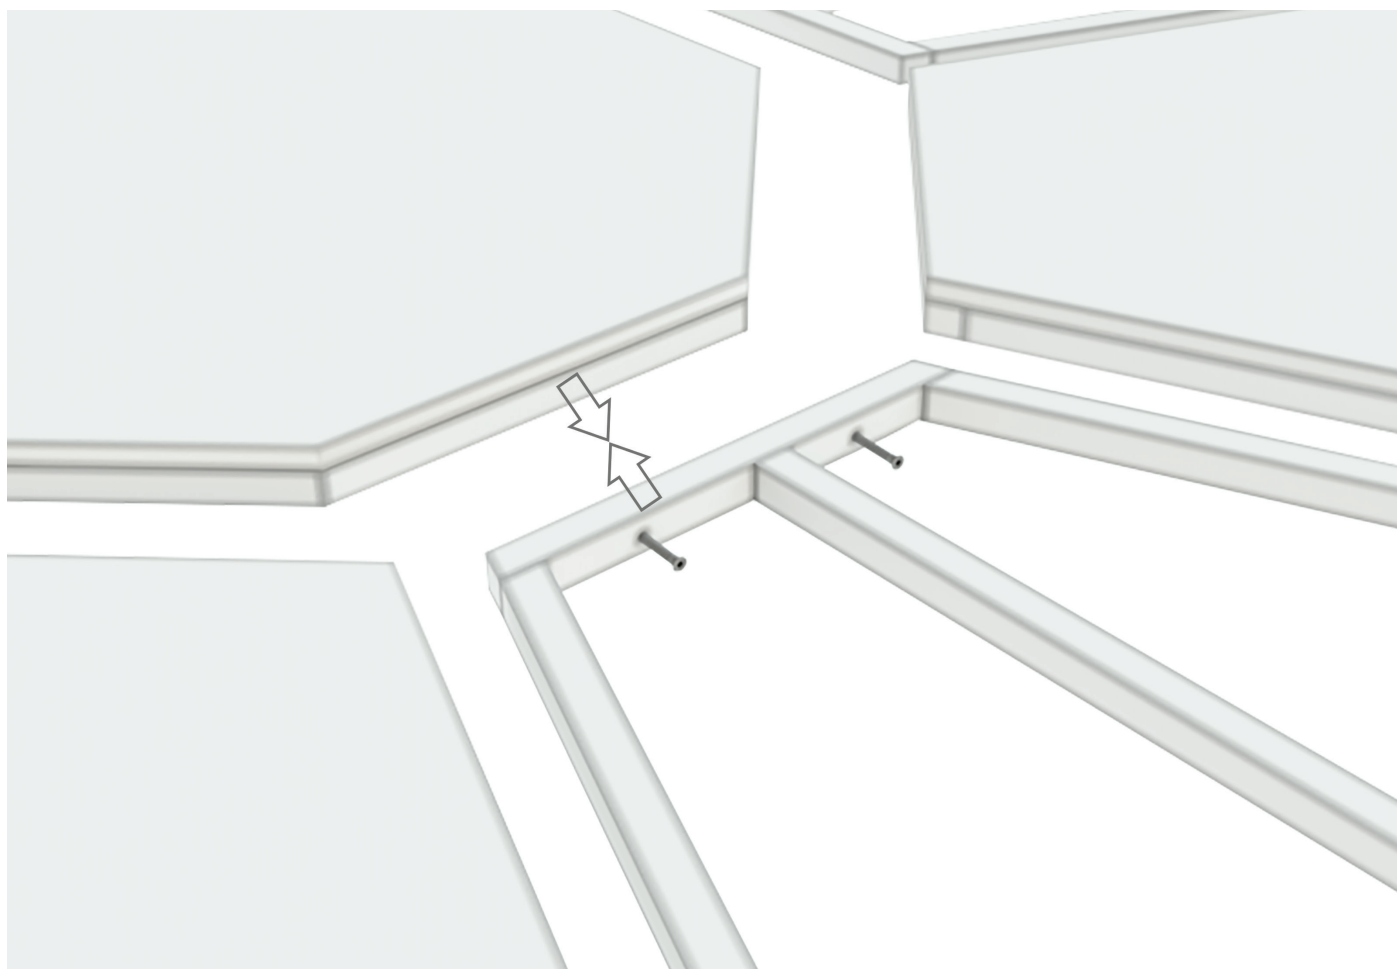

- If needed, correct the board cover.



- Fit the board covers on.

