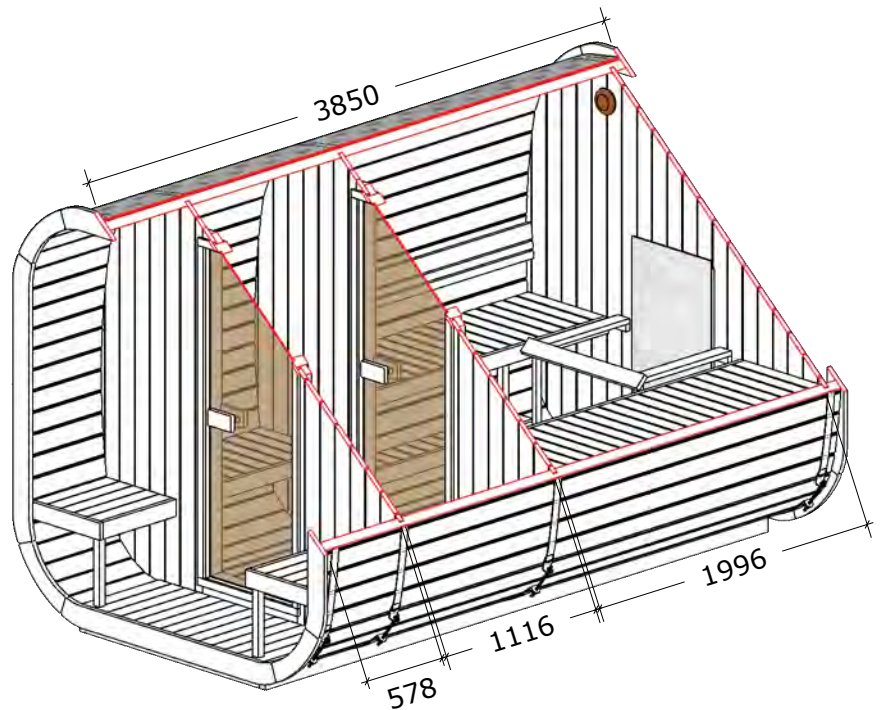
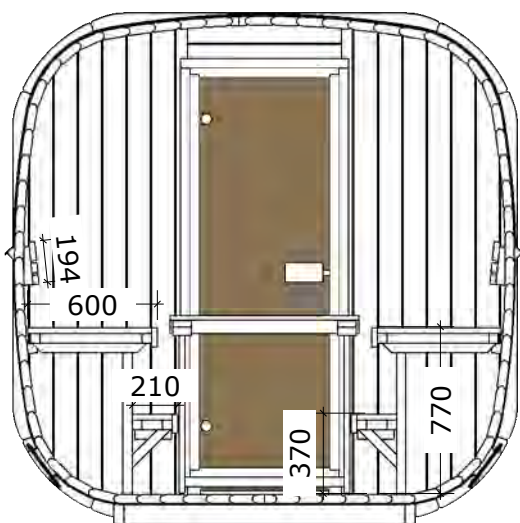
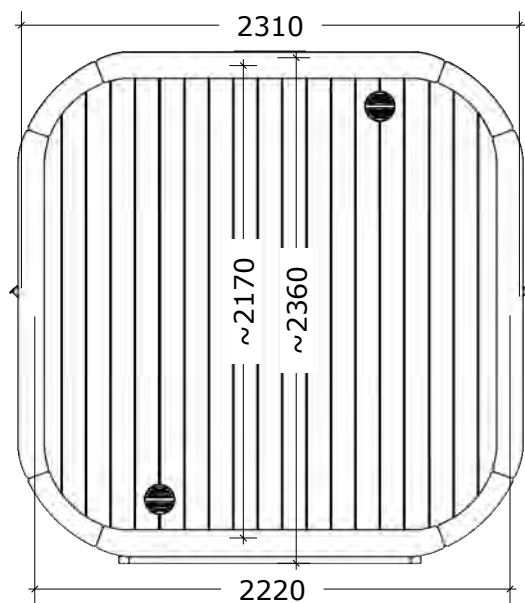
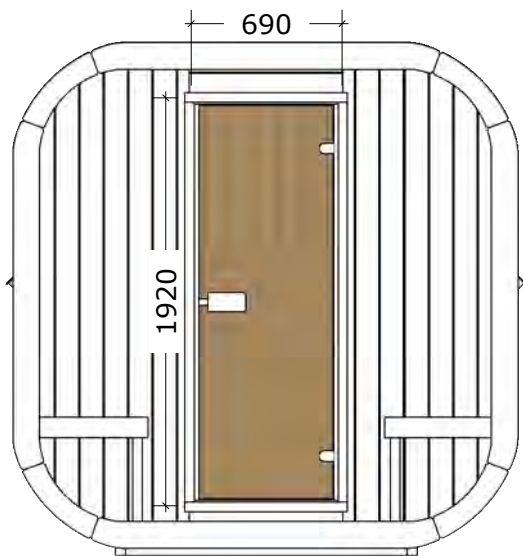


Icon Sauna 385, Ø226

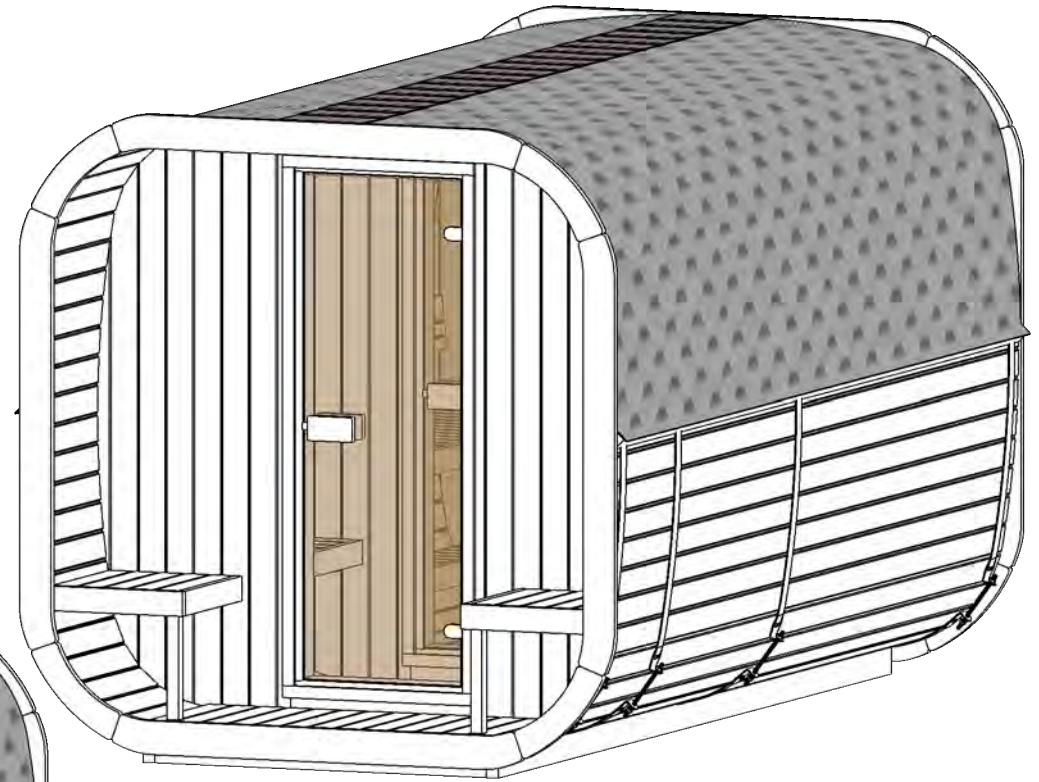
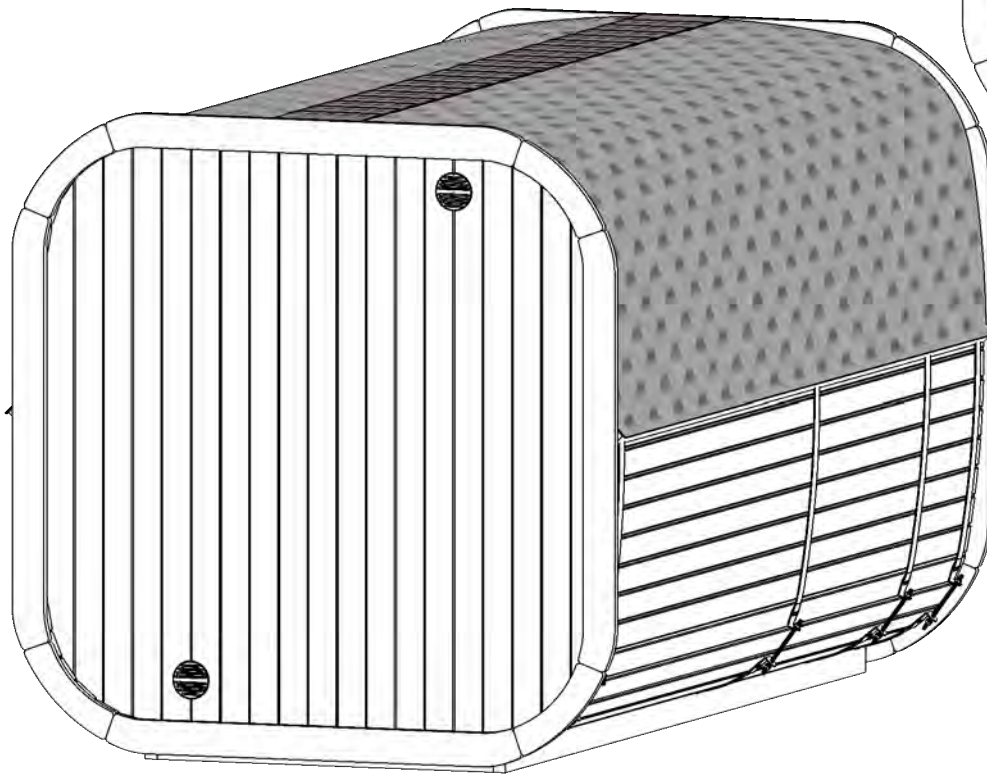


(TIC26/385PE-PT01)



















Sauna "Icon" 385,Ø226

**NB! Please read whole manual
before start.**

**All given measurements
are in millimeters!**















(TIC26/385PE-PT01)

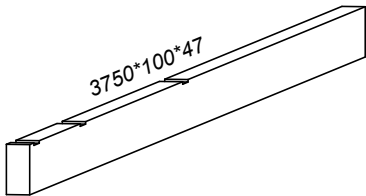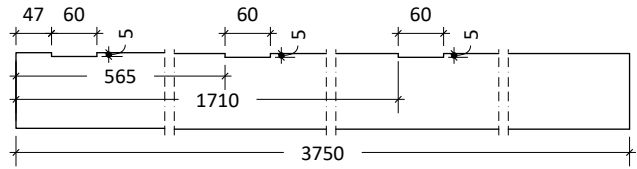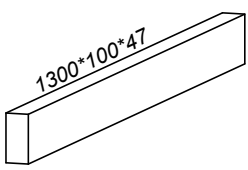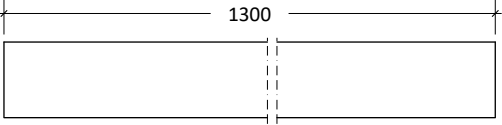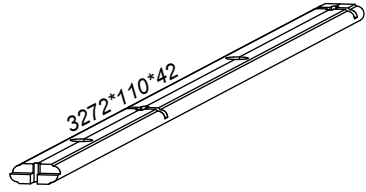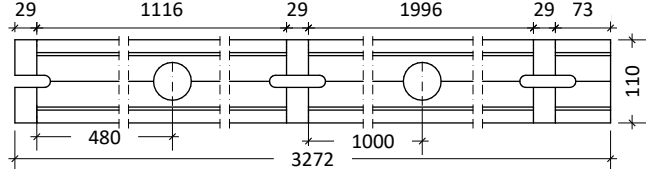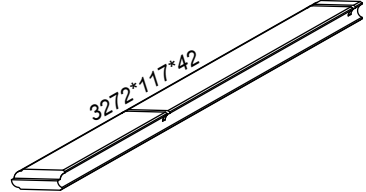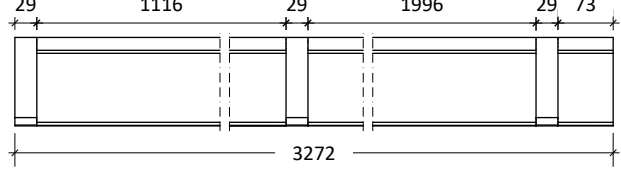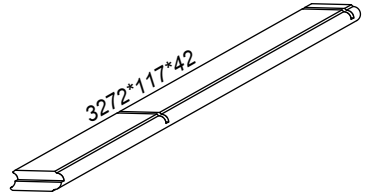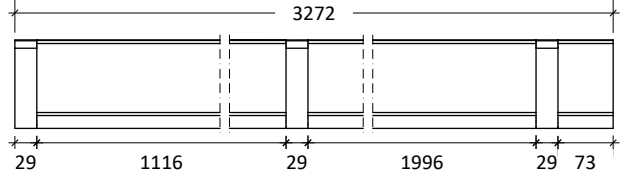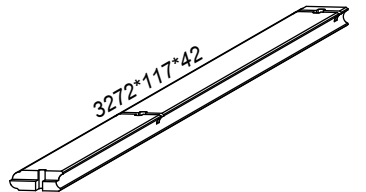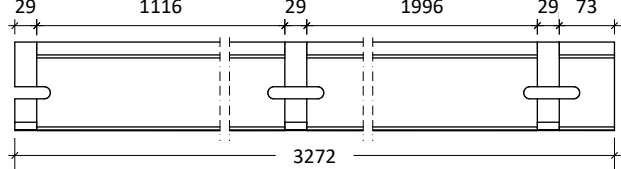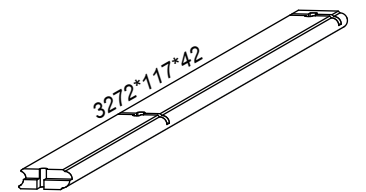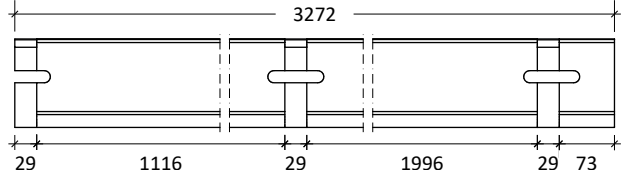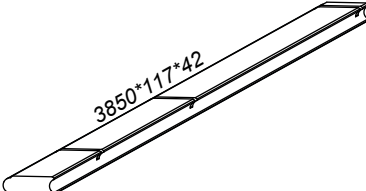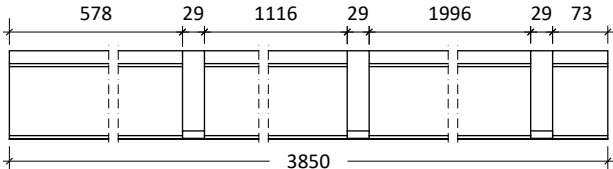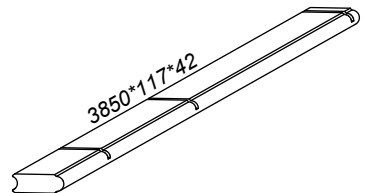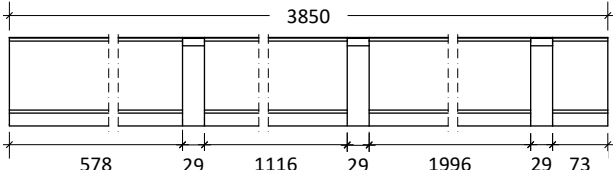DET 1	x2		
Article. K-SM100/3750XX			
DET 2	x9		
Article. K-SM100/1300			
DET 3	x1		
Article. T-STL117/3272XLM01			
DET 3b	x5		
Article. T-STL117/3272-01V			
DET 3a	x5		
Article. T-STL117/3272-01P			
DET 3b/H	x1		
Article. T-STL117/3272-02V			
DET 3a/H	x1		
Article. T-STL117/3272-02P			
DET 3d	x31		
Article. T-STL117/3850-01V			
DET 3c	x31		
Article. T-STL117/3850-01P			
















Sauna "Icon" 385,Ø226

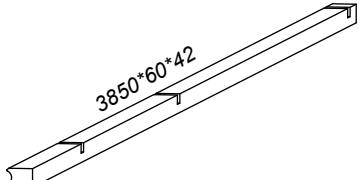
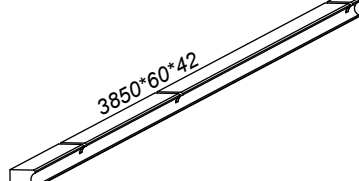
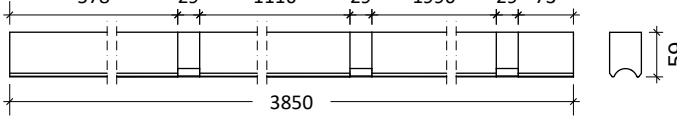



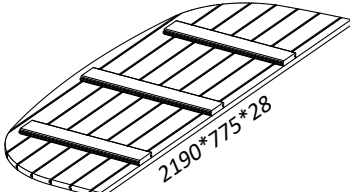
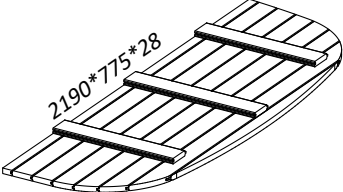
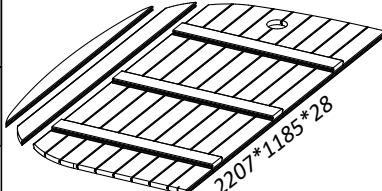
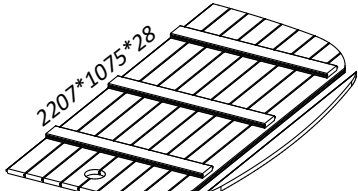
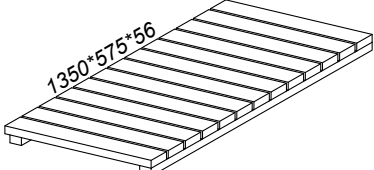
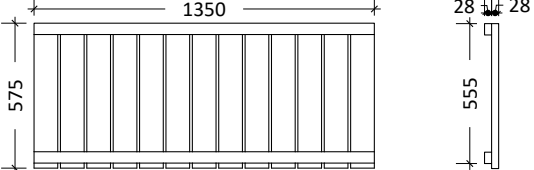
Details list 2/6

DET 6a DET 3 vastaspool Article. T-STL117/3850XL-01P	x1		
DET 6b DET 3 vastaspool Article. T-STL117/3850XL-01V	x1		
DET Ta Article. T-SL117/710UK4	x2		
DET Tb Article. T-TL94/710J	x2		
DET Sb Article. T-IC26-PES/28-02V	x2		
DET Sa Article. T-IC26-PES/28-02P	x2		
DET Y1 Article. T-IC26-PTS/28-V	x1		
DET Y2 Article. T-IC26-PTS/28-P	x1		
DET 4 Article. T-TEMOD-1350/575	x1		

Sauna "Icon" 385,Ø226

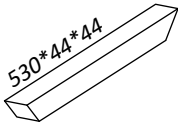
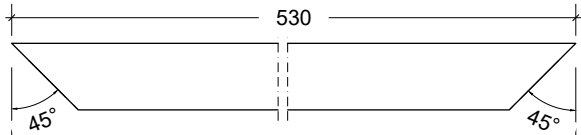
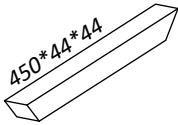
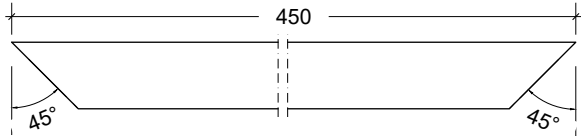
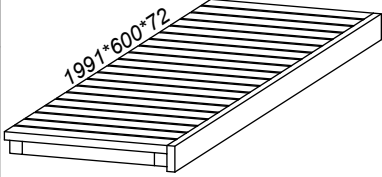
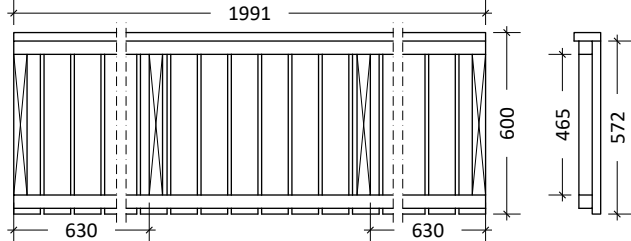
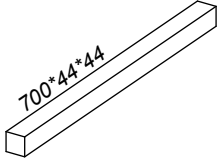
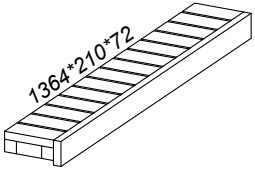


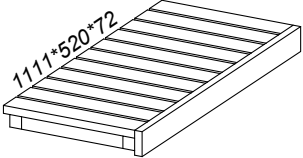
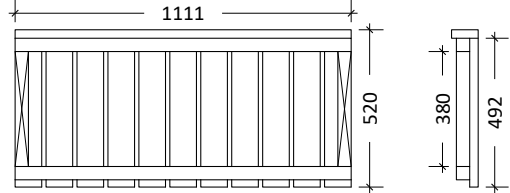
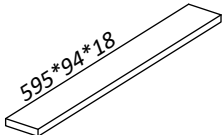
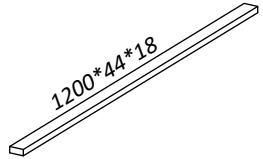
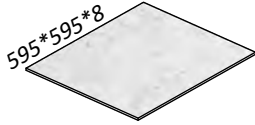
Details list 3/6







DET 10a Article. K-HP44/530XP-XP	x4		
DET 10b Article. K-HP44/450XP-XP	x4		
DET 10c Article. K-HP44/170	x6		
DET 10 Article. TL-LAMOD-1991-01	x2		
DET 11a Article. K-HP44/700	x2		
DET 11 Article. TL-LAMOD-1364/210	x2		
DET 11b Article. K-HP44/250XP-XP	x2		
DET 12 Article. TL-LAMOD-1111-01	x2		
DET 20 Article. T-HL94/595	x5		
DET L Article. K-HL44/1200	x2		
DET 20a Article. MIN600/595-HAL	x1		

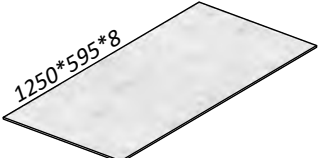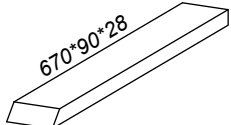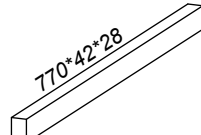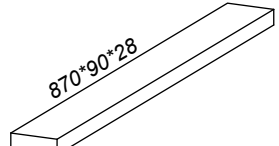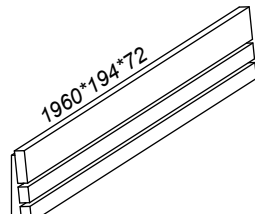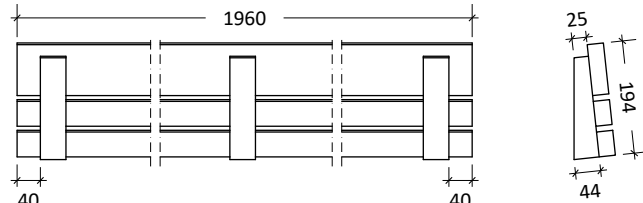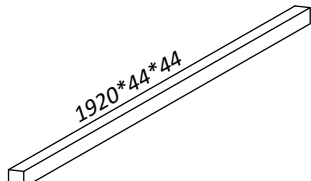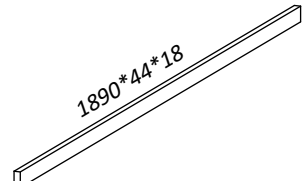DET 20b	x1		
Article.			
MIN1200/595-HAL			
DET 15a	x2		
Article.			
TL-LAV90/670XP			
DET 15b	x2		
Article.			
TL-LAV42/90			
DET 15c	x2		
Article.			
TL-LAV42/770			
DET 15d	x1		
Article.			
TL-LAV90/870			
DET 26	x2		
Article.			
TL-STMOD-1960-01			
DET 21	x2		
Article.			
U-7/192			
DET 21c	x4		
Article.			
K-HP44/1920			
DET 21d	x4		
Article.			
K-HP44/780			
DET 21a	x4		
Article.			
K-HL44/1890			
DET 21b	x4		
Article.			
K-HL44/750			

Sauna "Icon" 385,Ø226

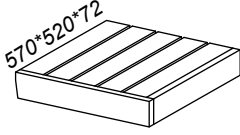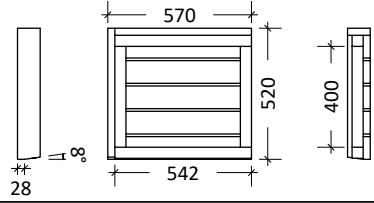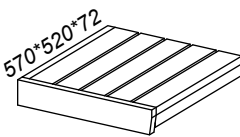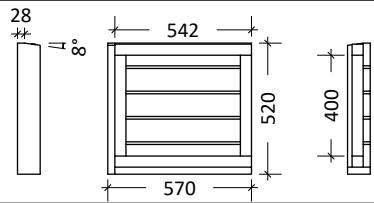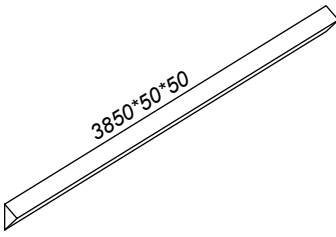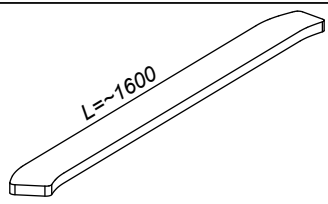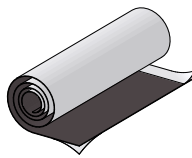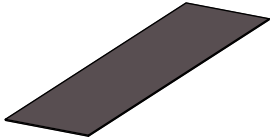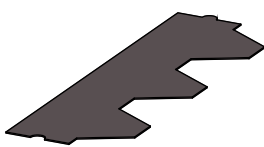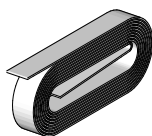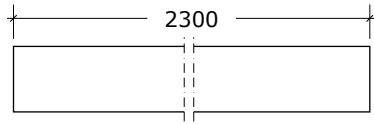
Details list 5/6

DET 24b Article. T-TEMOD-570-01V	x1 		
DET 24a Article. T-TEMOD-570-01P	x1 		
DET 24c Article. K-HP44/400	x2 		
DET 22 Article. T-STL-3850-XX	x2 		
DET 25a Article. MU-OL-IC-26-1	x8 		
DET 25b Article. MU-OL-IC-26-2	x8 		
Underlay felt Article. KAT-AL	20 m. 		
DET N Article. KAT-HAR	x15 		
DET O Article. KAT-SIN	x122 		
DET B Article. MU-VITKL-RV	x16 		
DET A1 Article. MU-VIT10/2300	x4 		

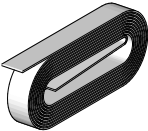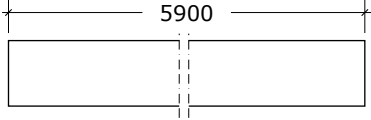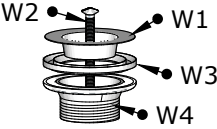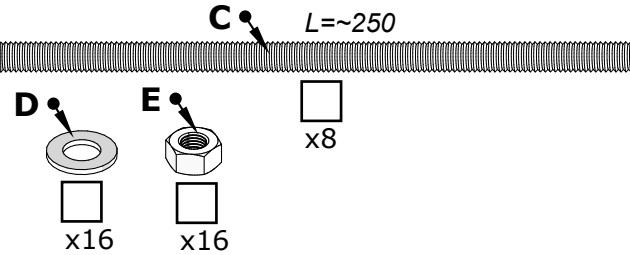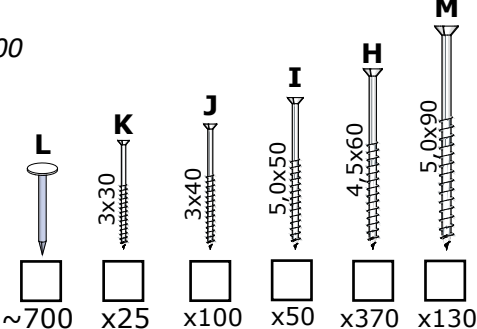
DET A2 Article. MU-VIT10/5900	x4 		
DET V Article. KI-VIN-25/40/40-ZN	x8 		
DET W Article. MU-TRAPP	x2 kmpl		
DET G Article. MU-VENT-100-PU	x1 		
DET F Article. MU-VENT-100-ZN	x3 		
Article. KI-KERL-12-RV8 		Article. KI-ICO-220-400 	

Sauna "Icon" 385,Ø226

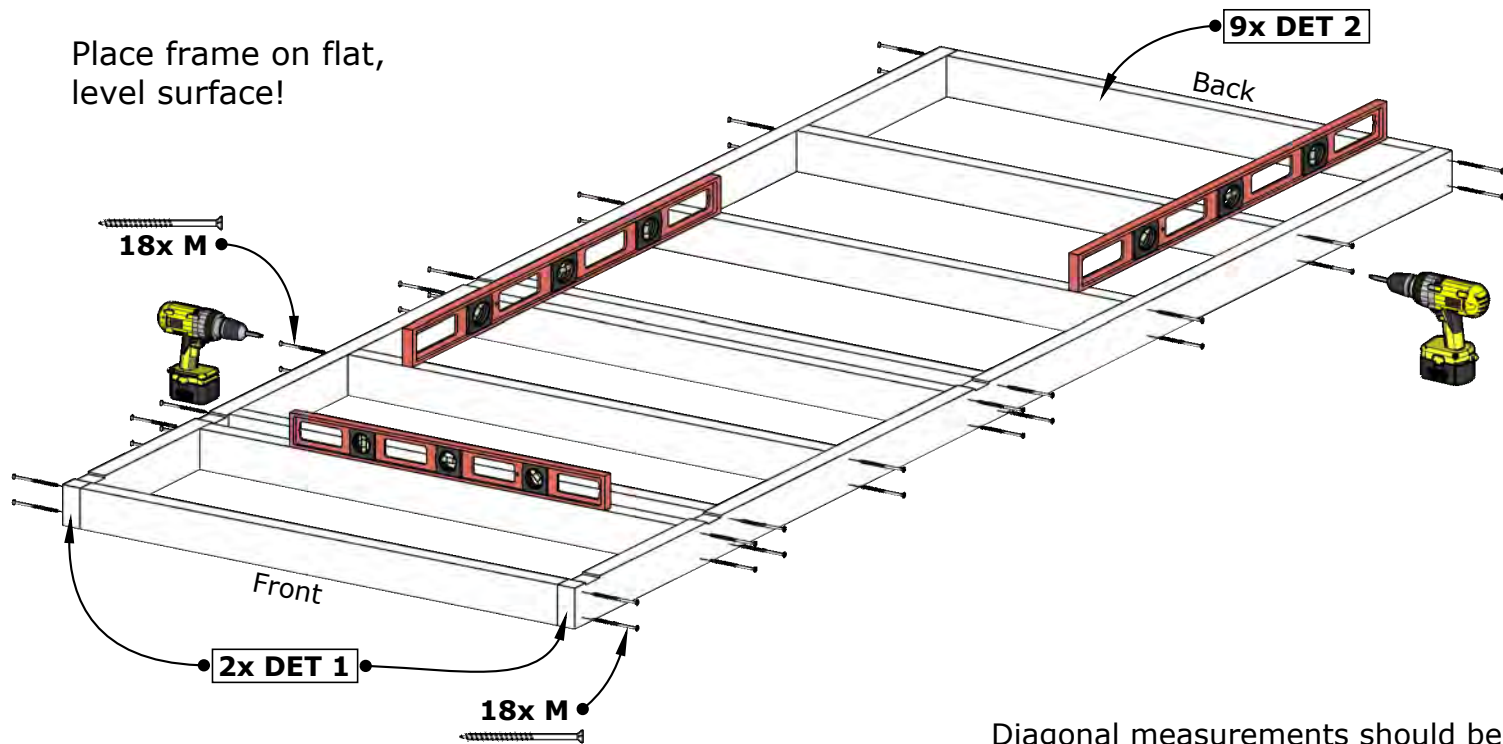
Place frame on flat,
level surface!





Diagonal measurements should be equal!

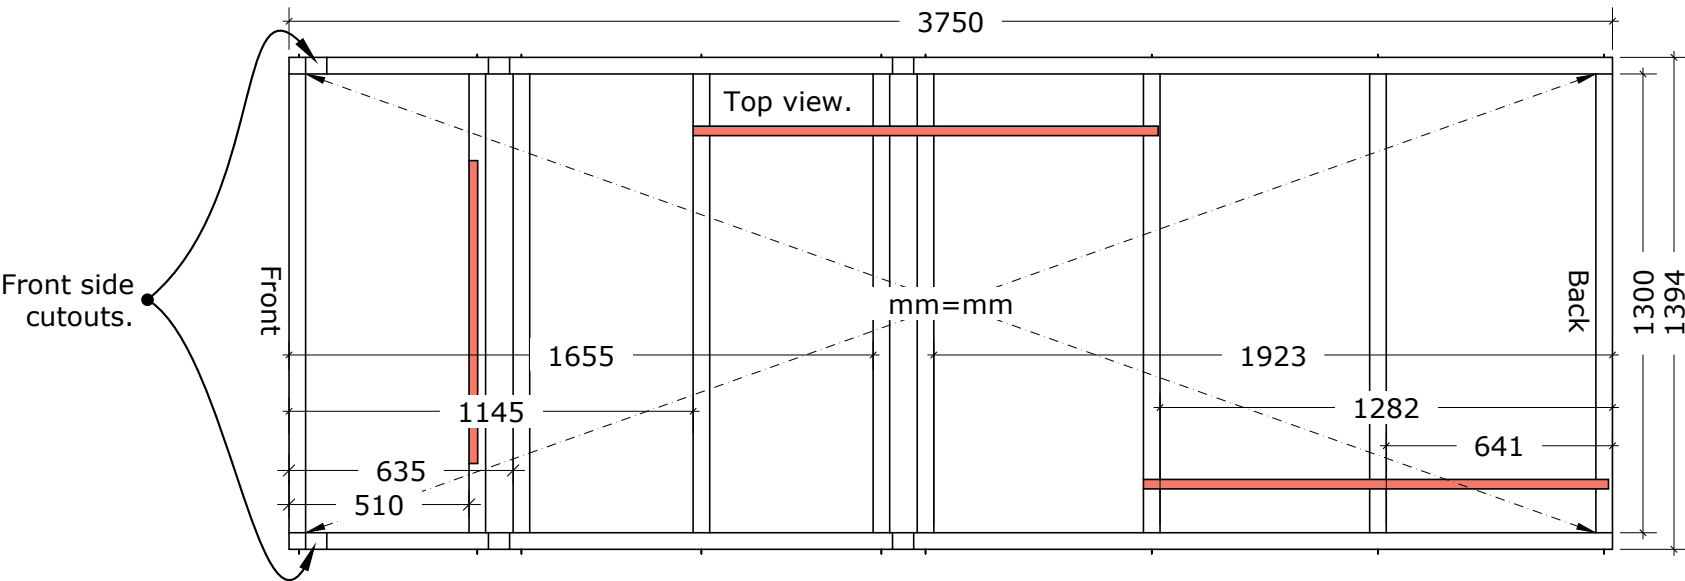

Sauna "Icon" 385,Ø226

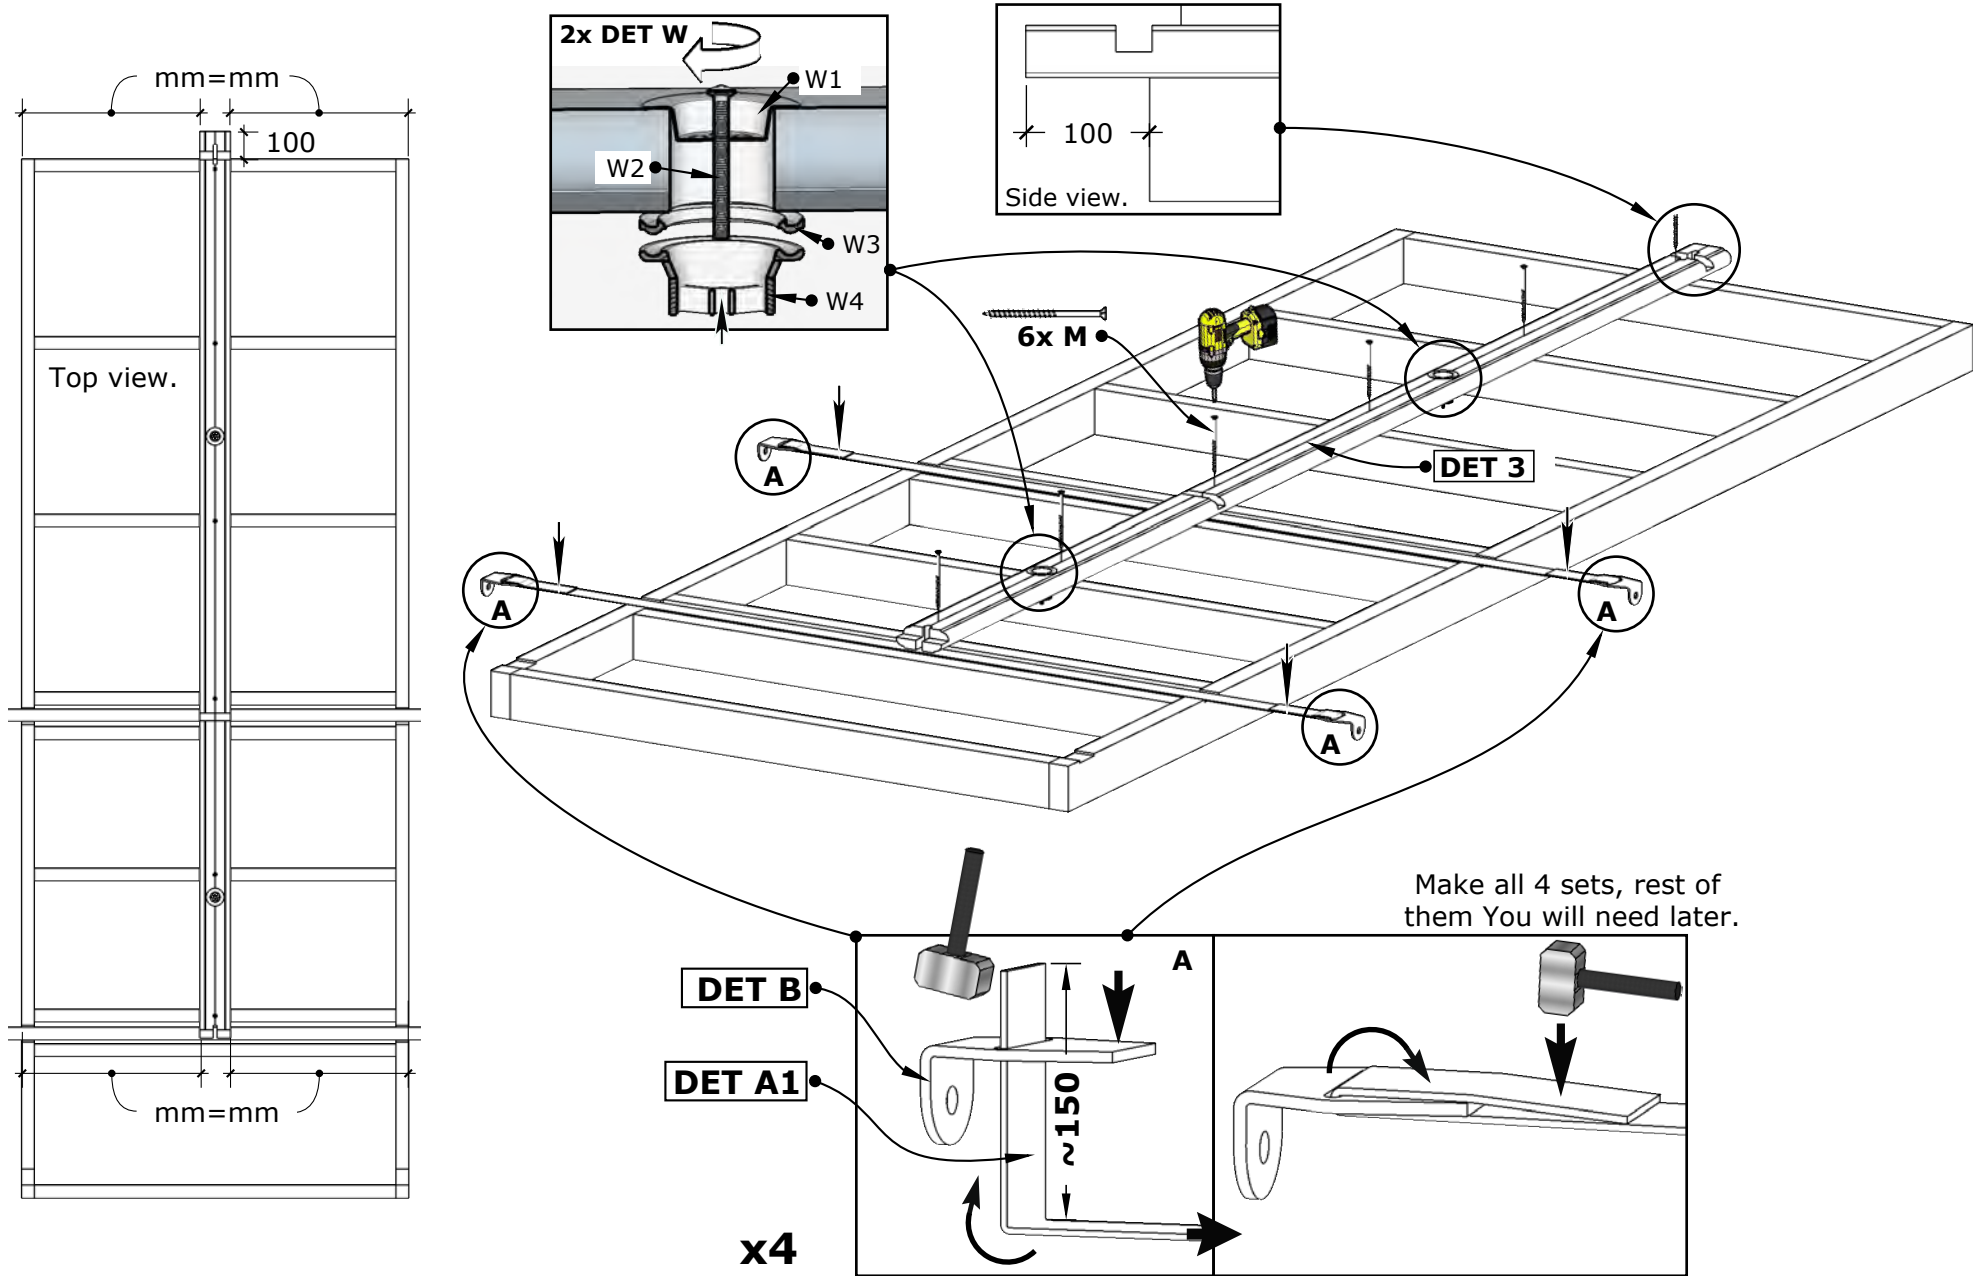


Sauna "Icon" 385,Ø226

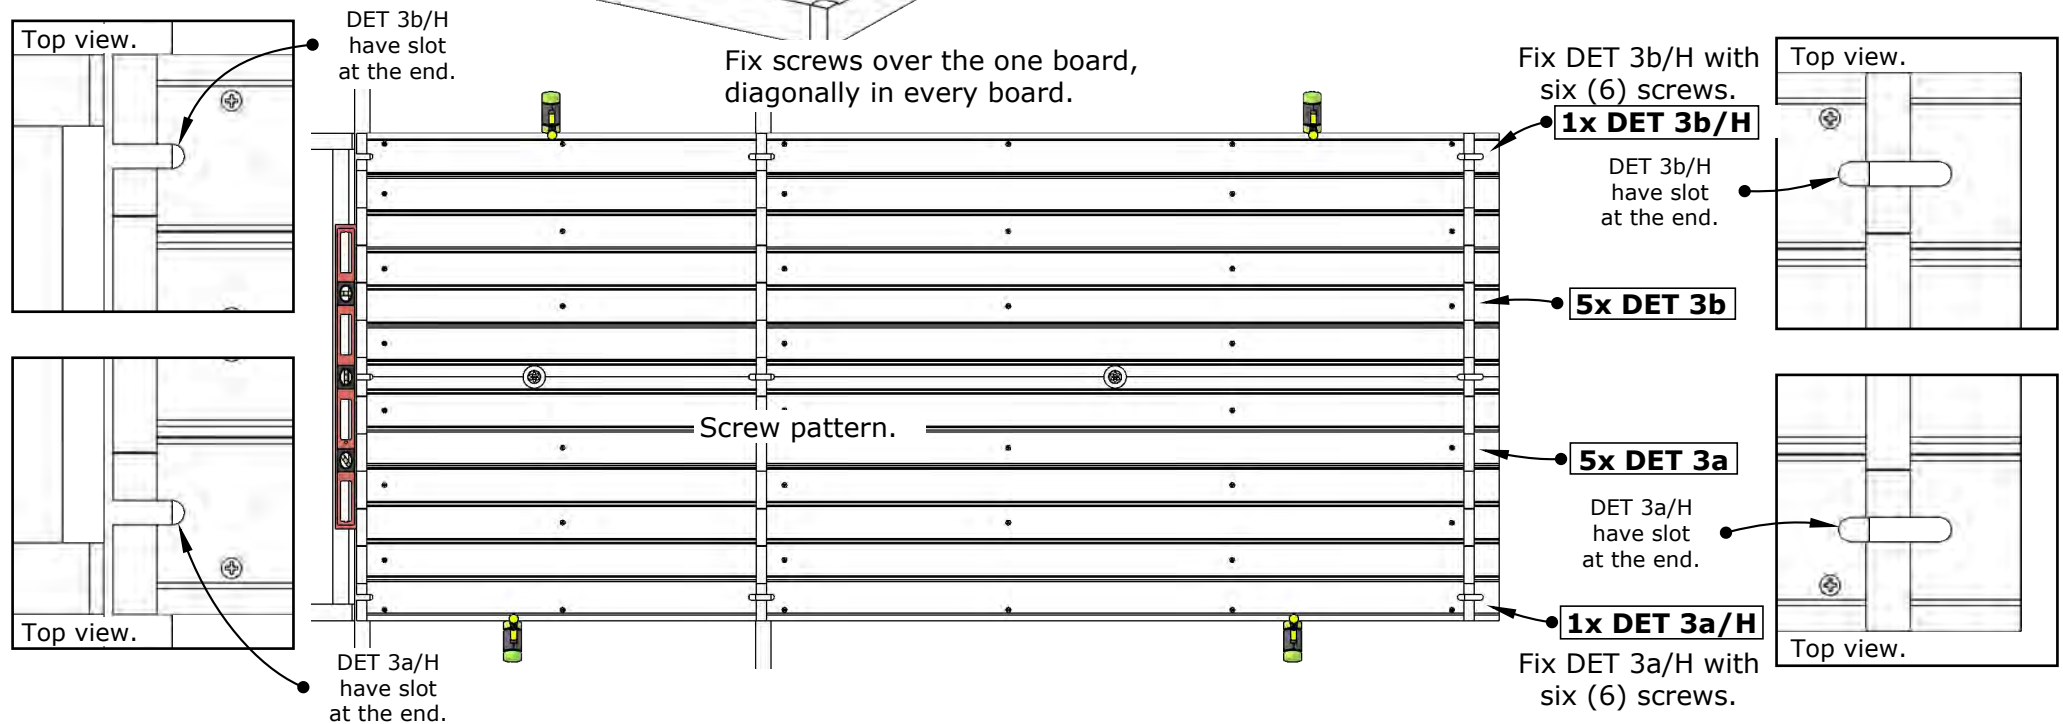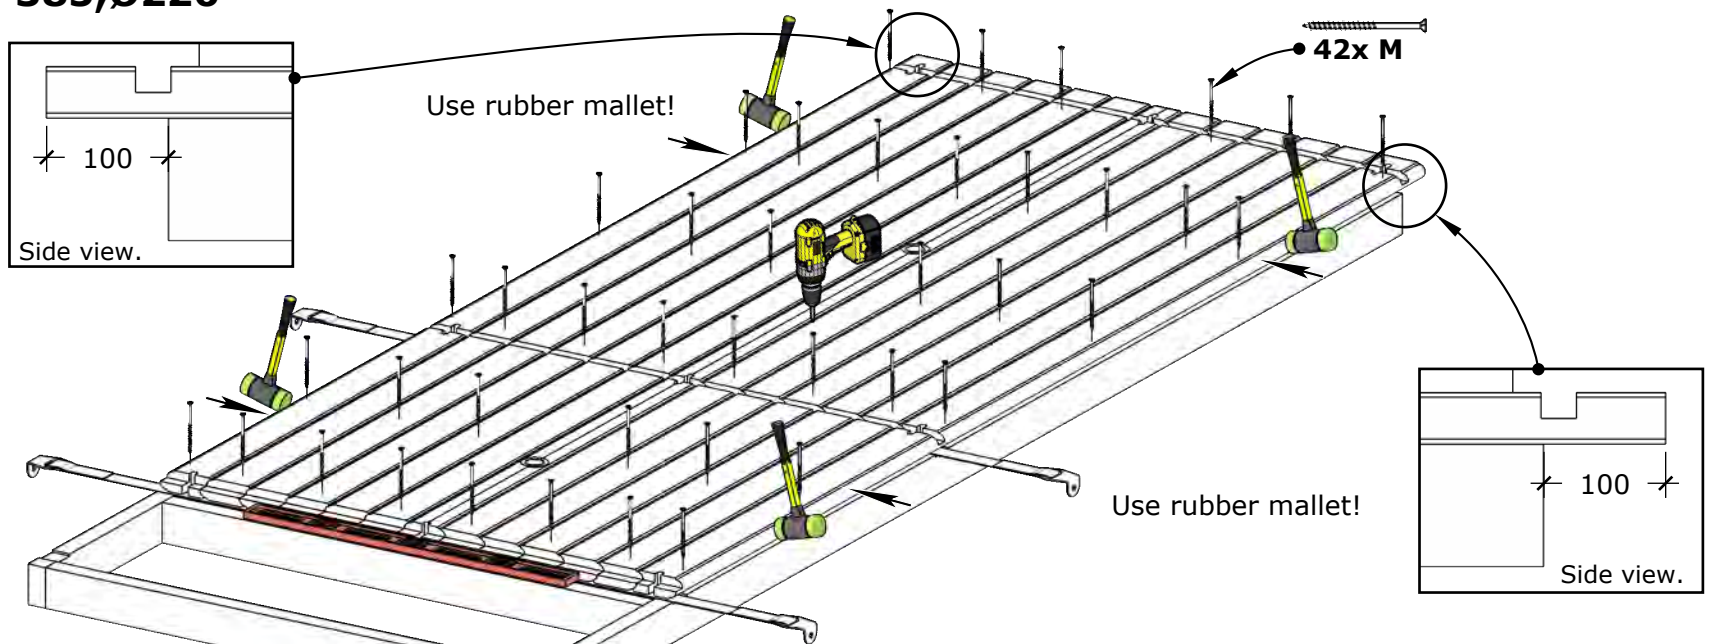


Sauna "Icon" 385,Ø226

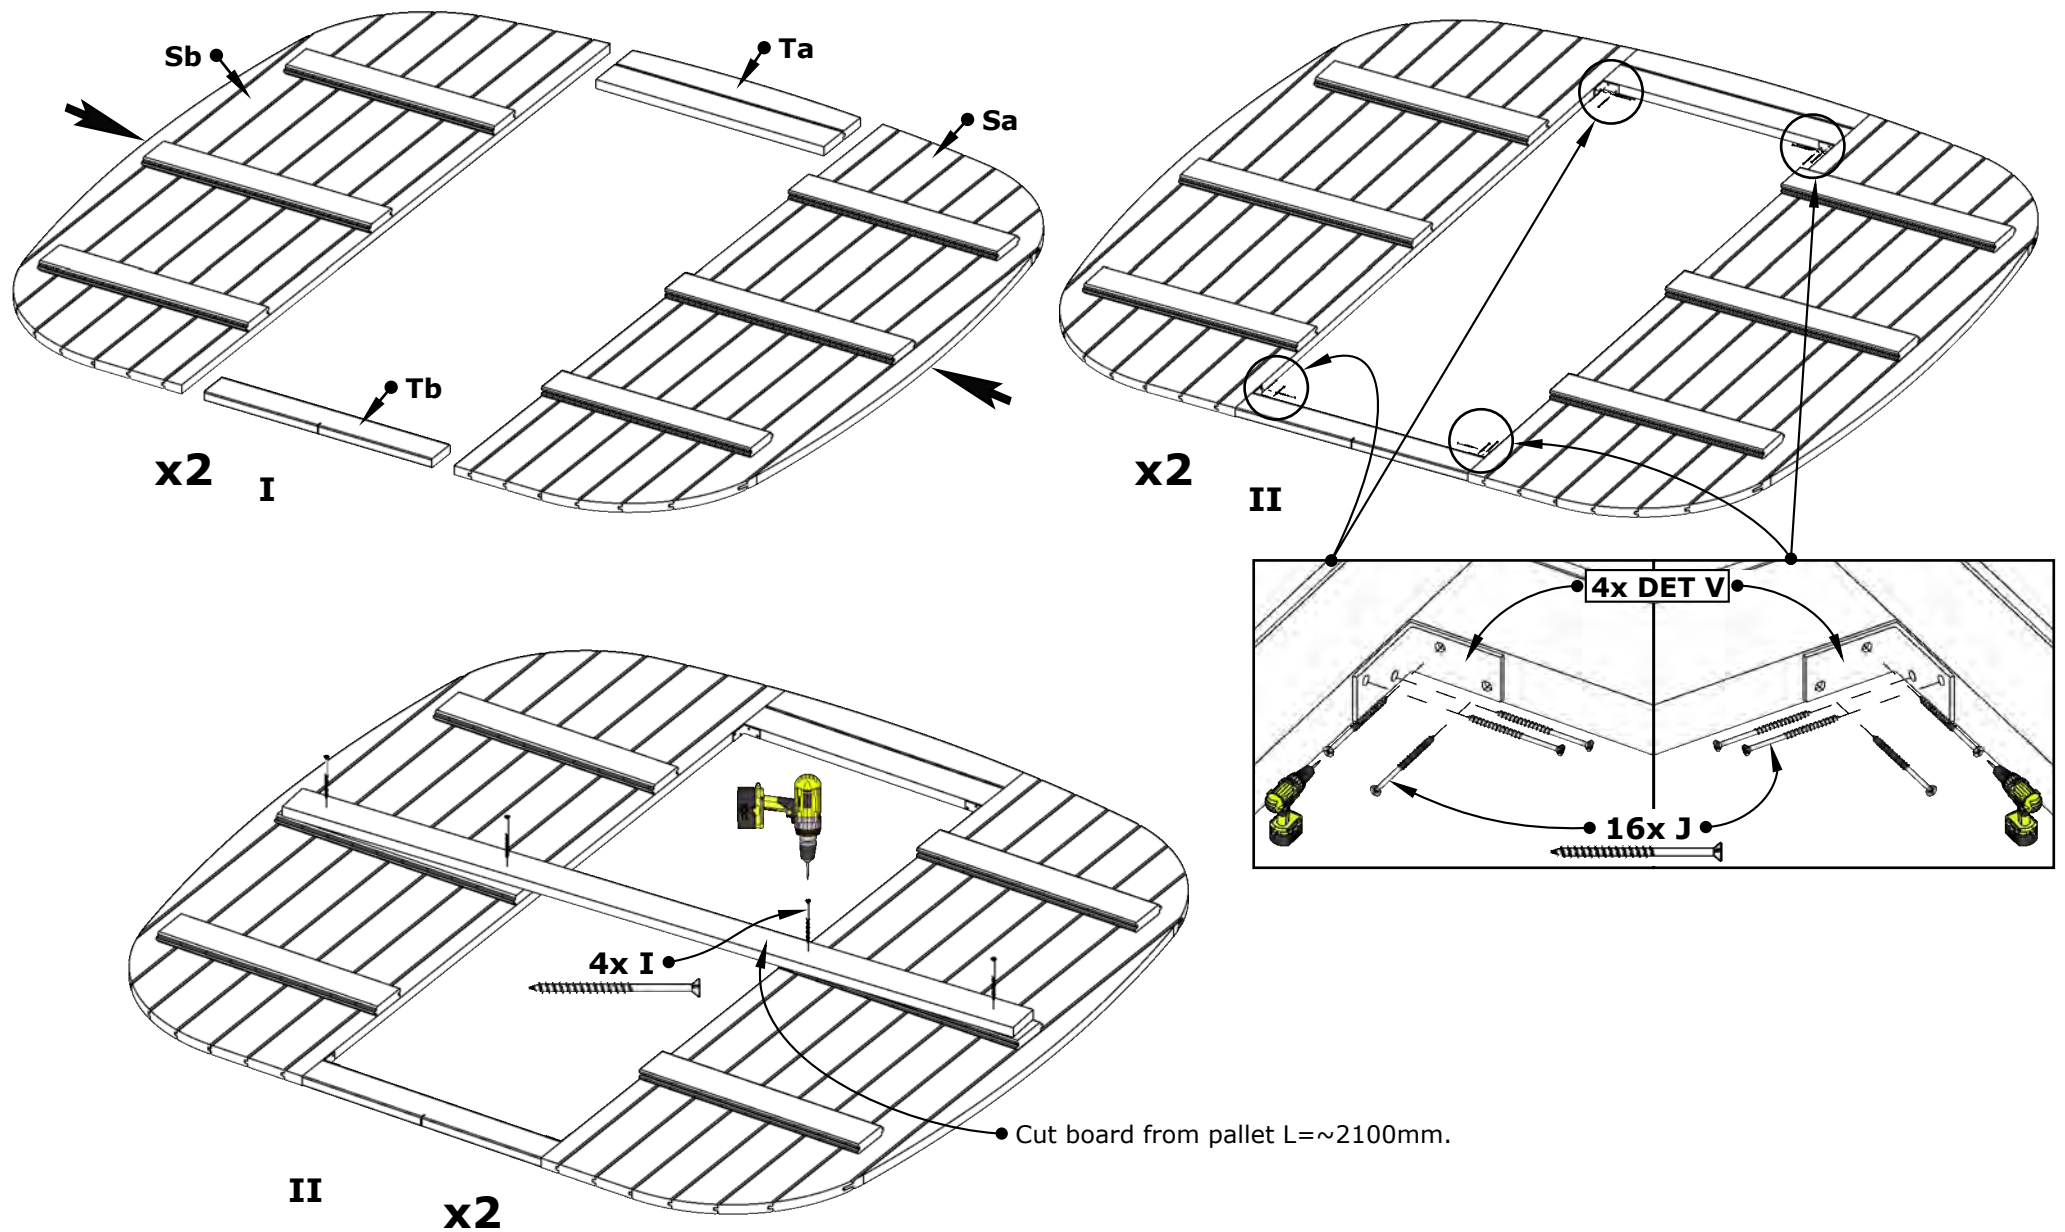Wooden front and middle wall assembly




Sauna "Icon" 385,Ø226

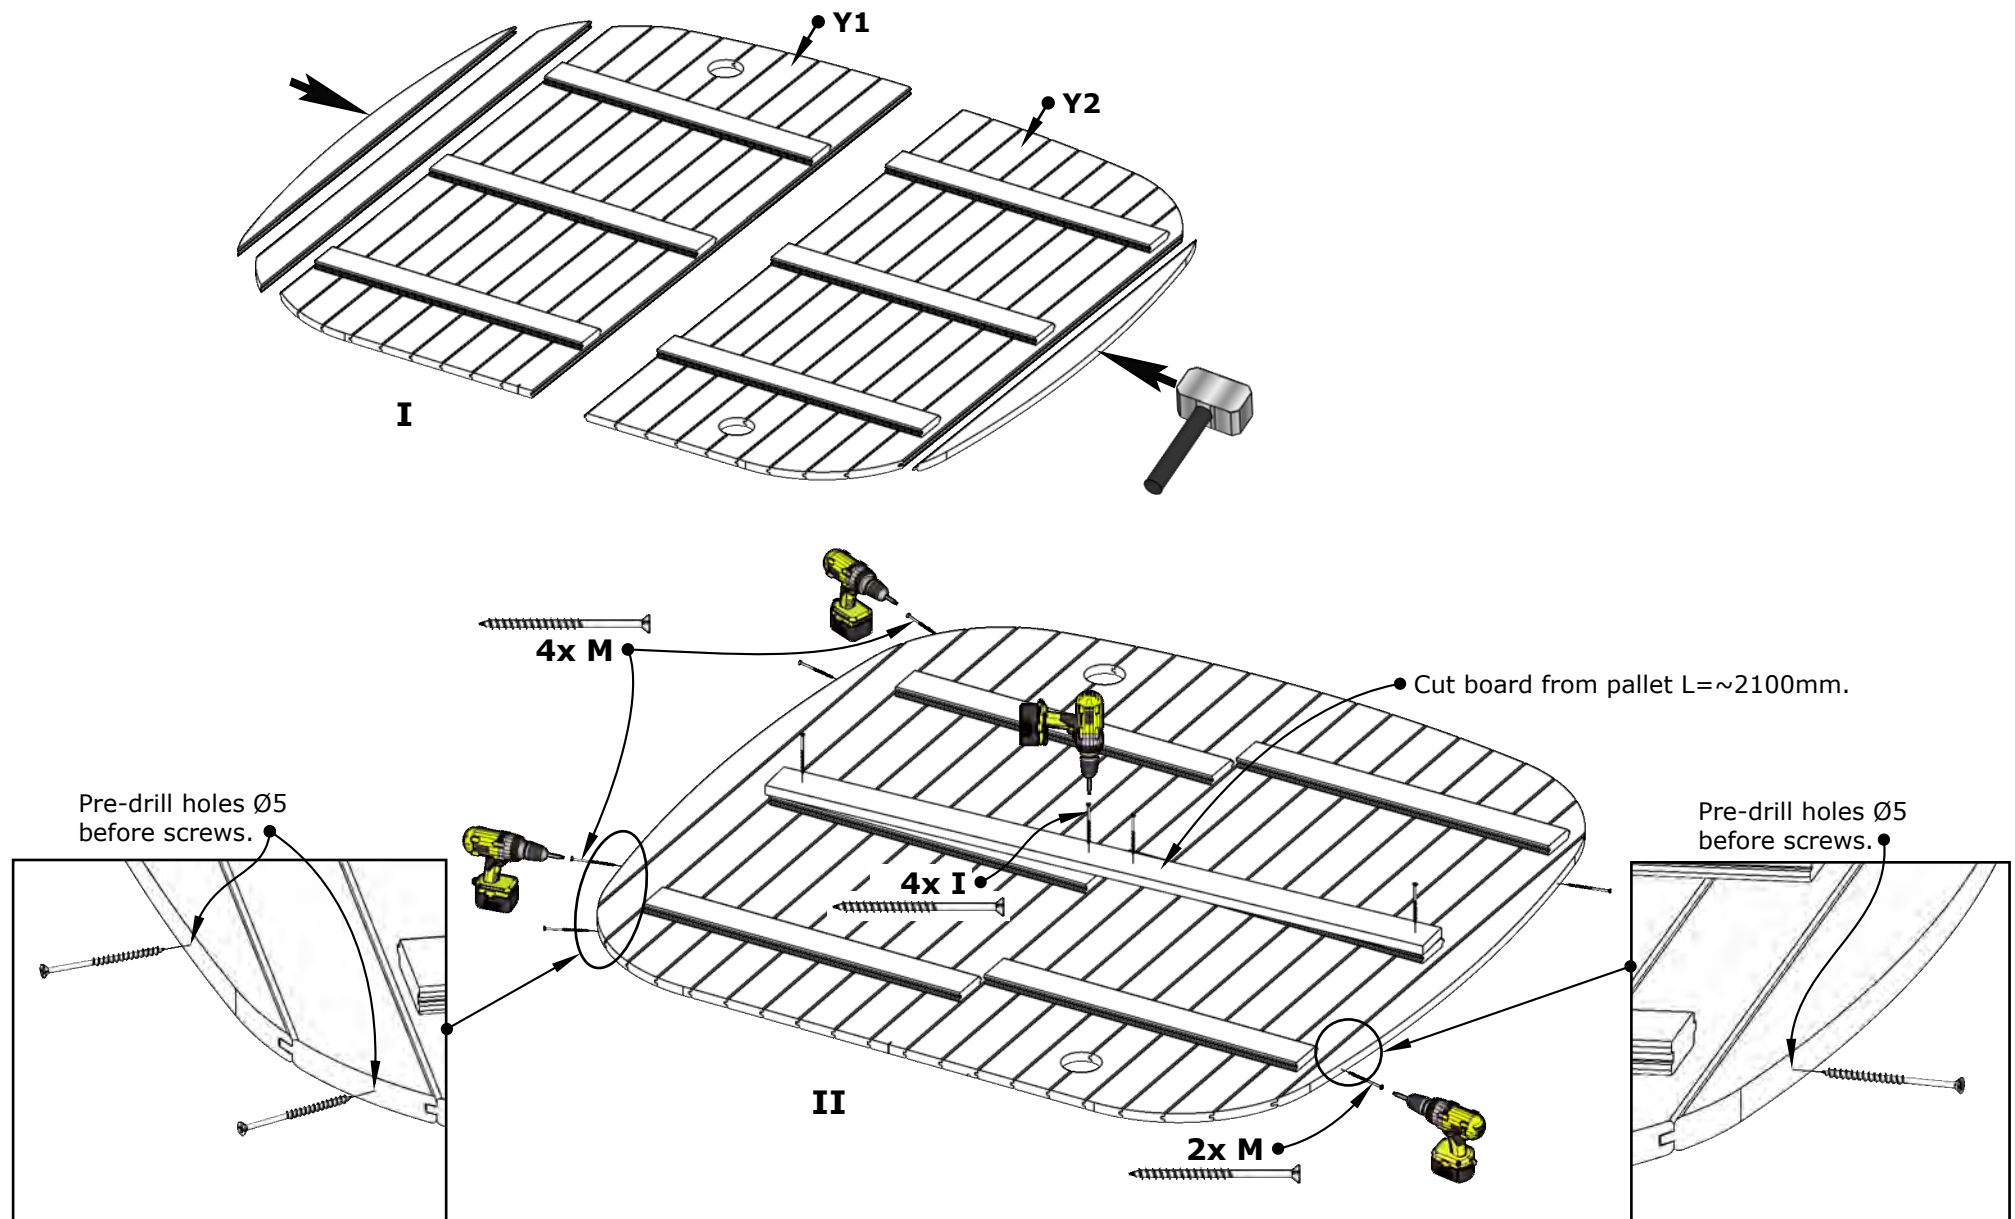Wooden back wall assembly



Sauna "Icon" 385,Ø226

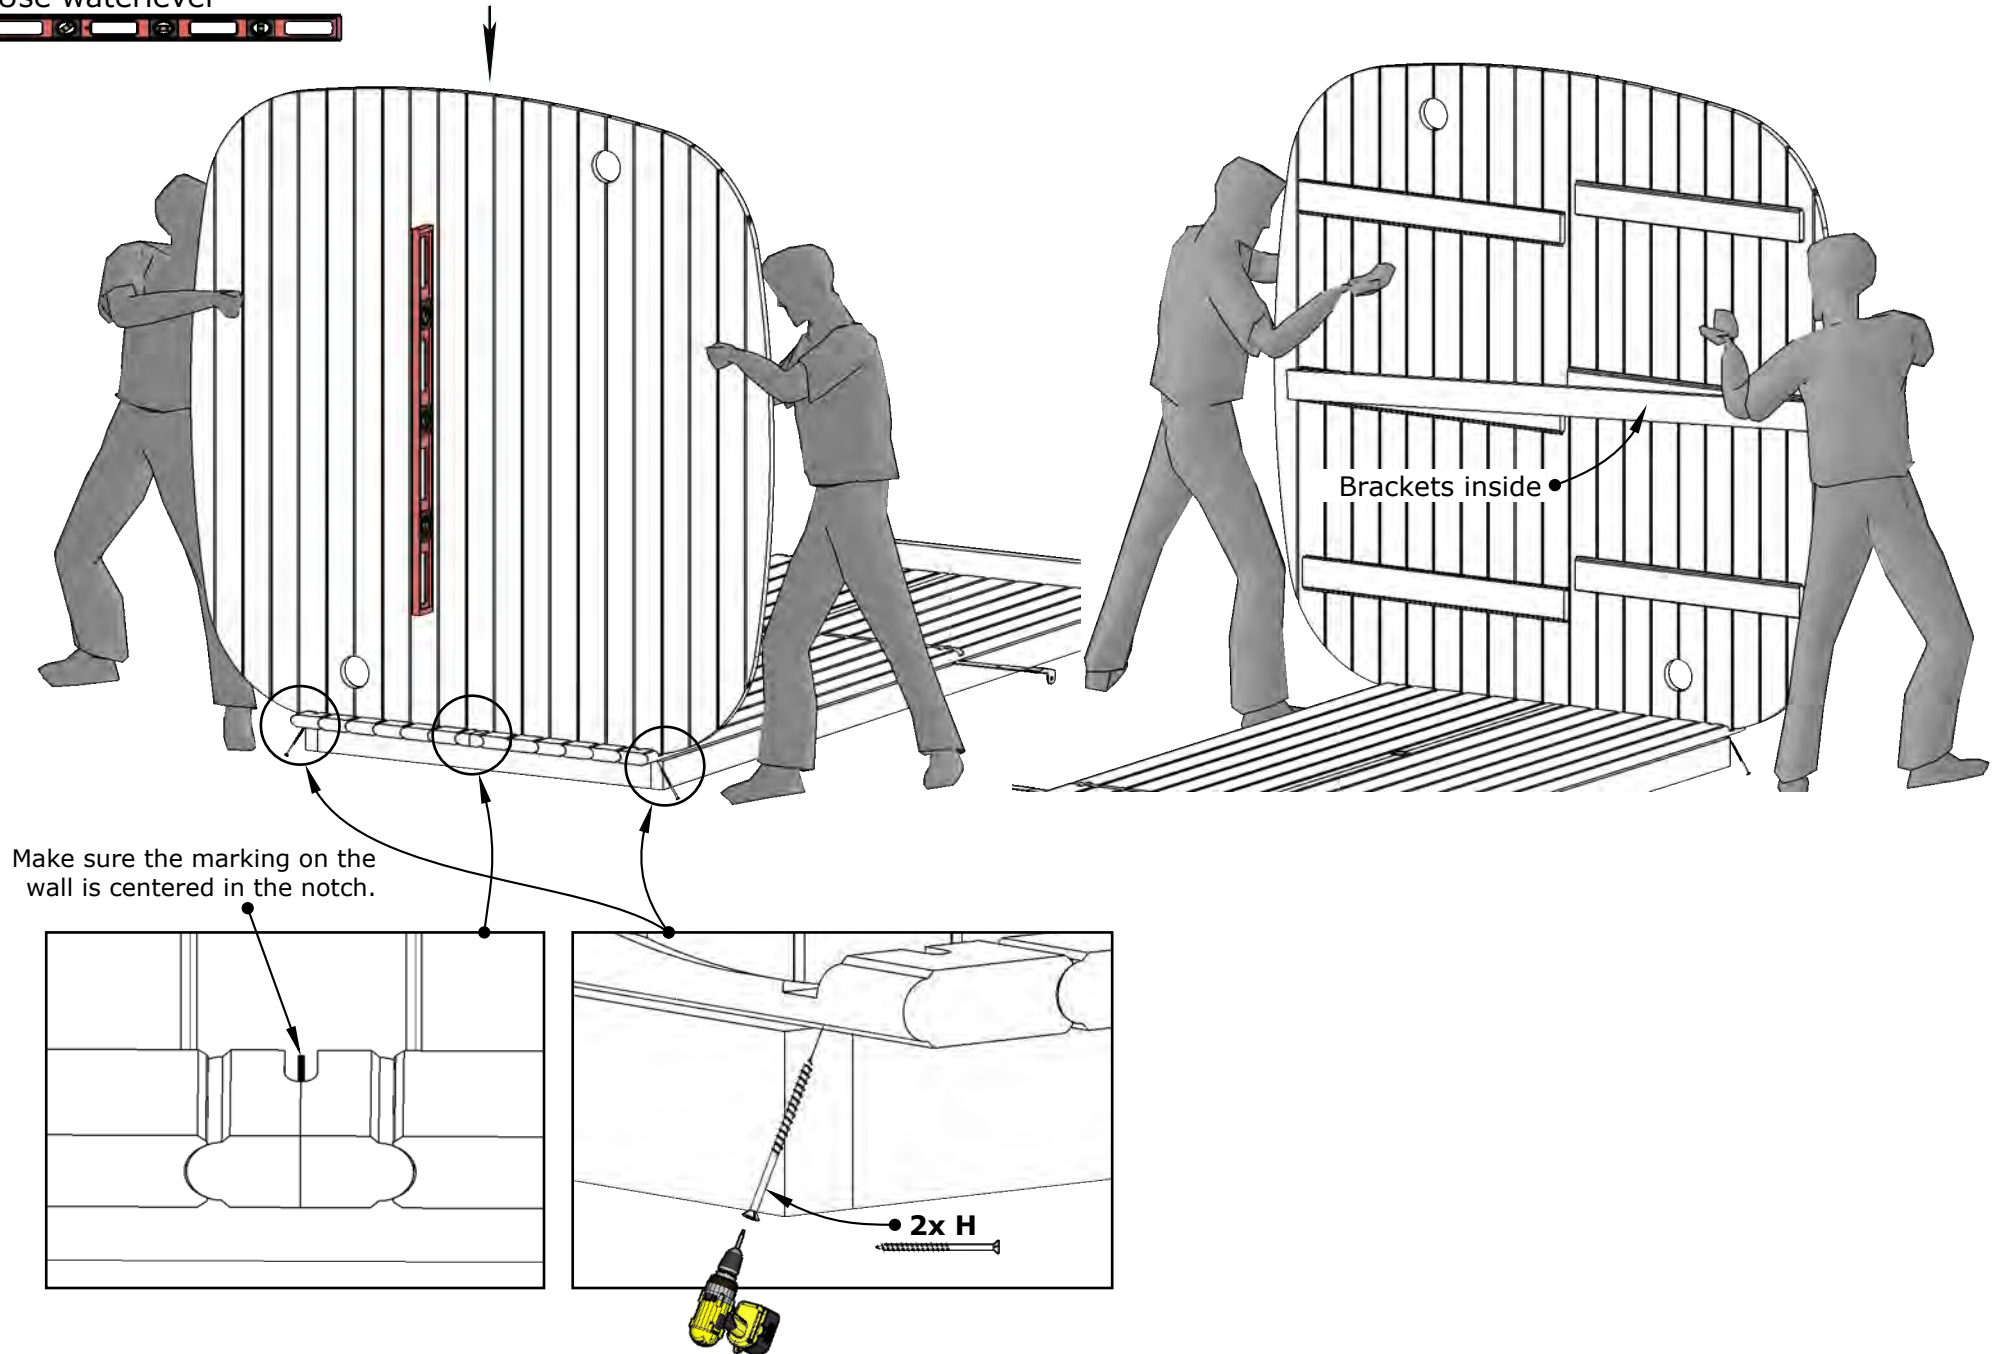Use waterlevel




6.

(TIC26/385PE-PT01)

Sauna "Icon" 385,Ø226




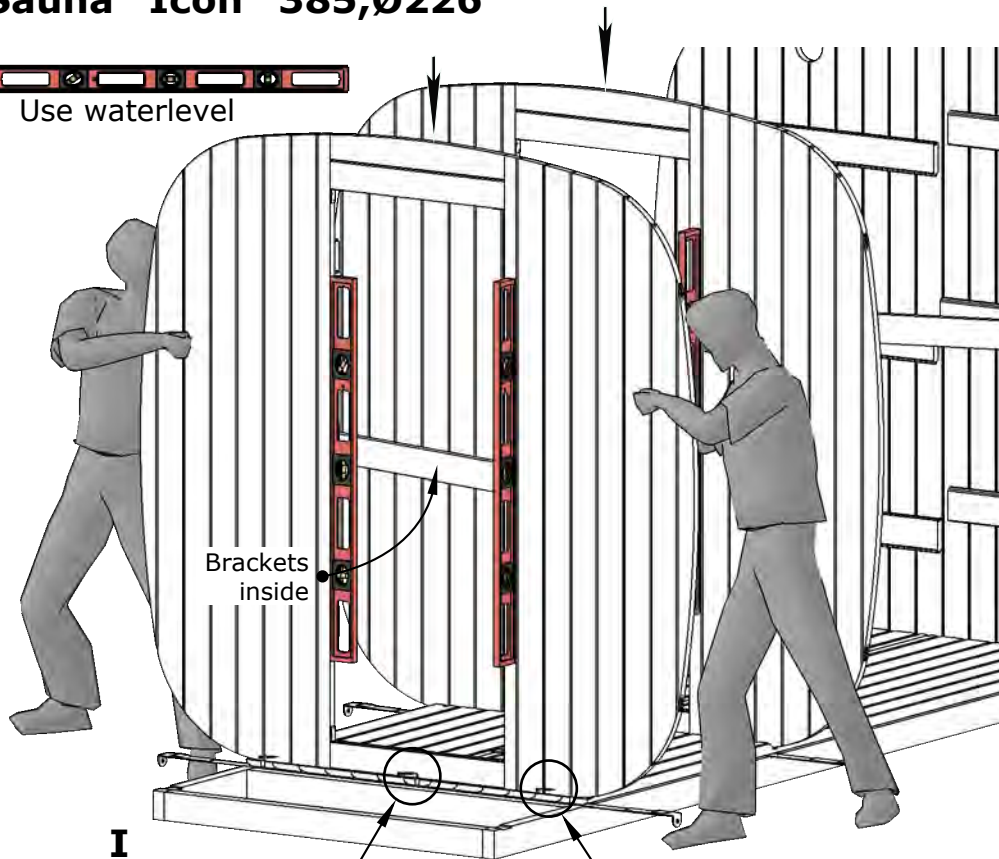Use waterlevel





I

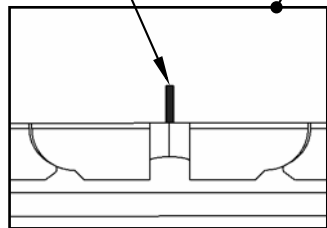
Make sure the marking on the wall is centered in the notch.



3x H •

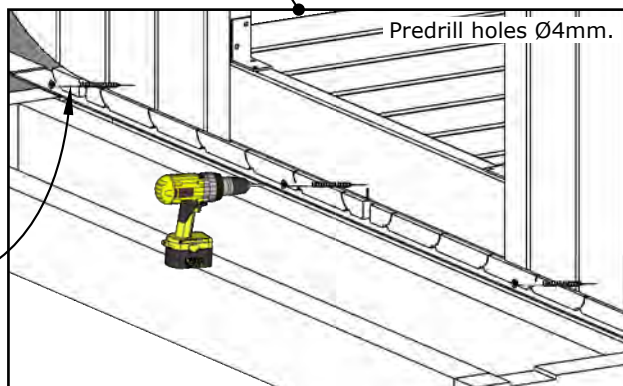

Predrill holes Ø4mm.

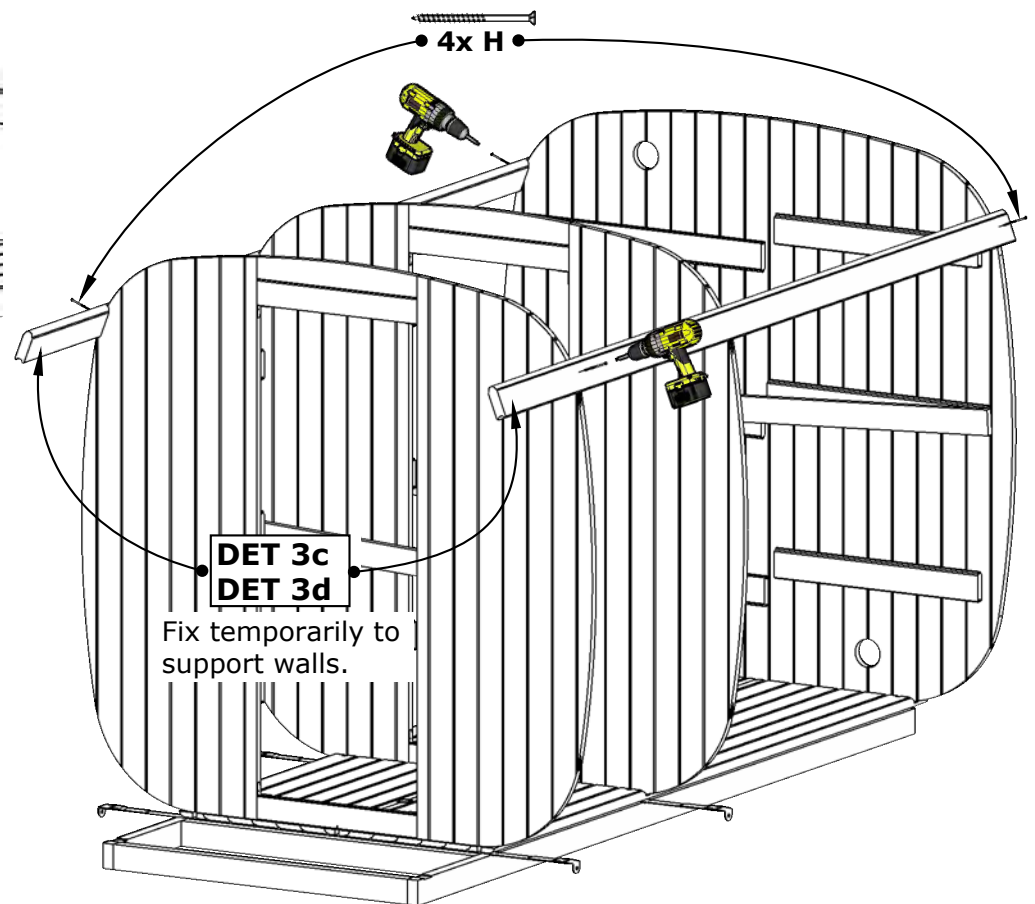

• 4x H •

DET 3c
DET 3d

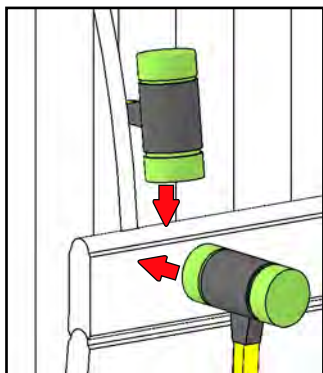
Fix temporarily to support walls.

II


Sauna "Icon" 385,Ø226

Remove DET 3c/d from their temporary positions and use during the next step.

Use rubber mallet!






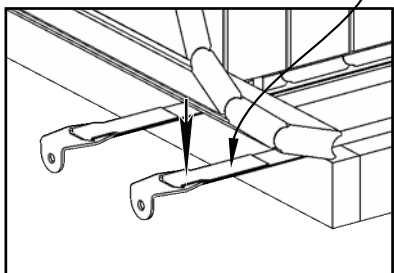Place DET A1 before you start installing wallstaves.




Prepare the details as described on Page 2.

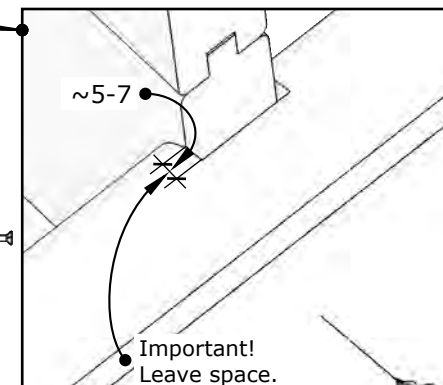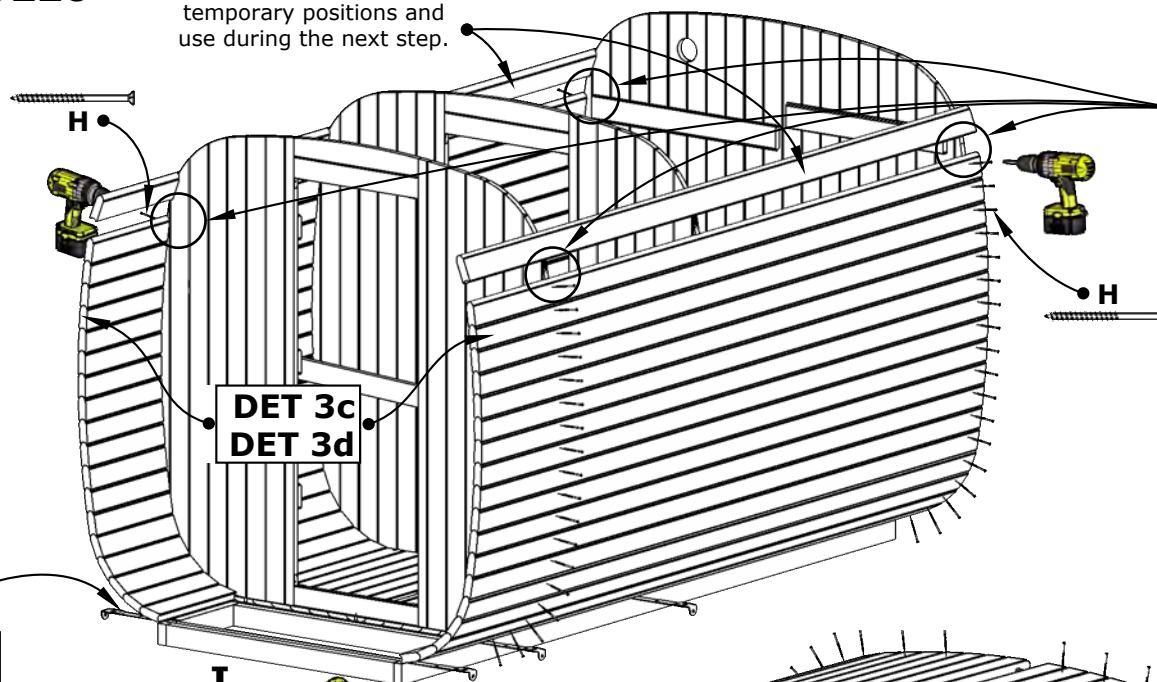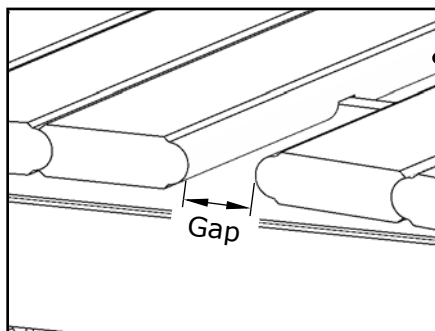
See the next page.



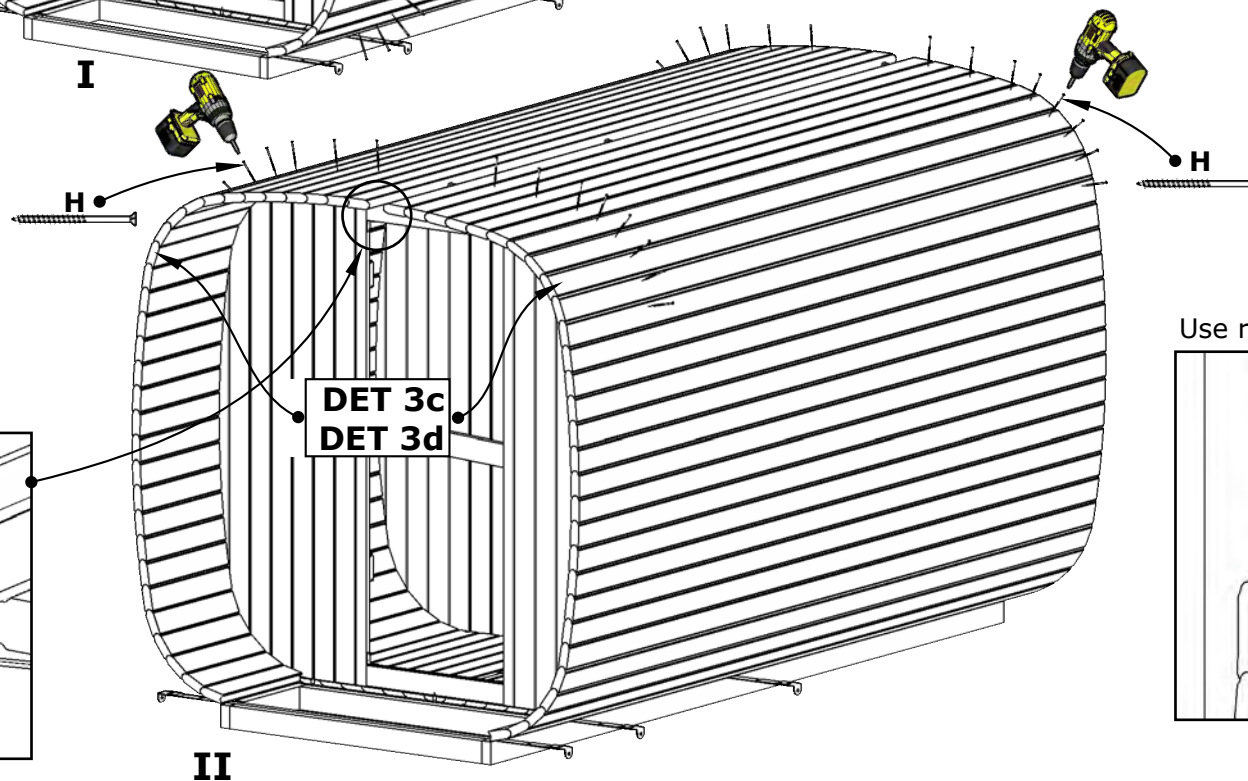
IMPORTANT! Be sure to leave a 5-7 mm. gap when tightening screws to leave room for adjustment when the outer bands (A2) are installed.




Use rubber mallet!

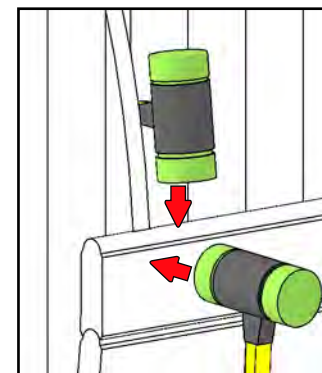

Sauna "Icon" 385,0226


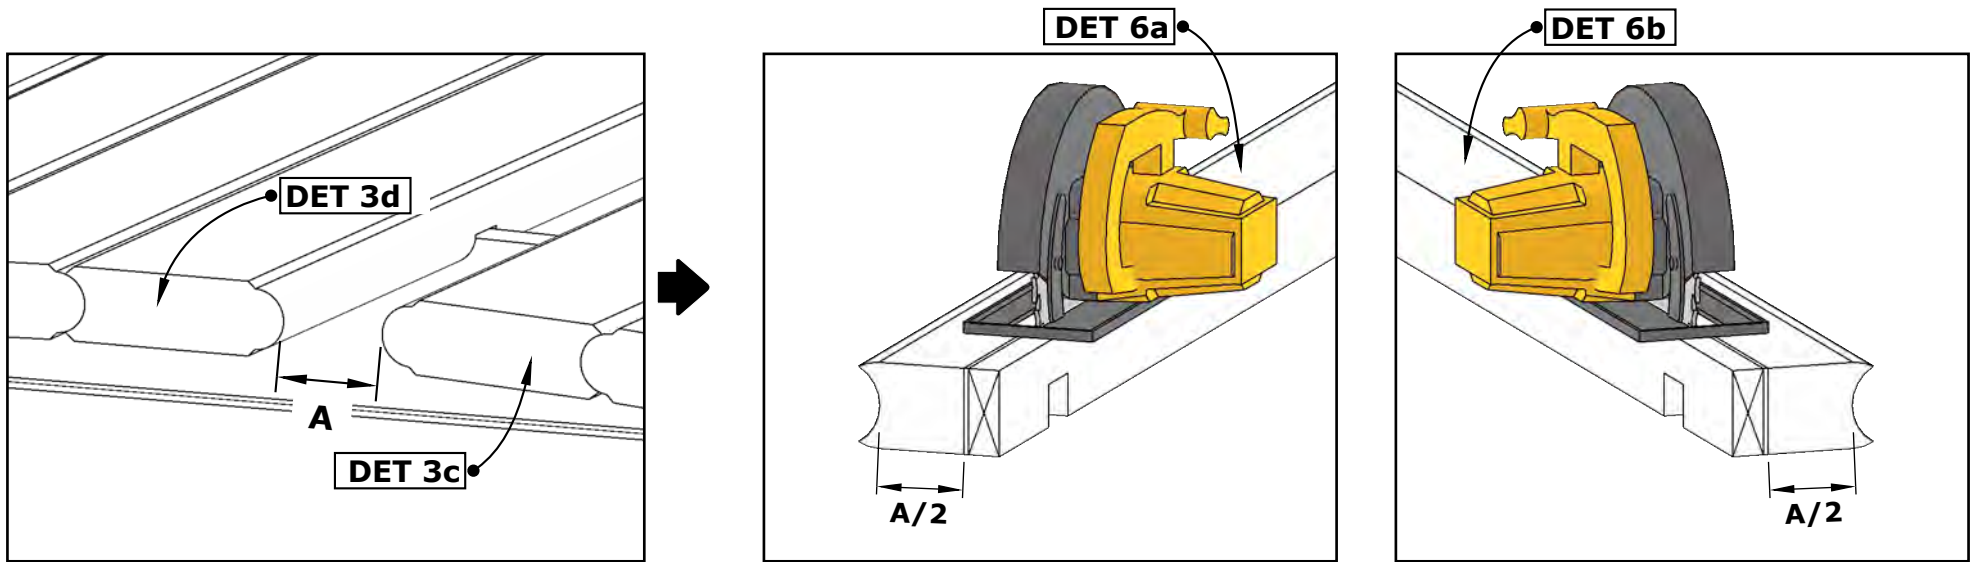


I



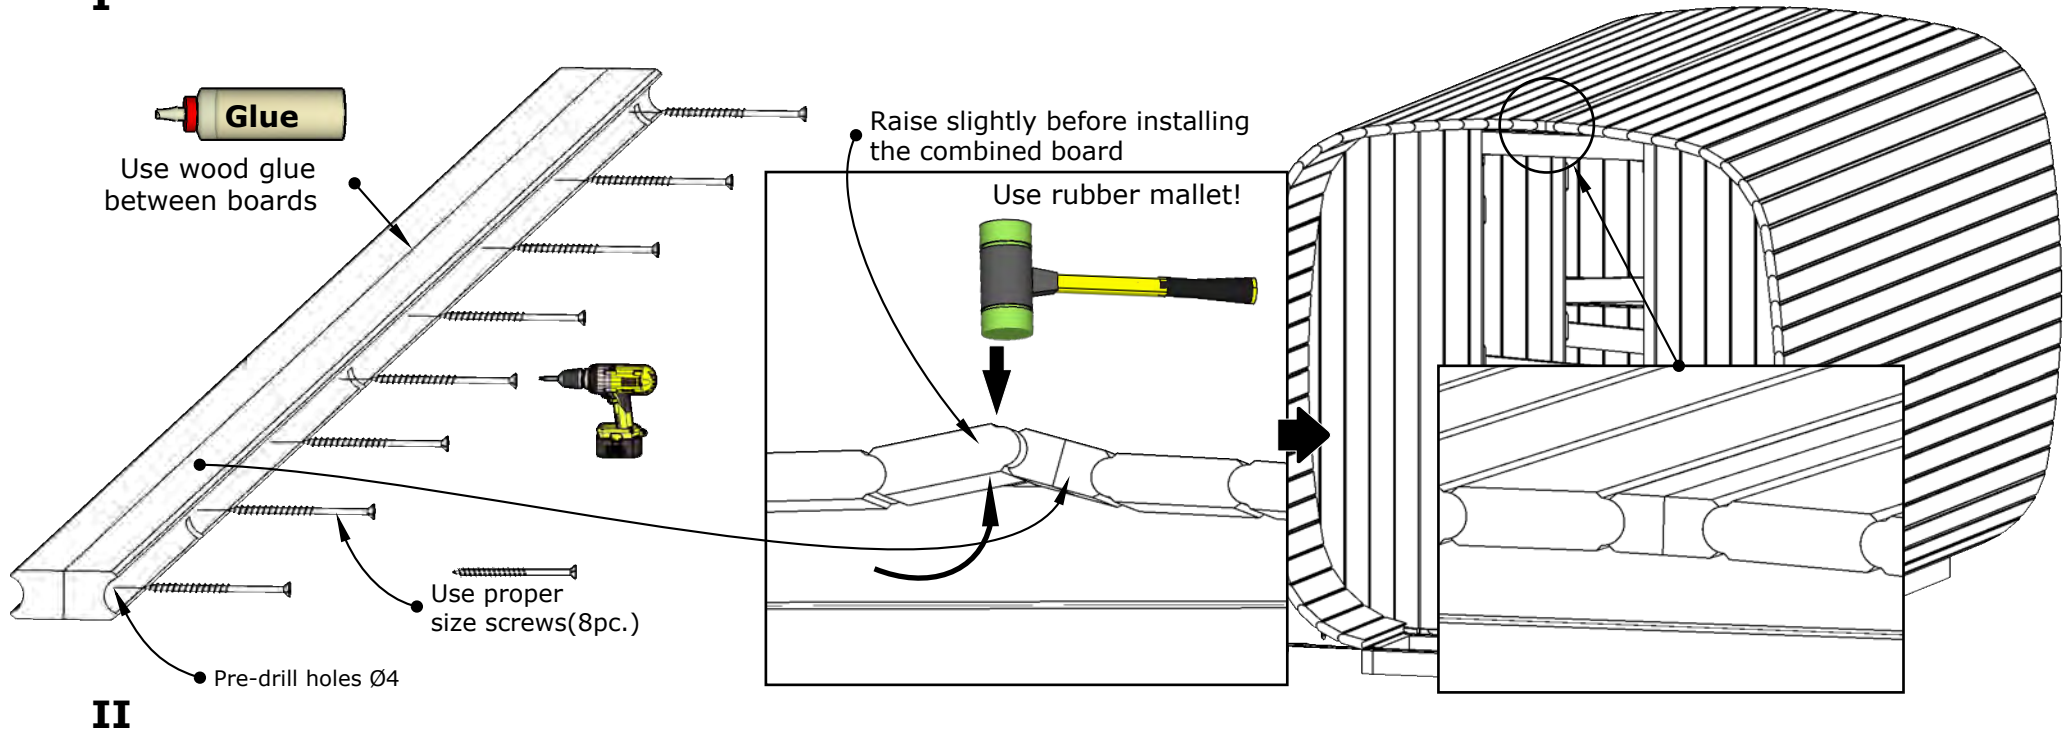


II

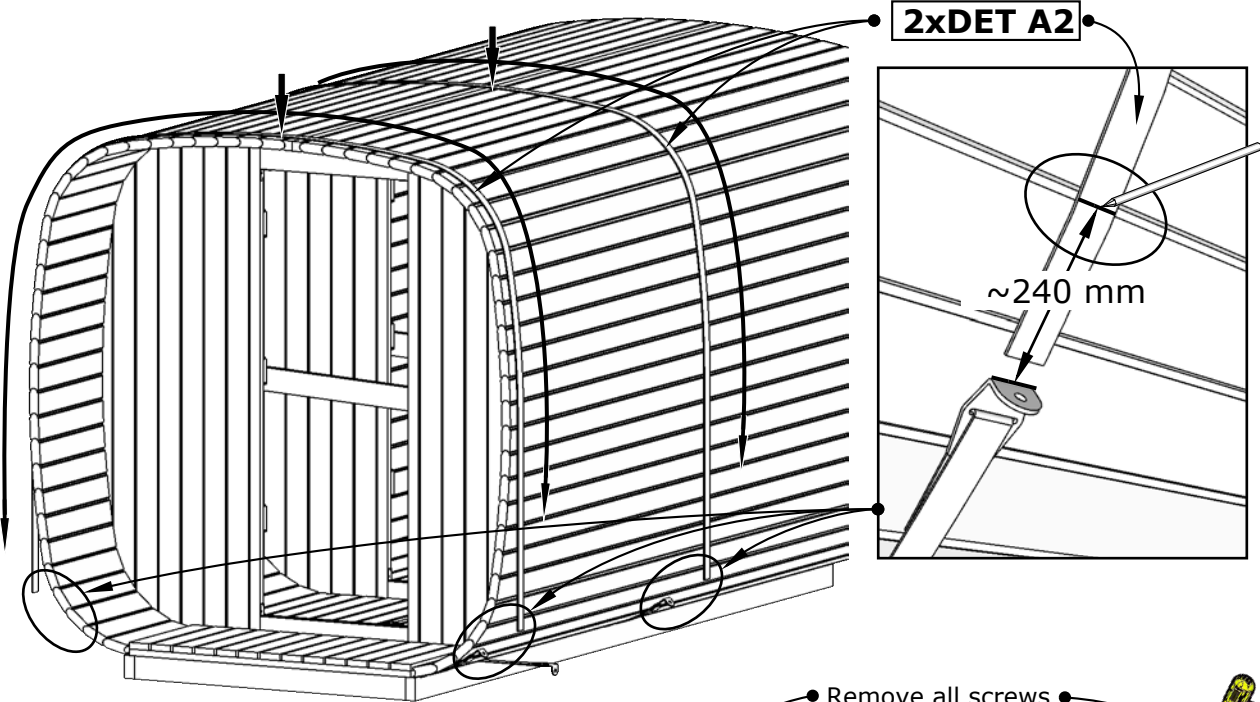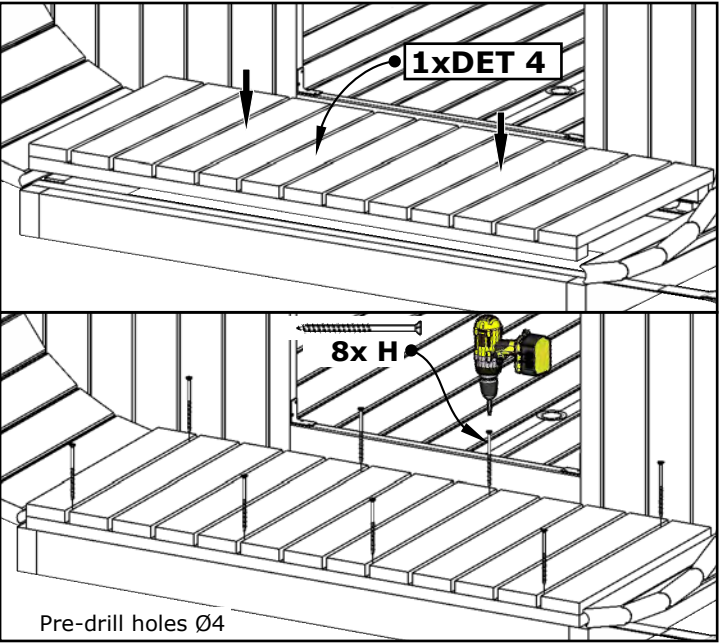Sauna "Icon" 385,Ø226






I

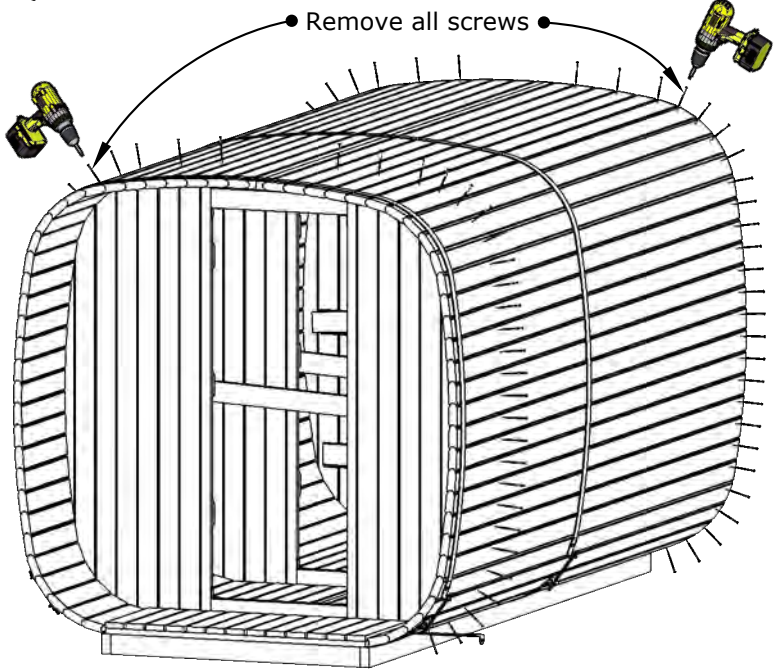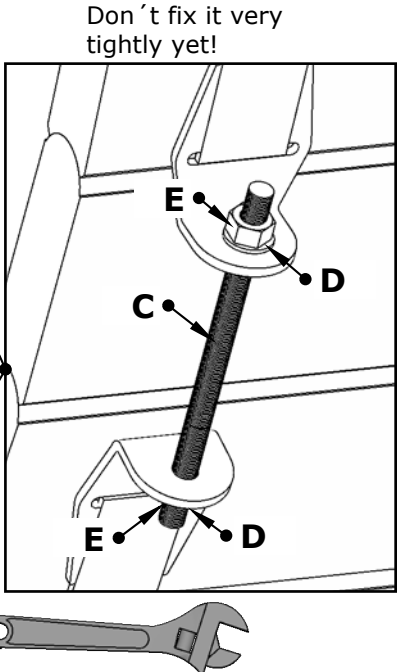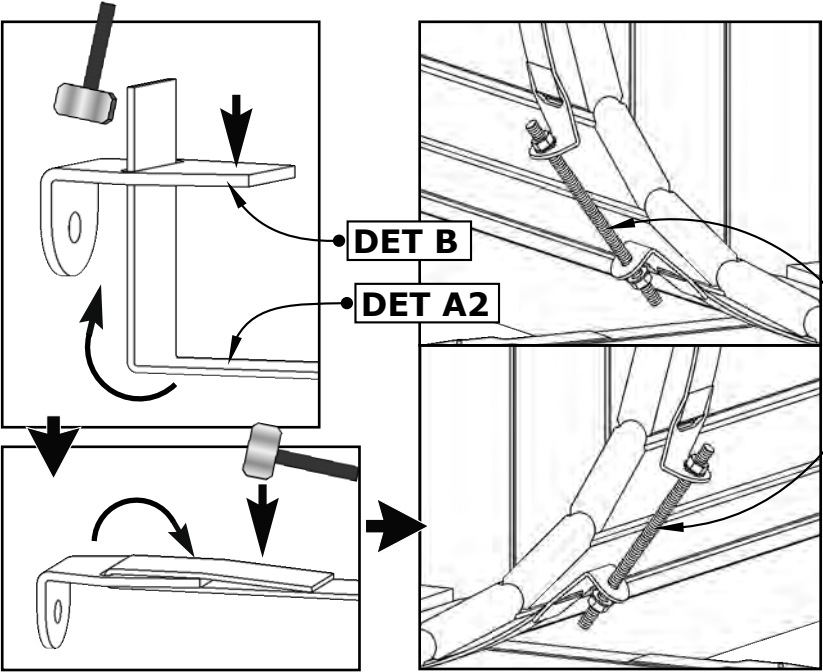


III

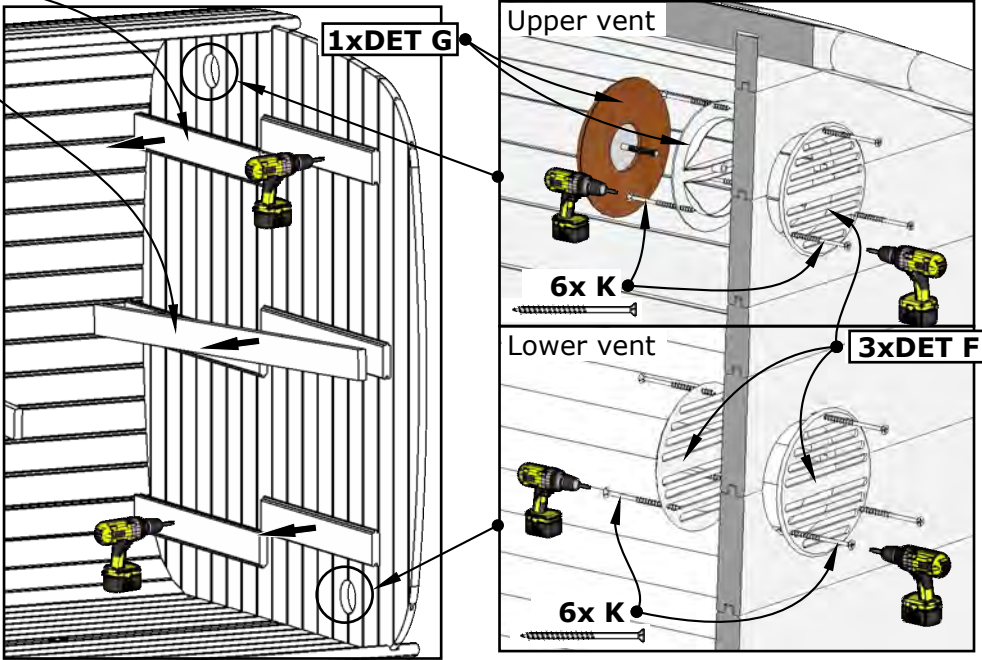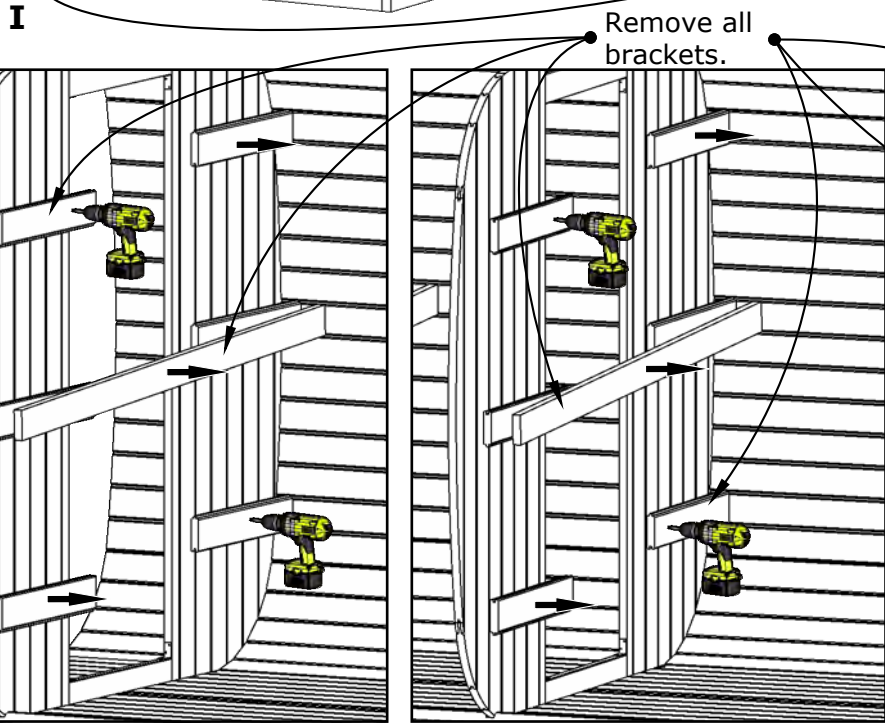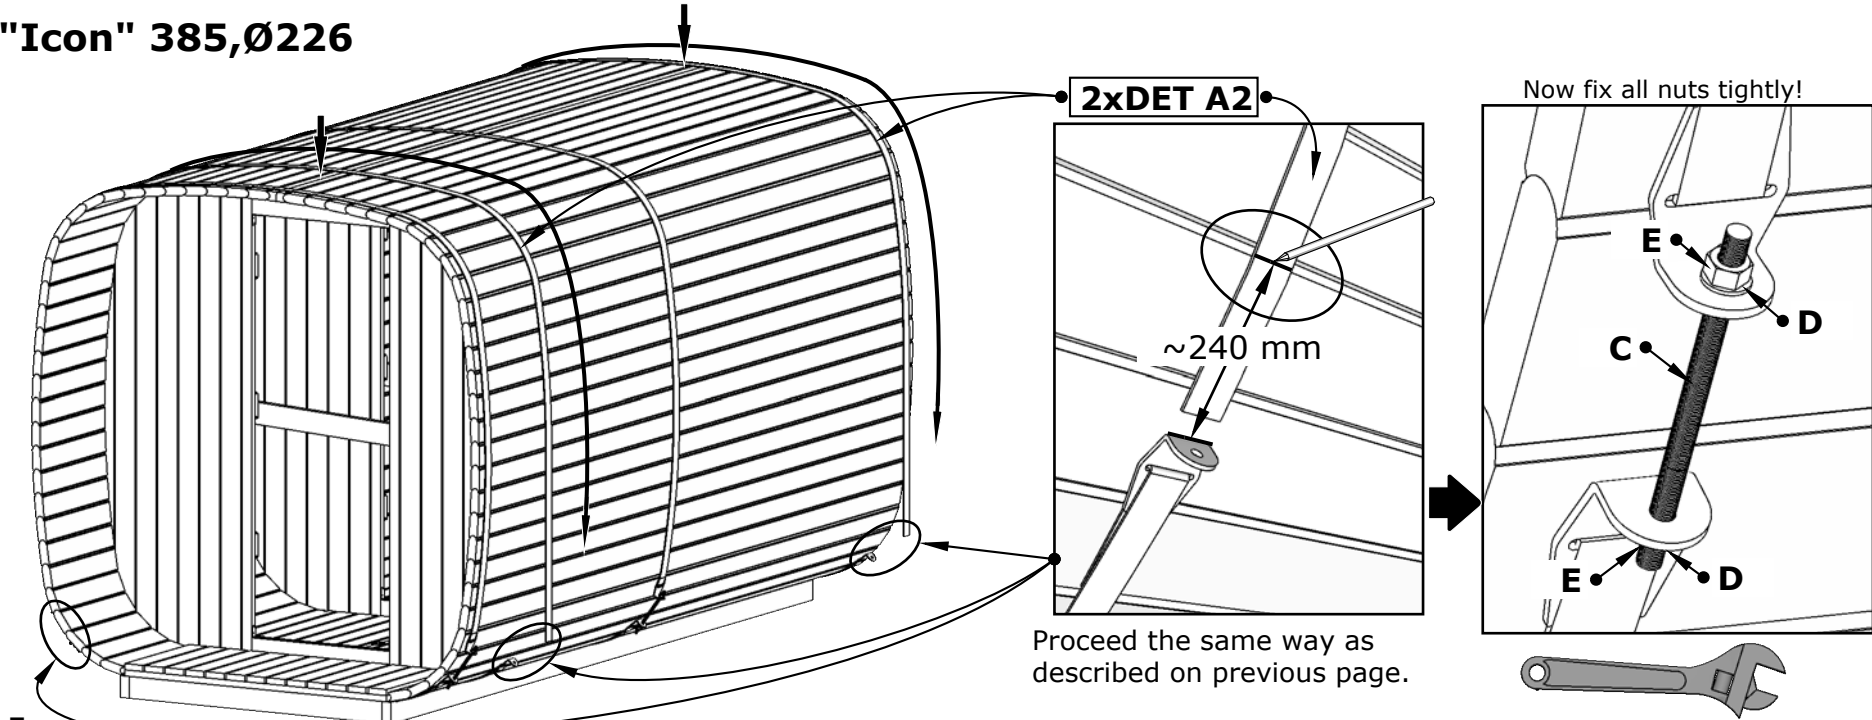Sauna "Icon" 385,Ø226





Sauna "Icon" 385,Ø226

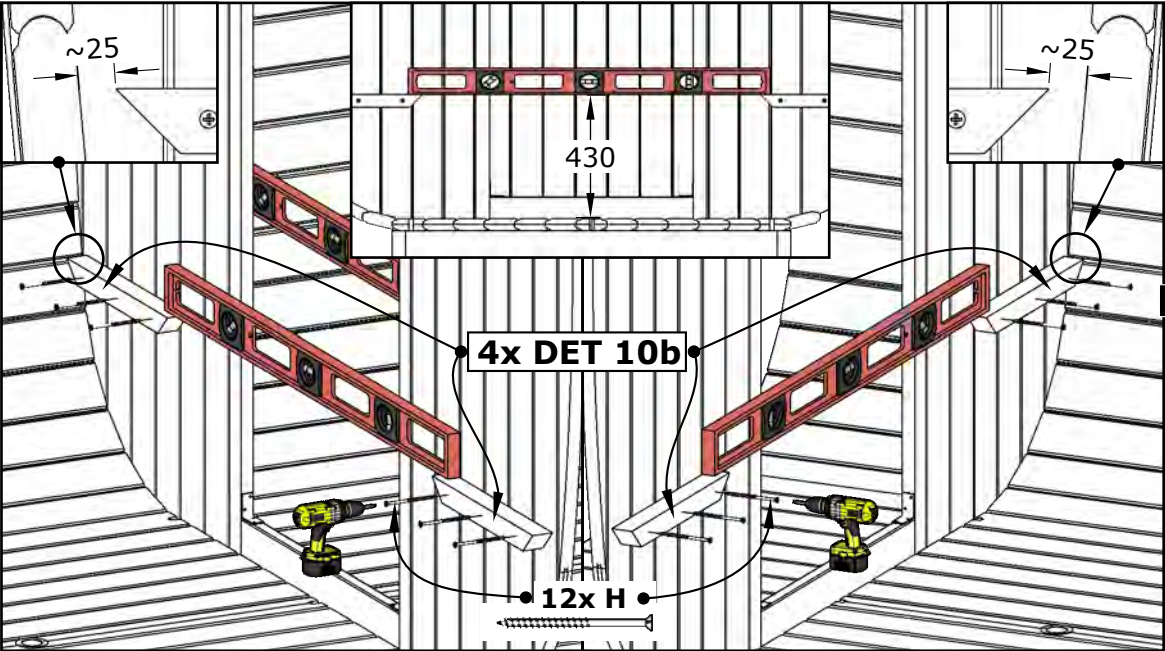
Dressingroom.



I

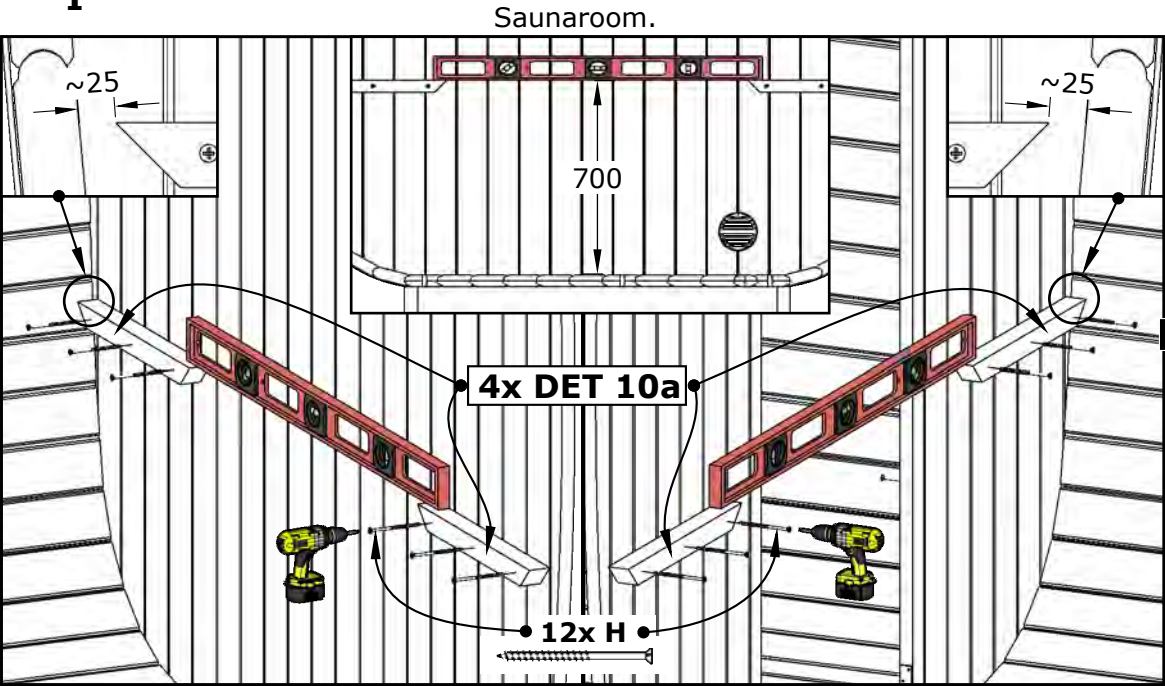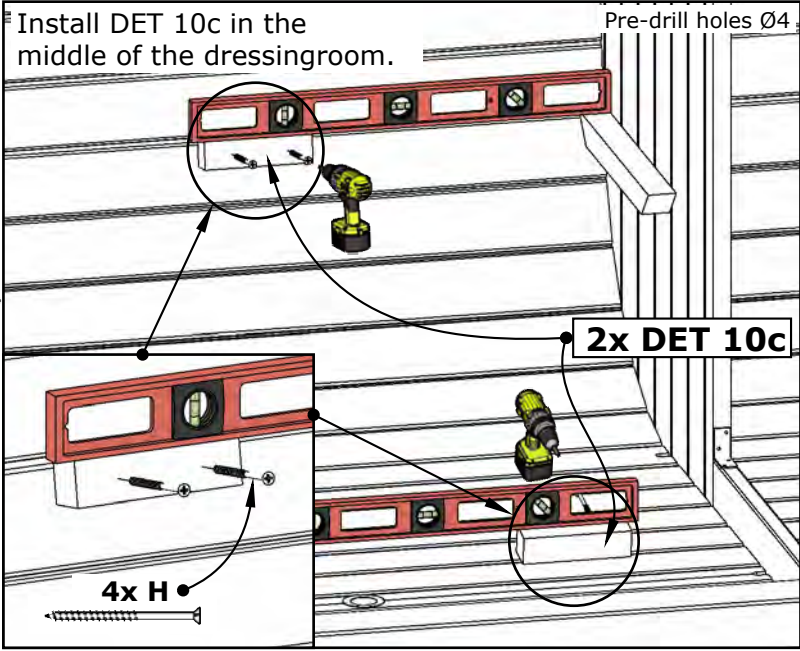





Saunaroom.

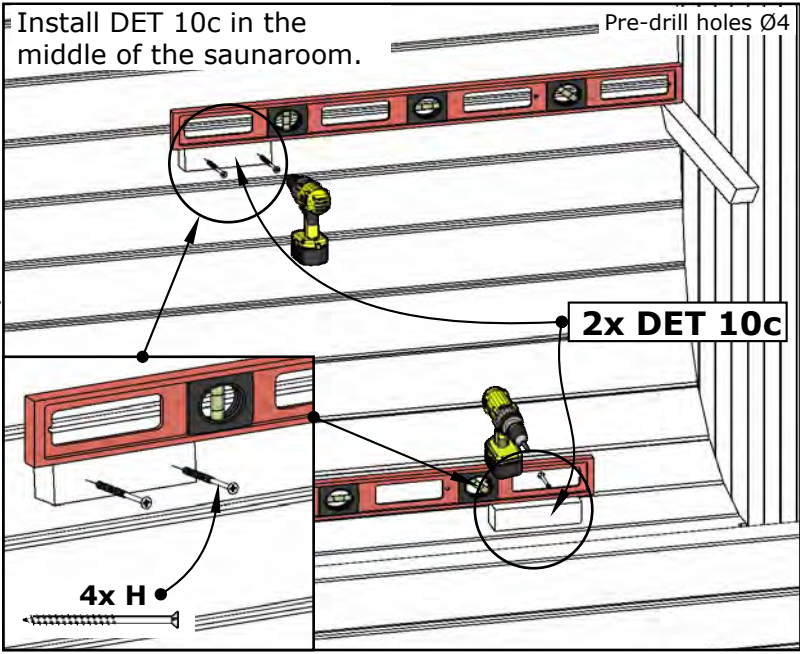

Sauna "Icon" 385,Ø226

Attention!

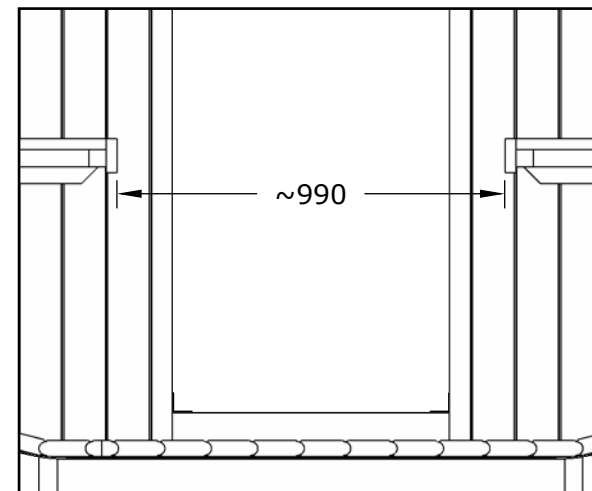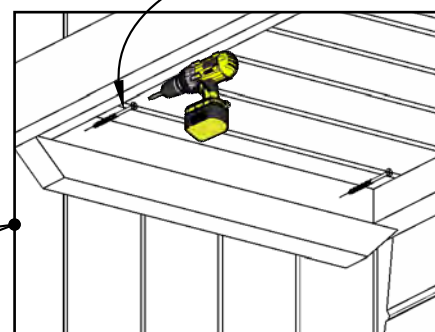
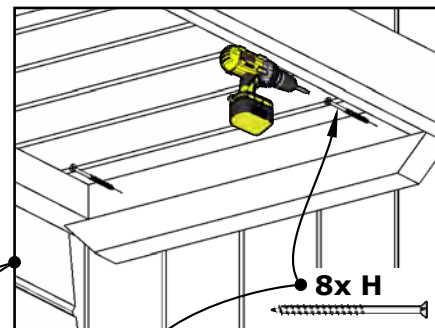
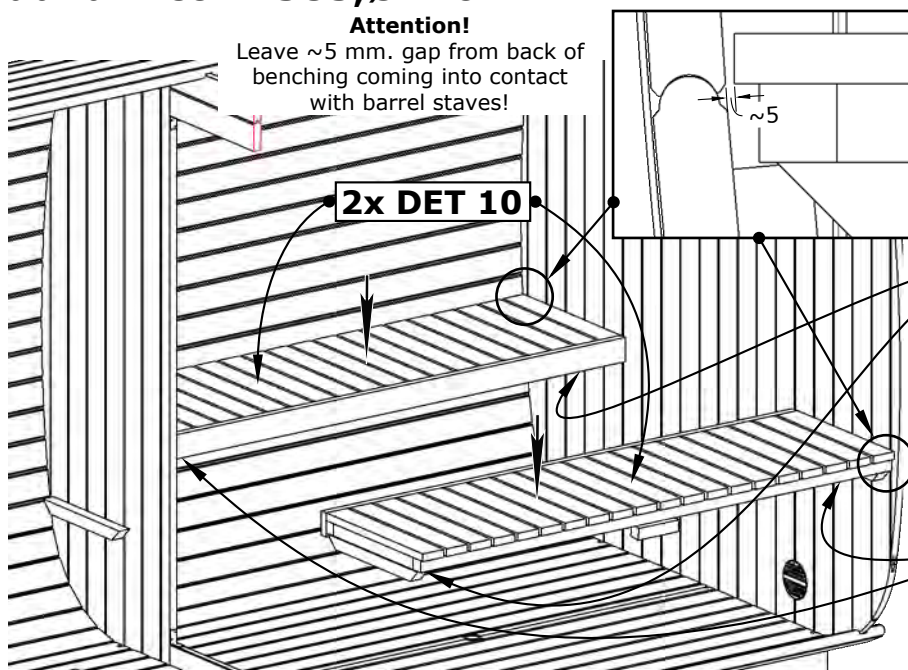
Leave ~5 mm. gap from back of benching coming into contact with barrel staves!



I



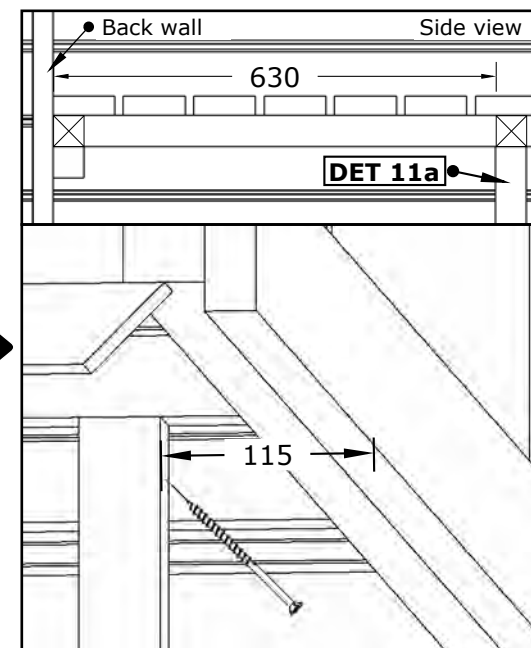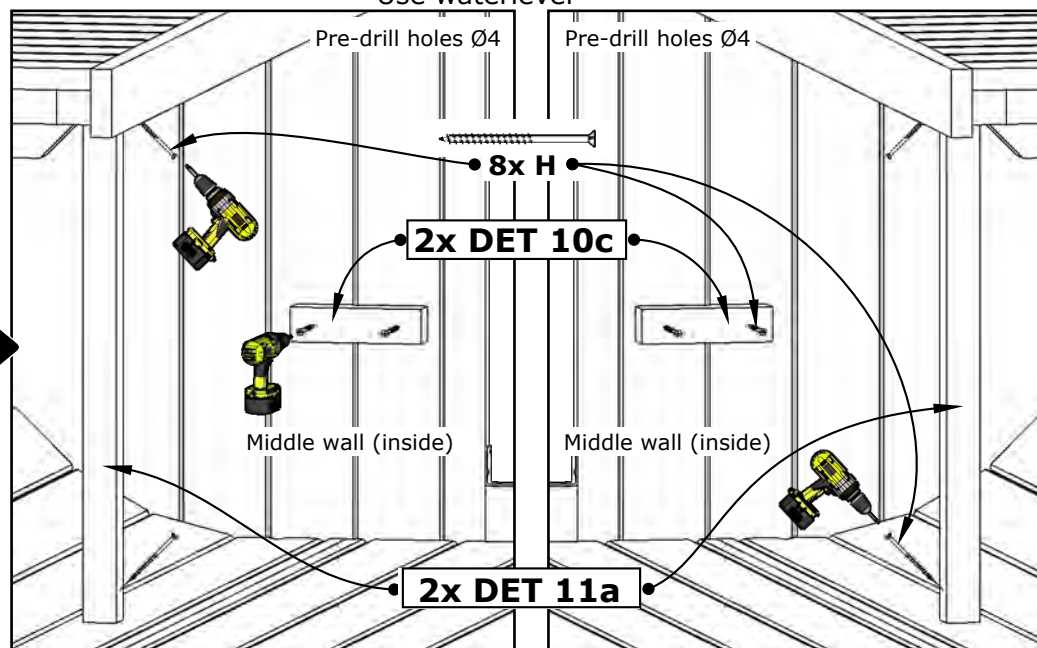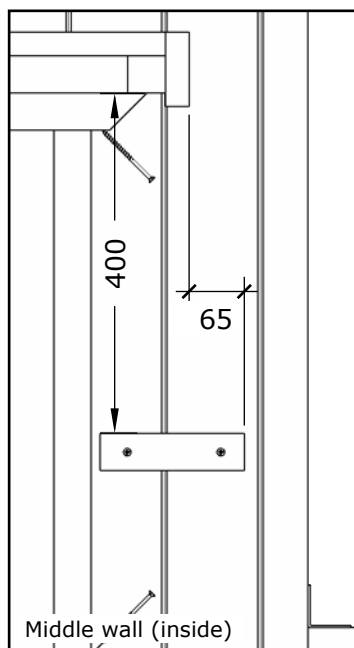
Use waterlevel




13. II

(TIC26/385PE-PT01)

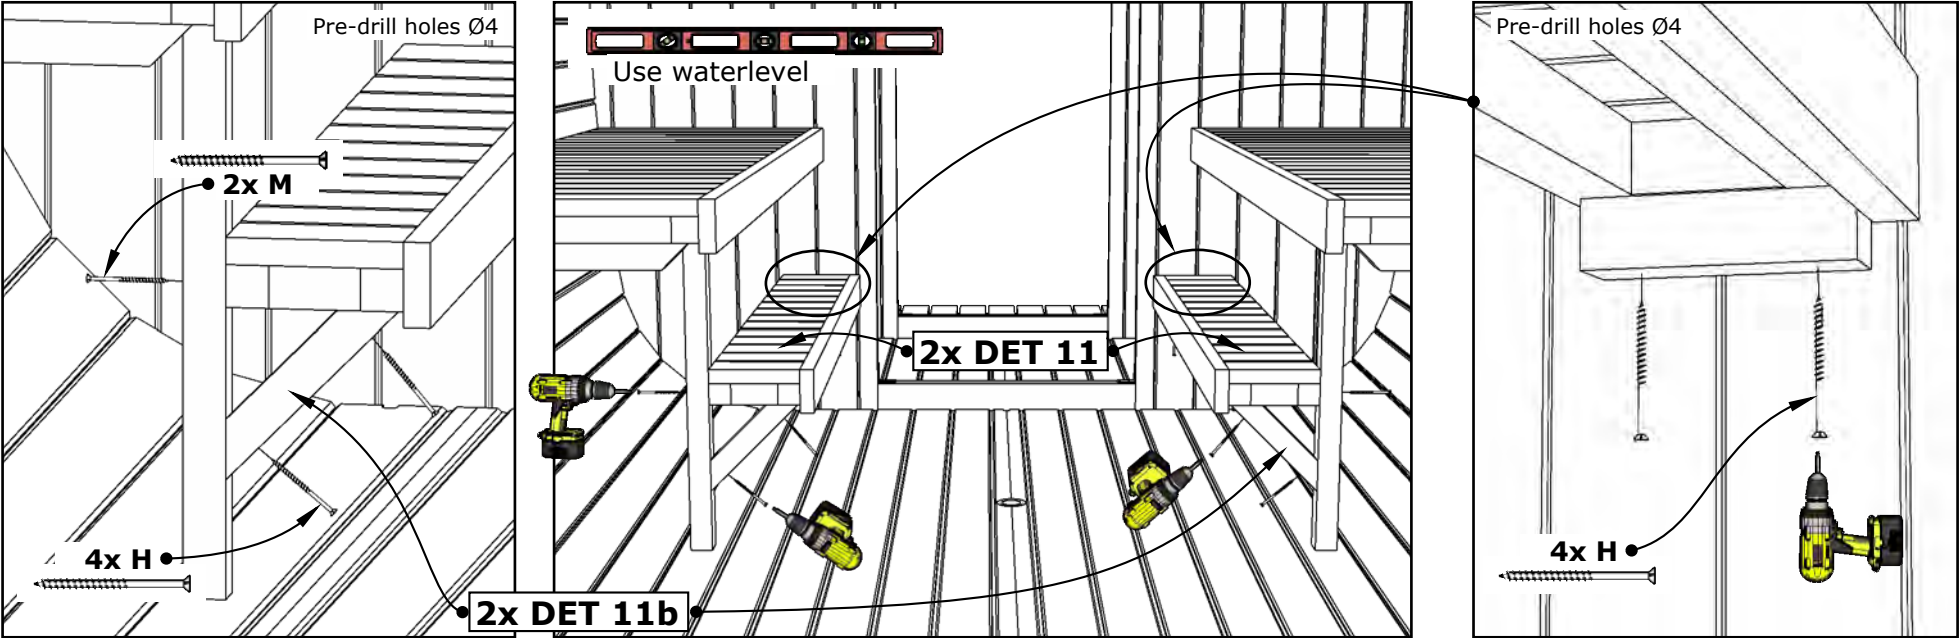Sauna "Icon" 385,Ø226




I

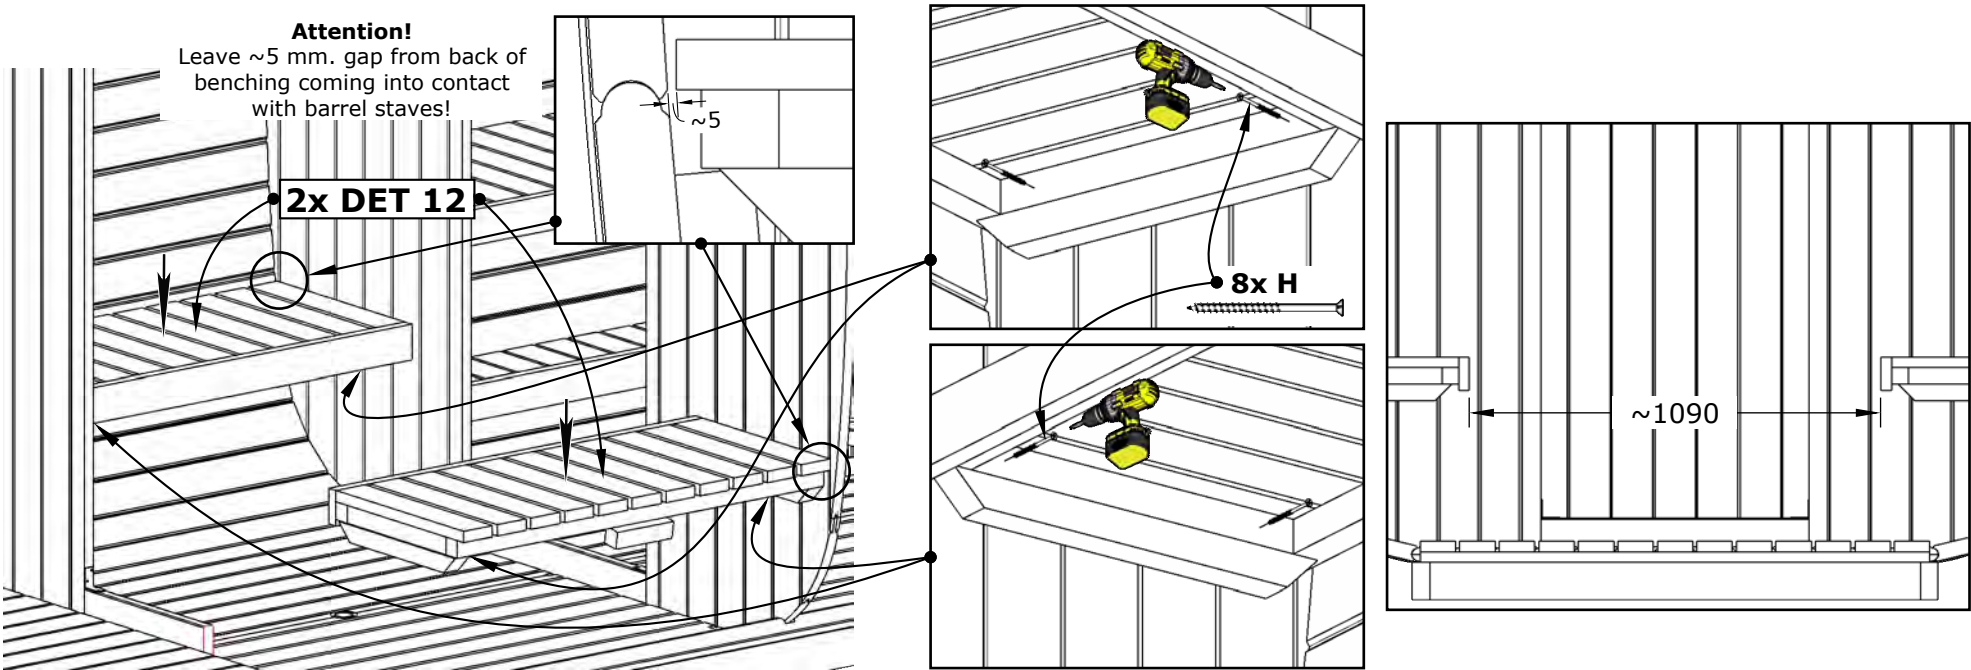


II


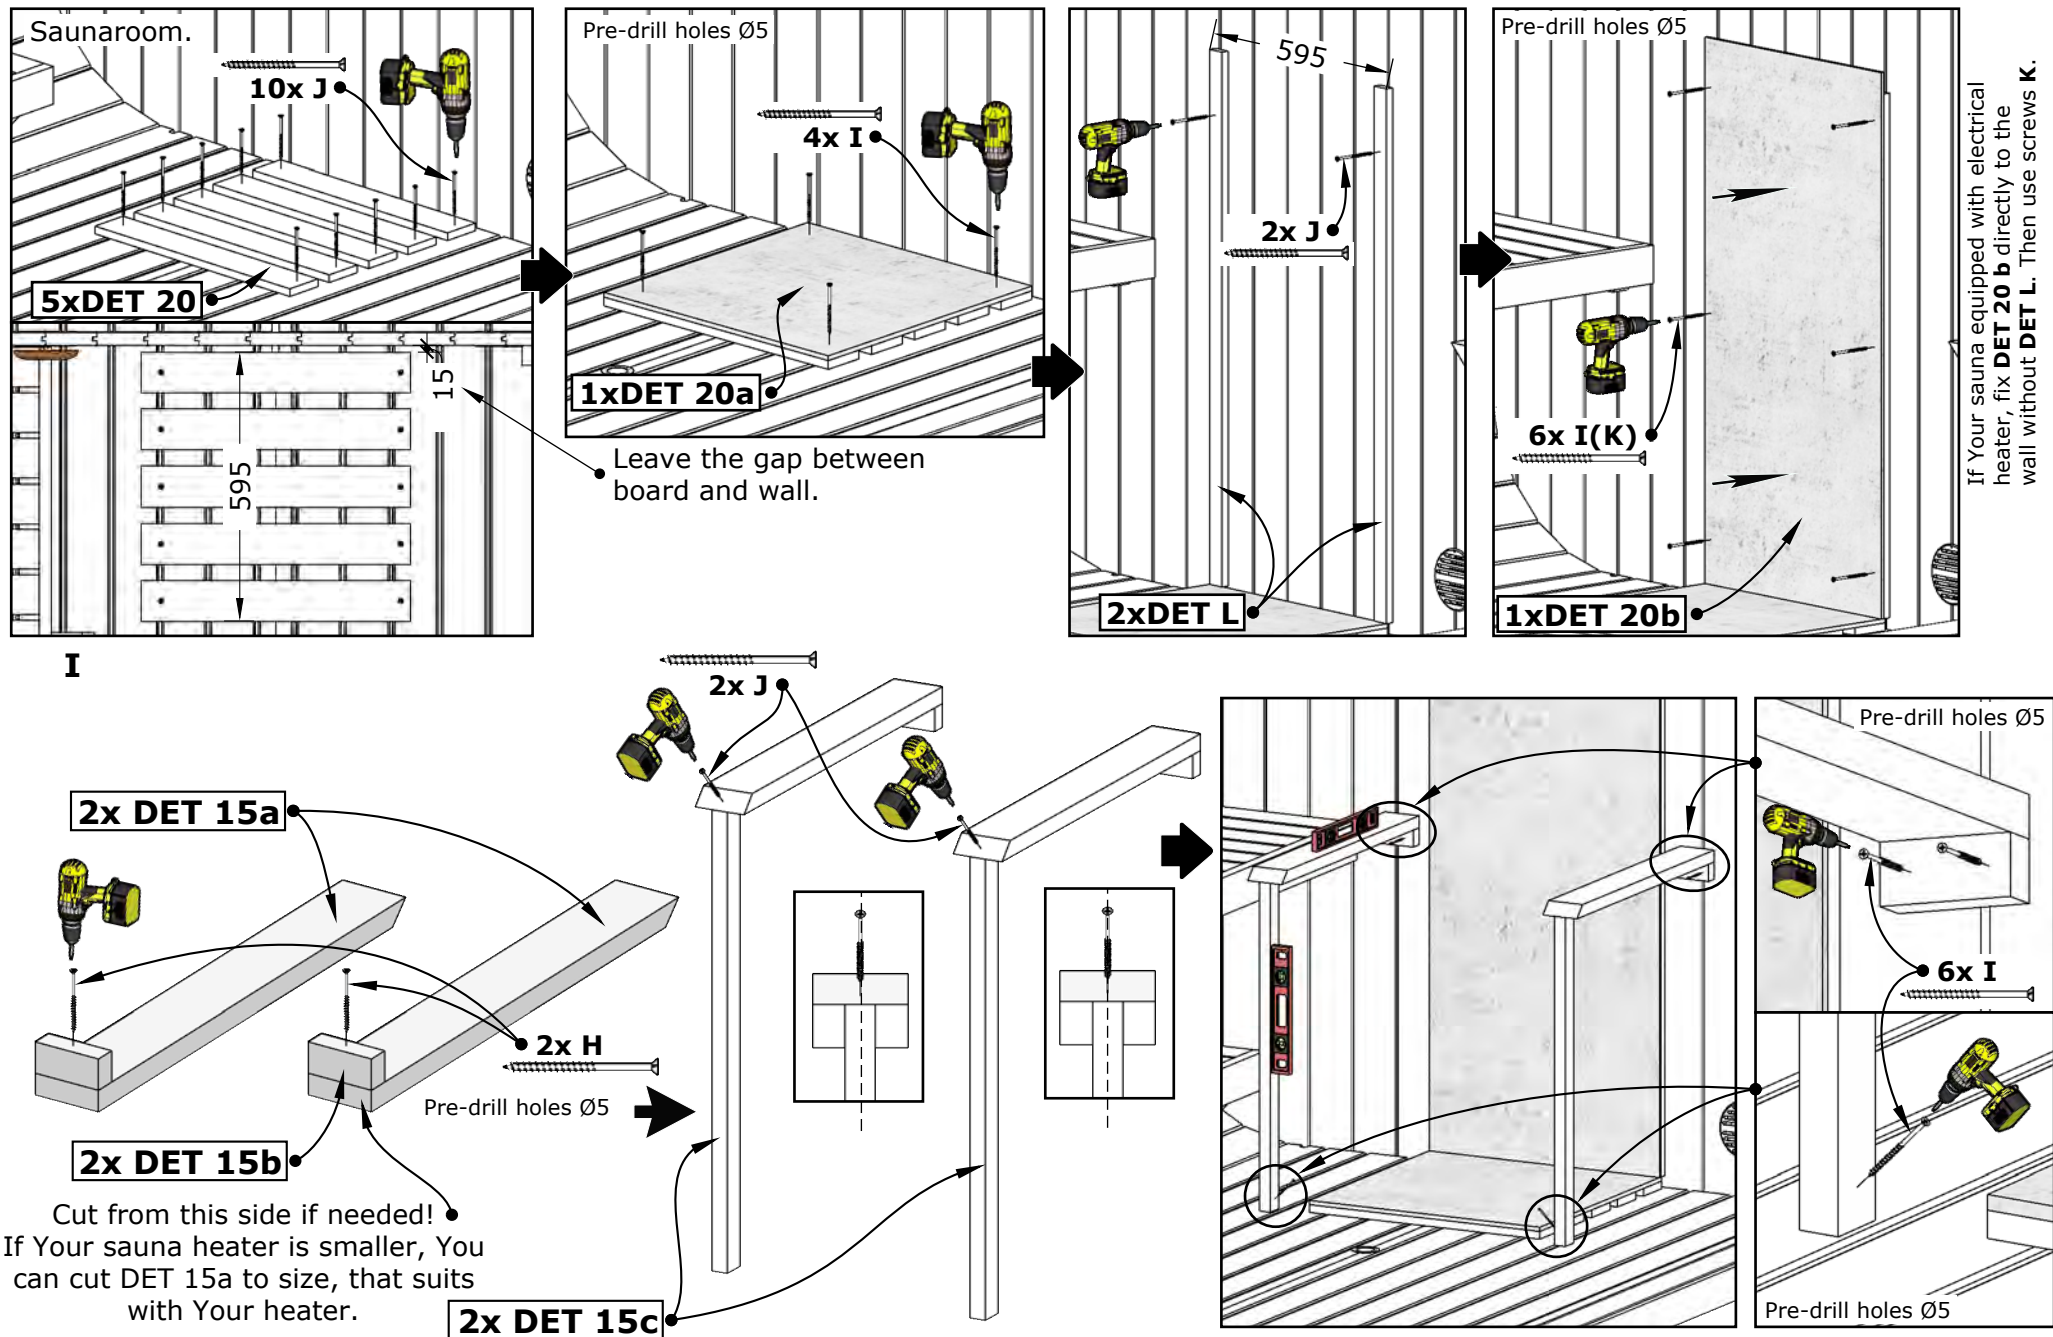
Sauna "Icon" 385,Ø226



Sauna "Icon" 385,Ø226

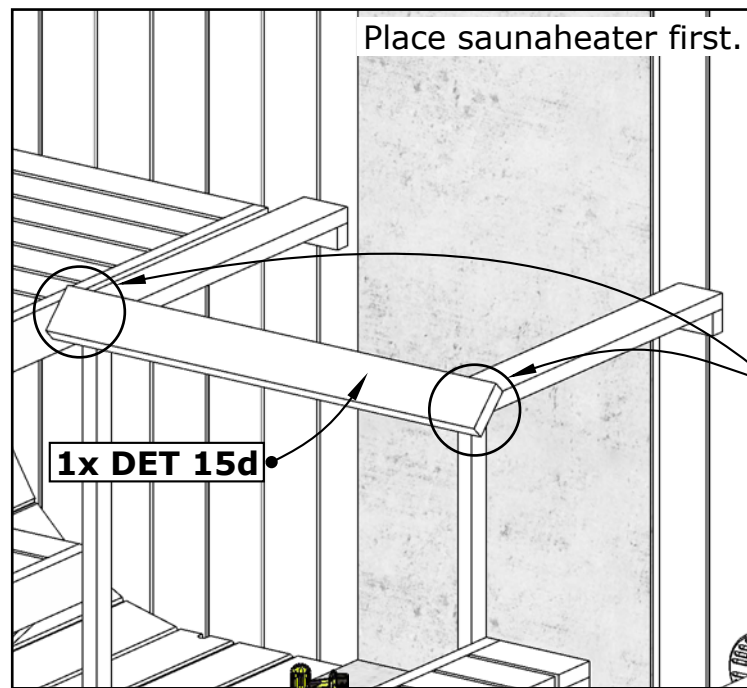


I

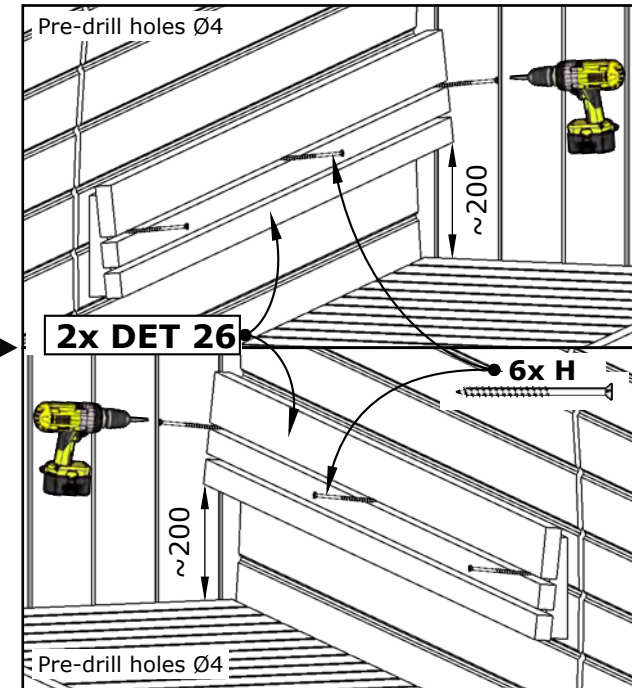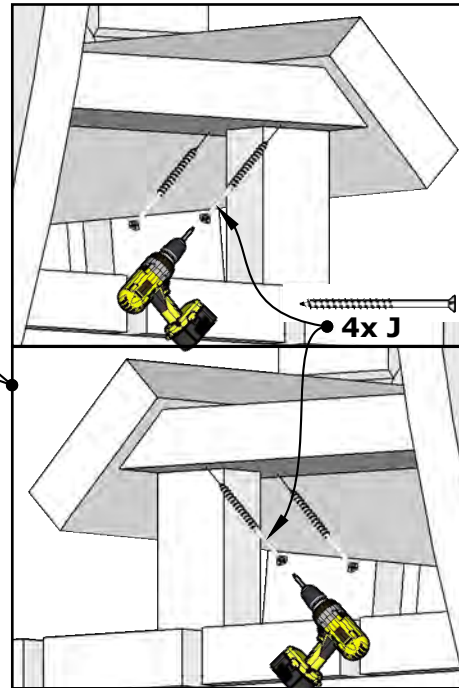


DET 21

Attention!
The door must open outwards. If you need the door handle to be on the opposite side, rotate door 180 degrees.

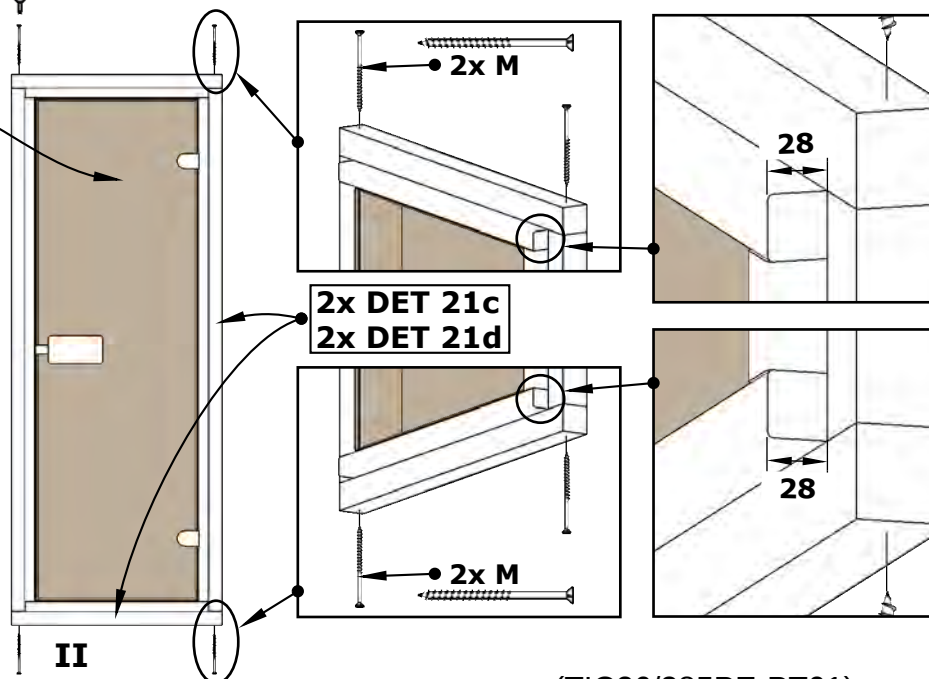
Prepare both doors the same way!



Sauna "Icon" 385,Ø226


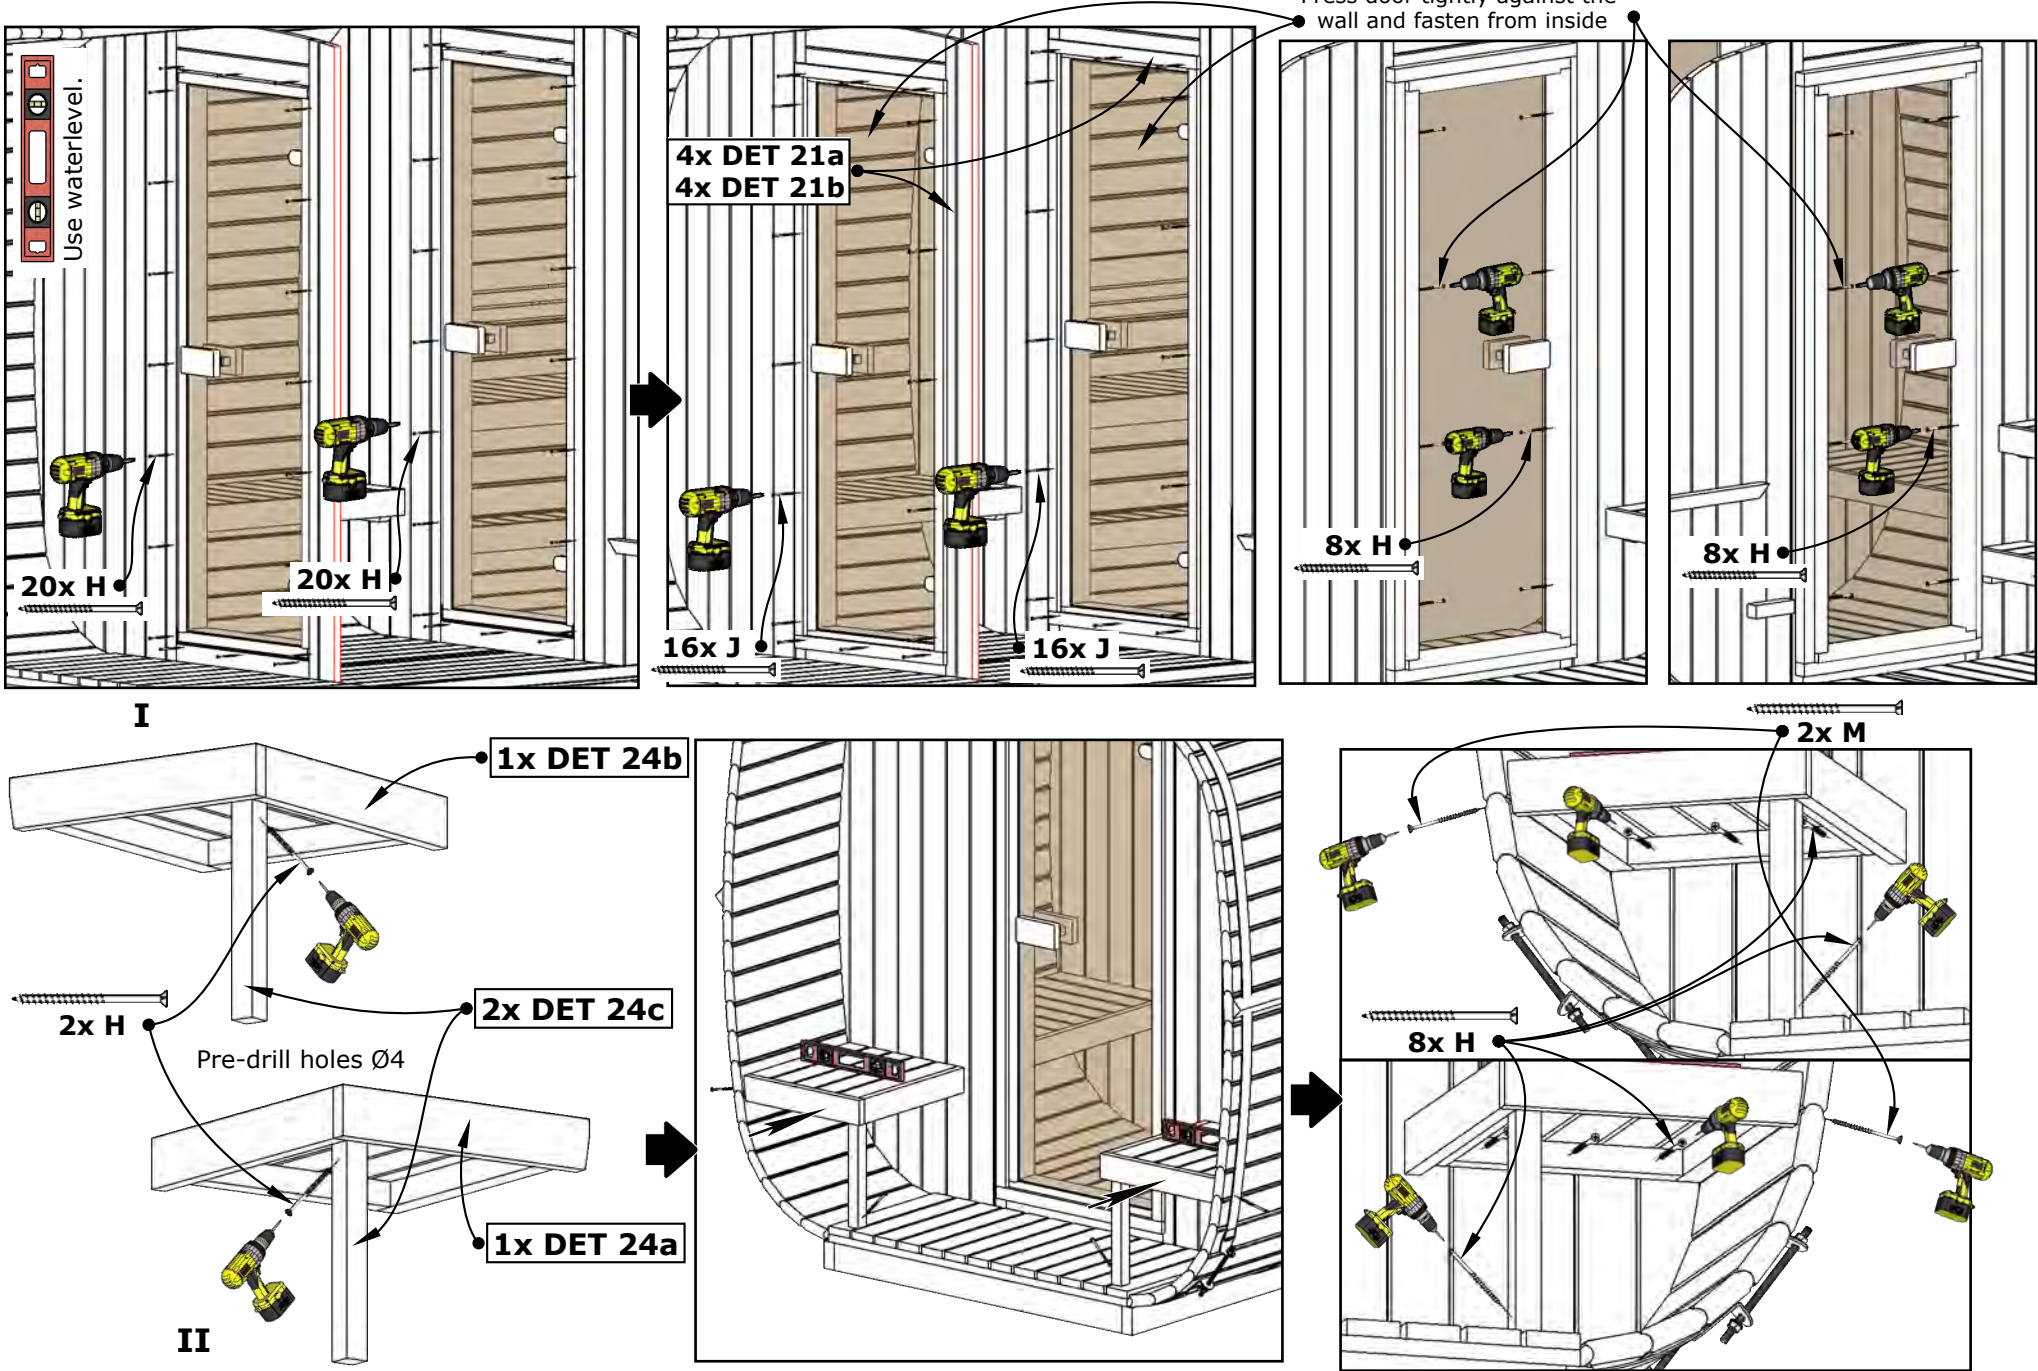


Sauna "Icon" 385,Ø226





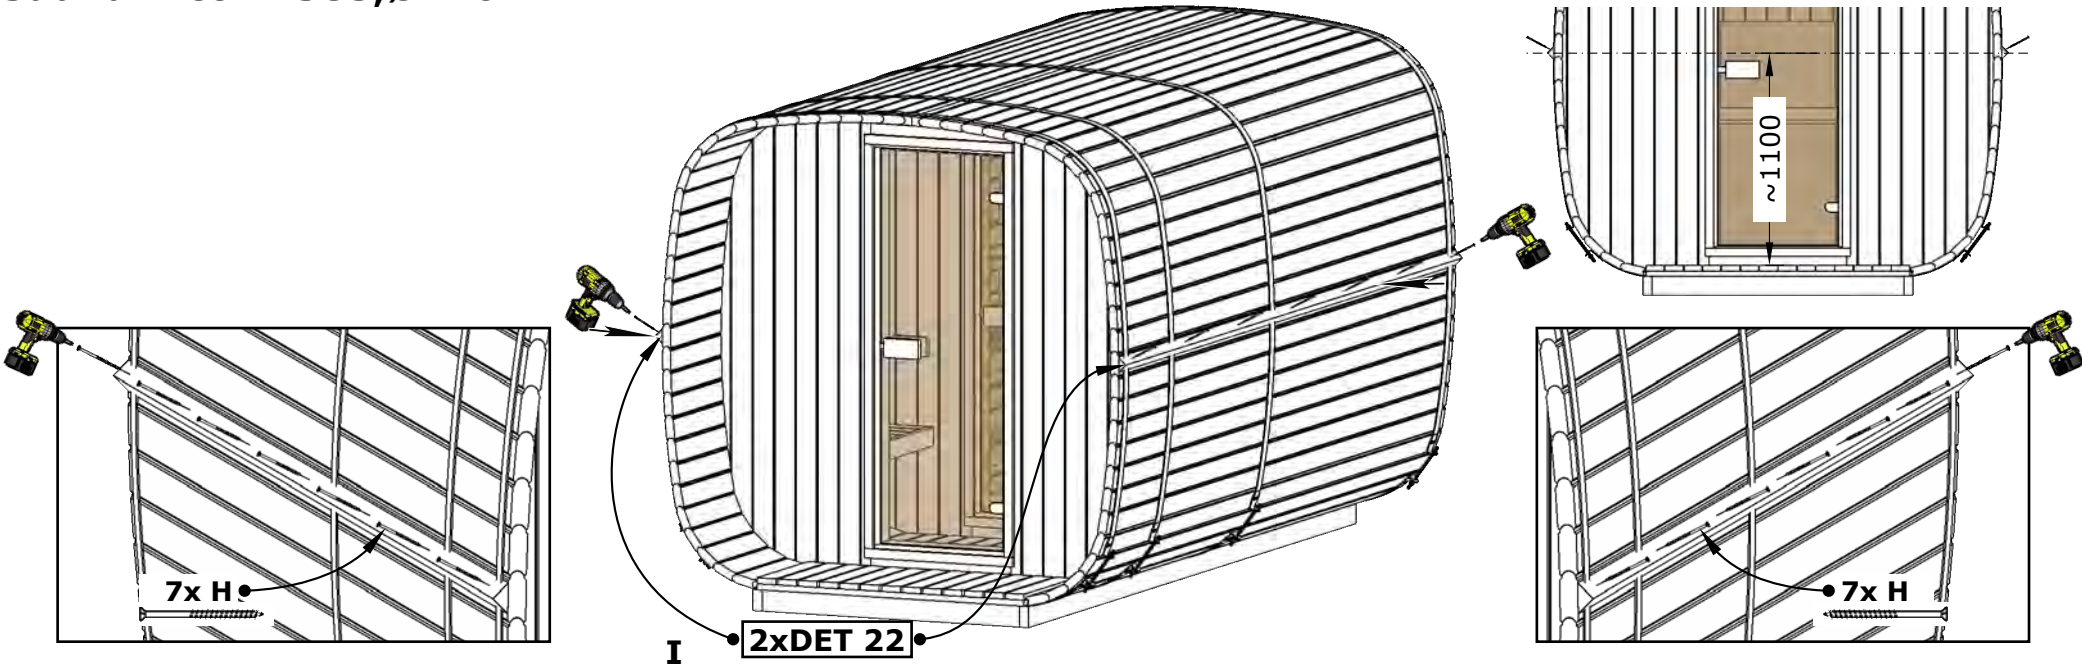


NB! Before roof shingles, install underlay felt. Check underlay felt installation manual on extra pages.

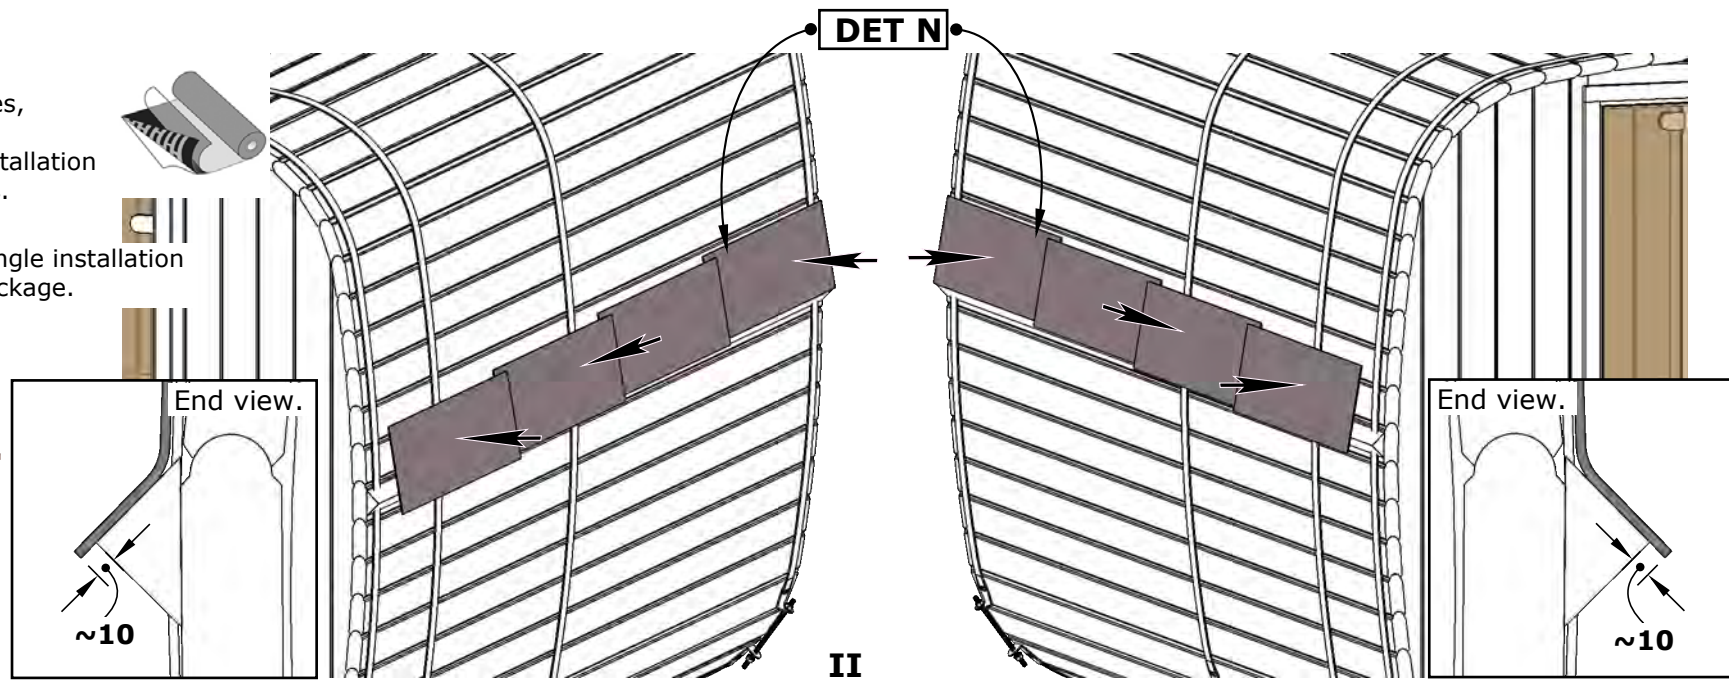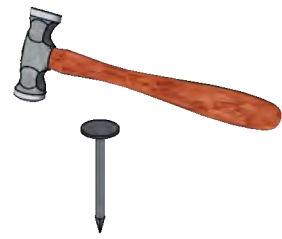Attention! Refer to shingle installation manual provided in package.



Sauna "Icon" 385,Ø226

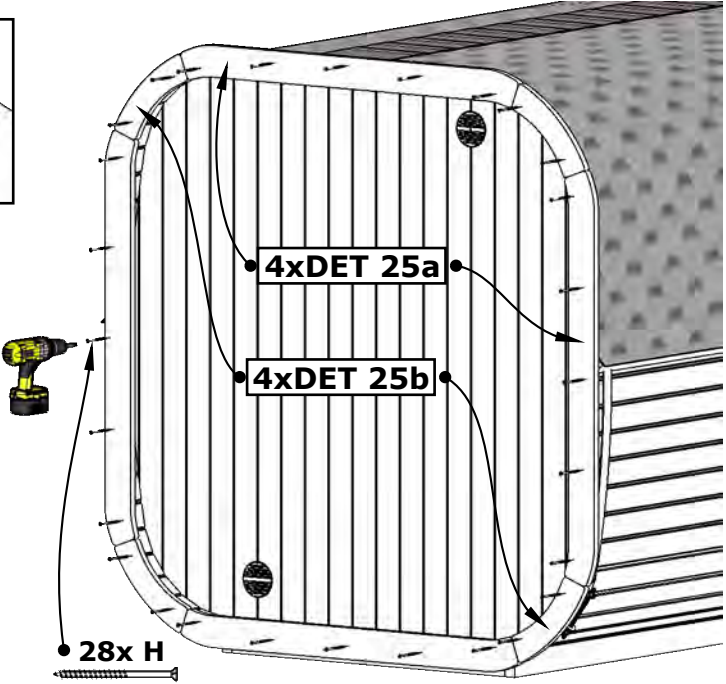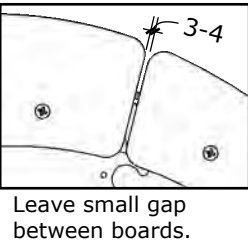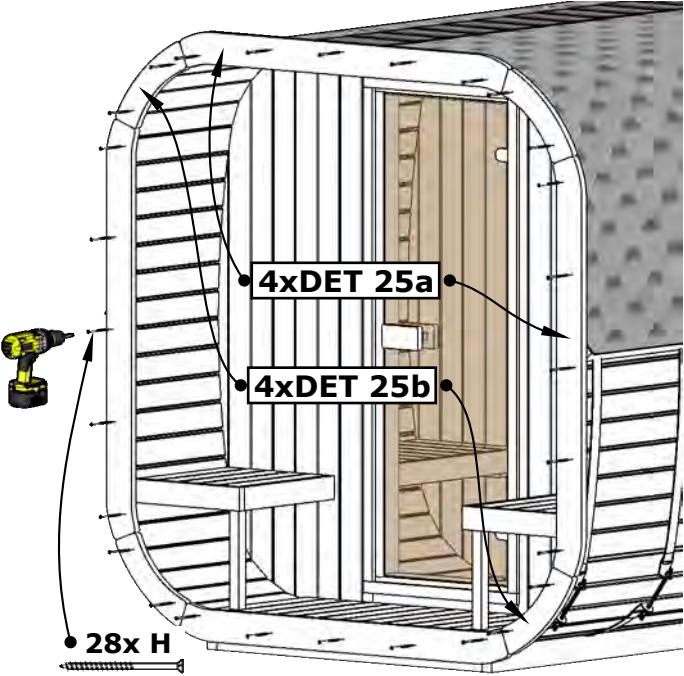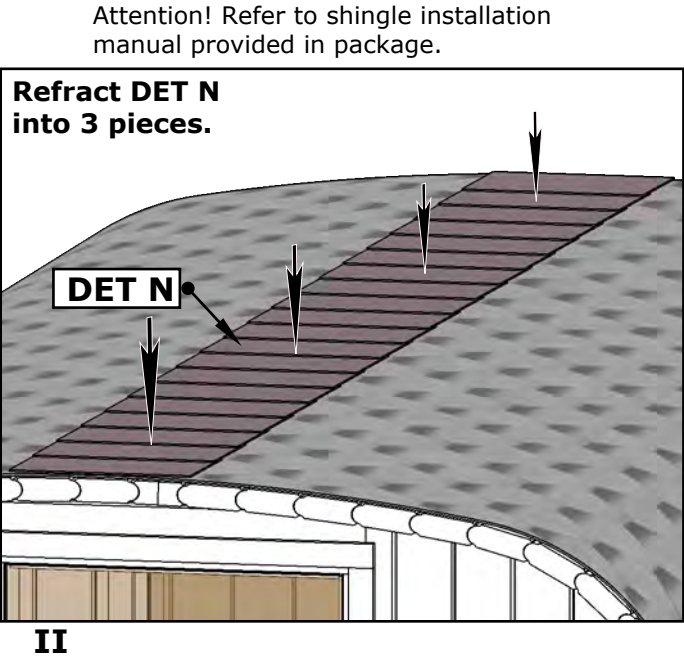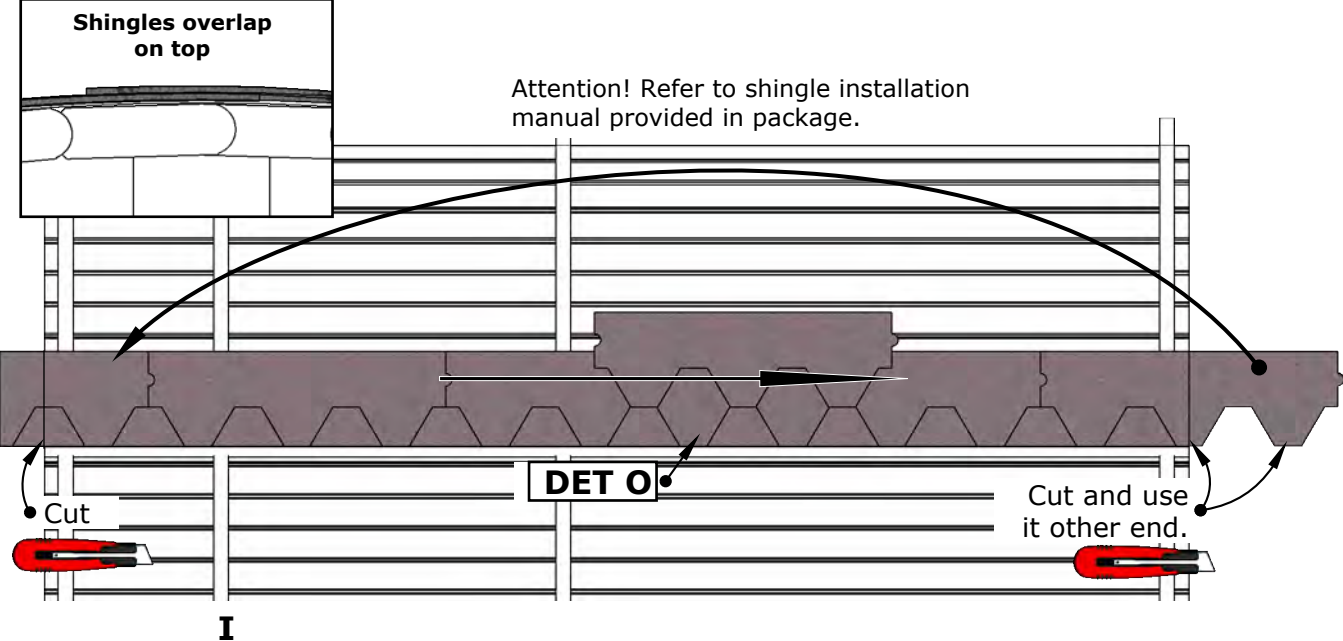

Underlay felt installation manual.

