


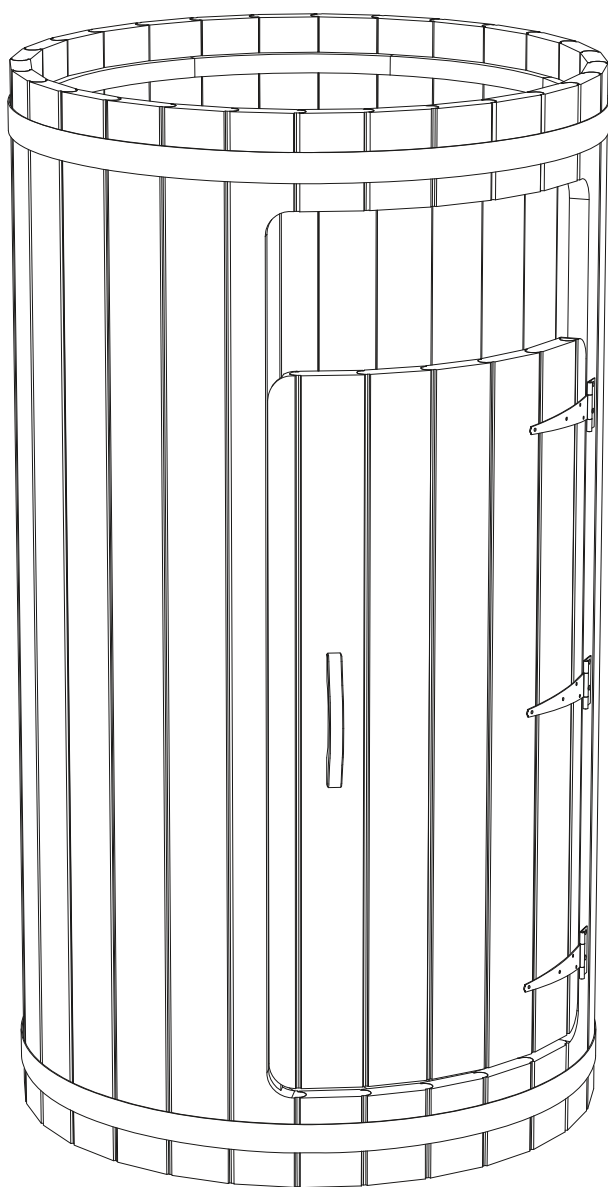
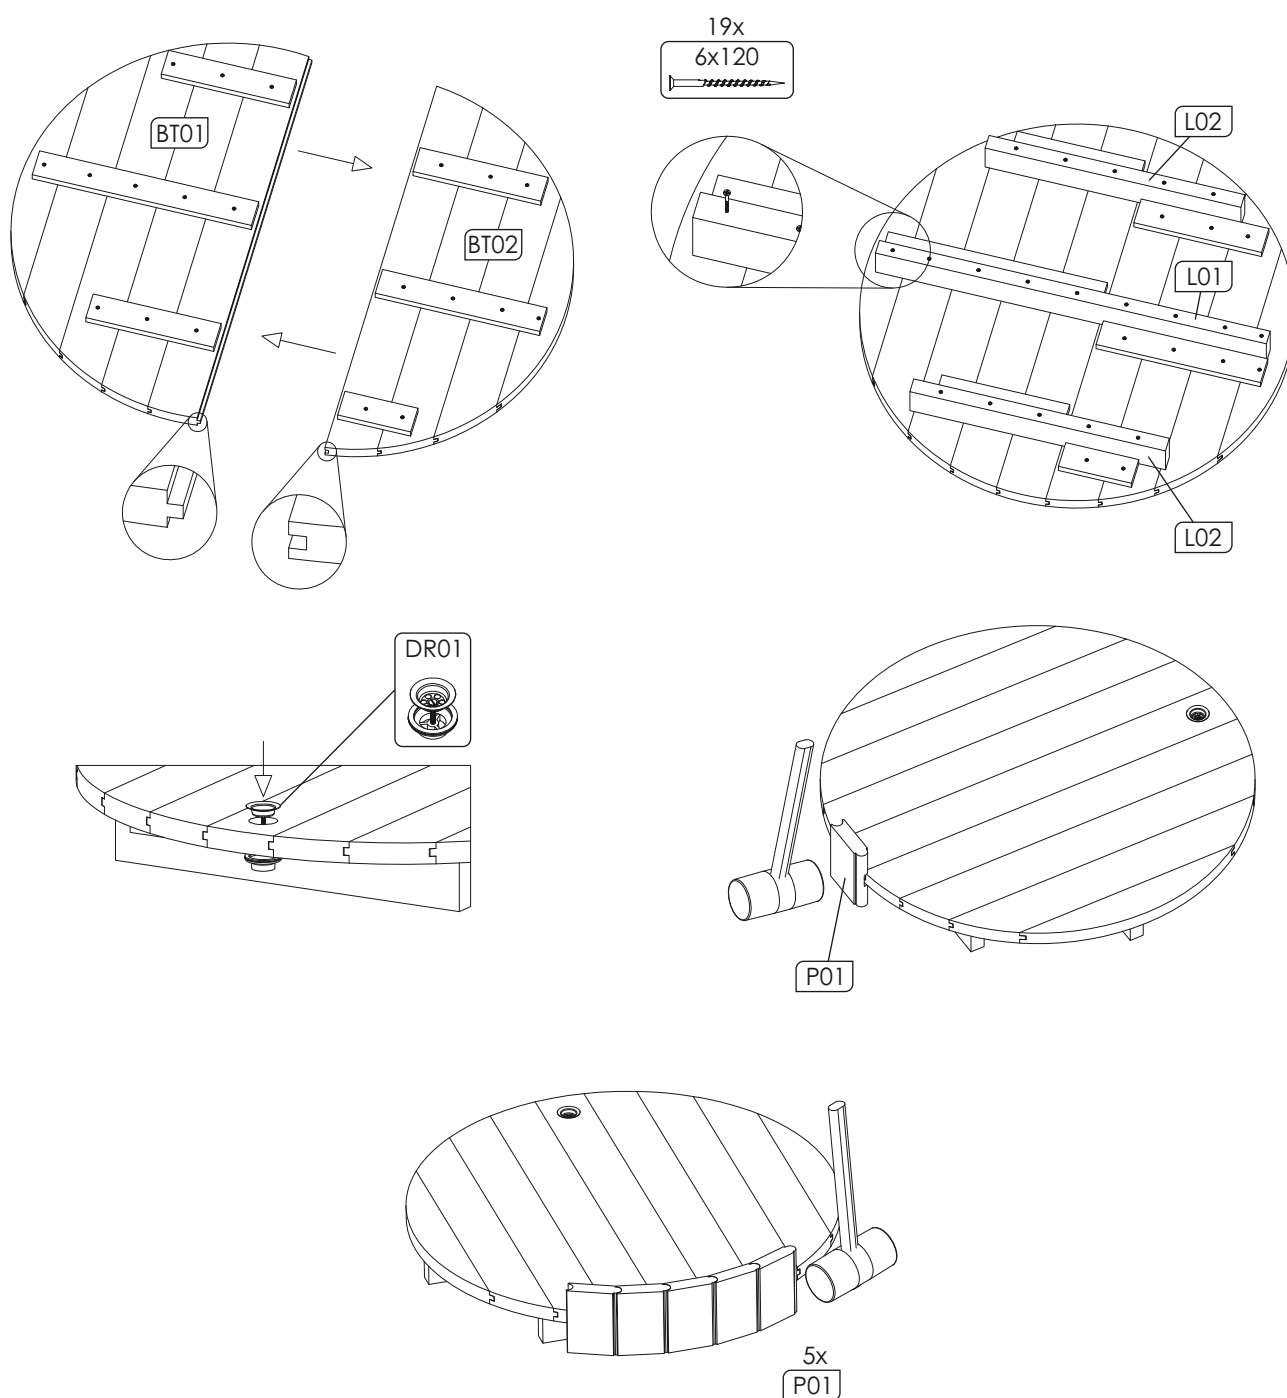
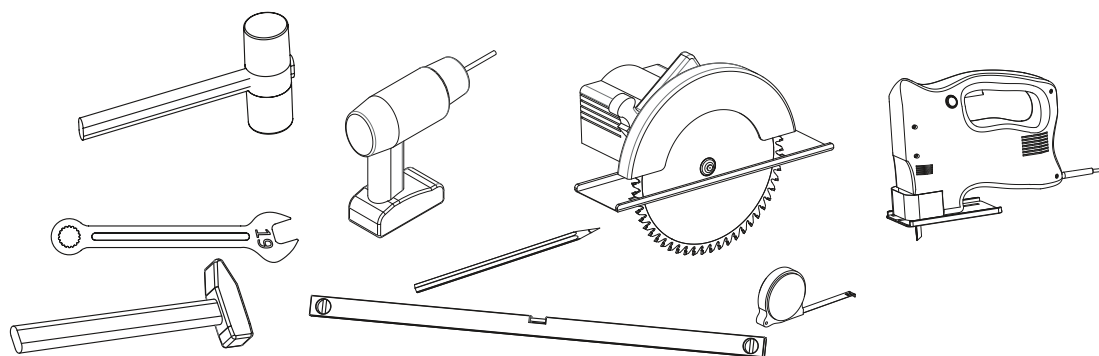
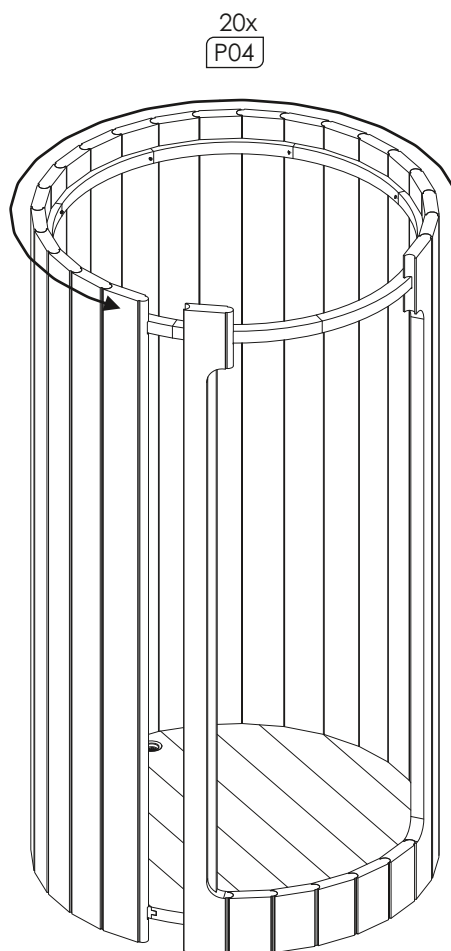






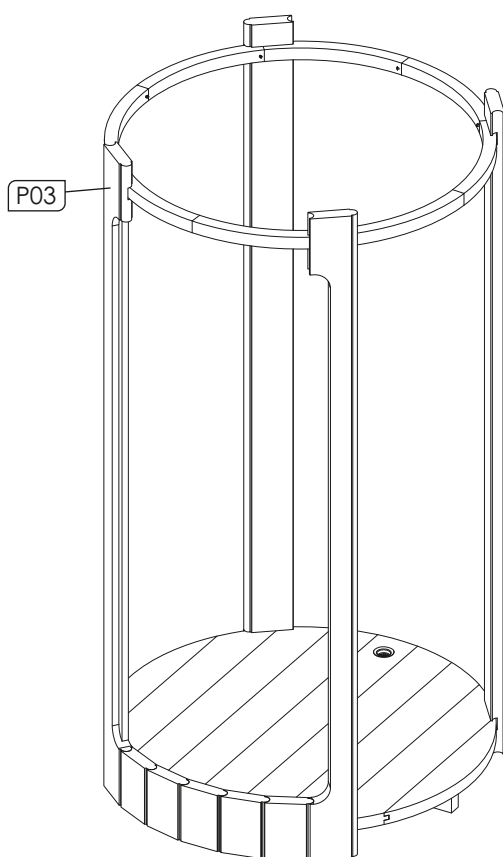








Assembly manual for shower pod








Required tools for assembly



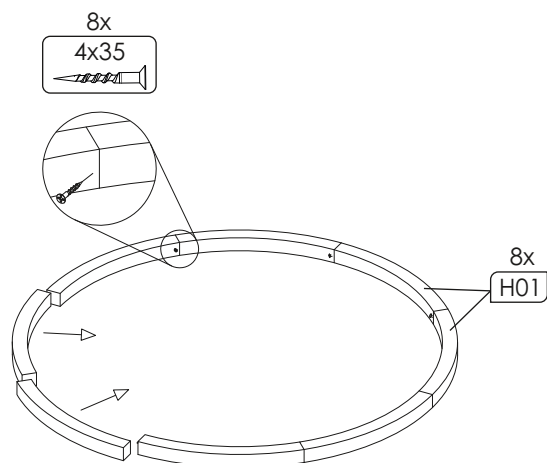


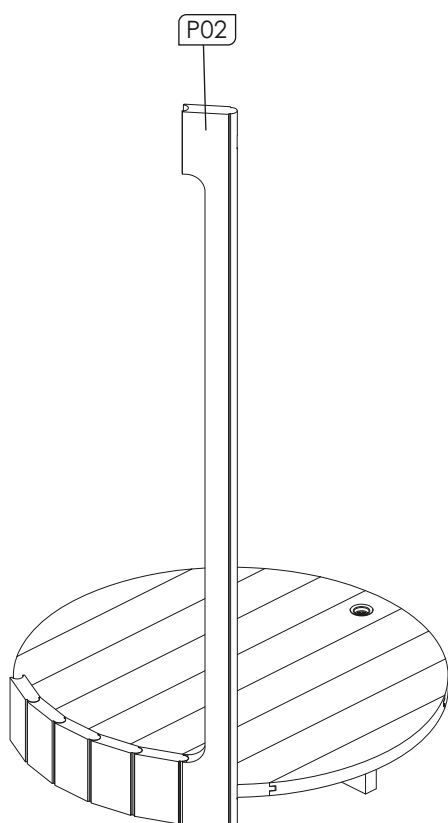

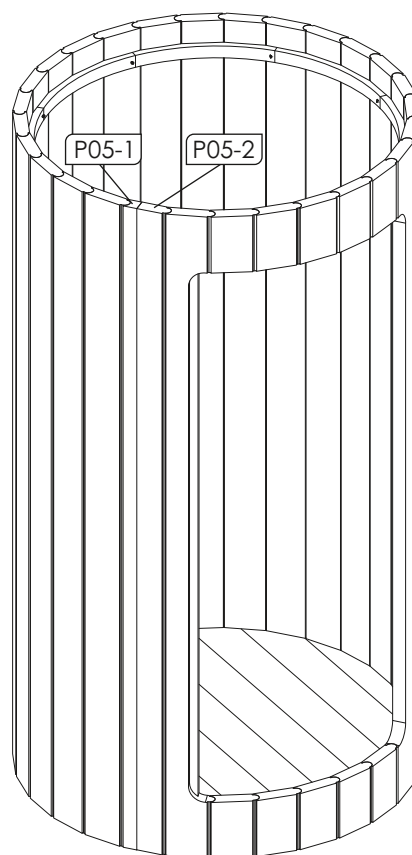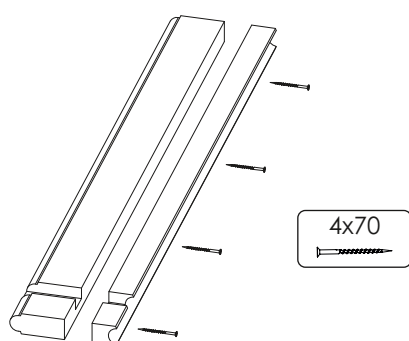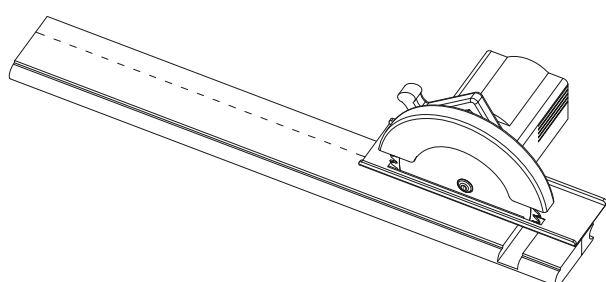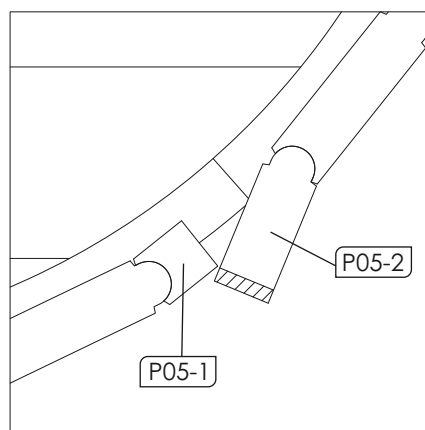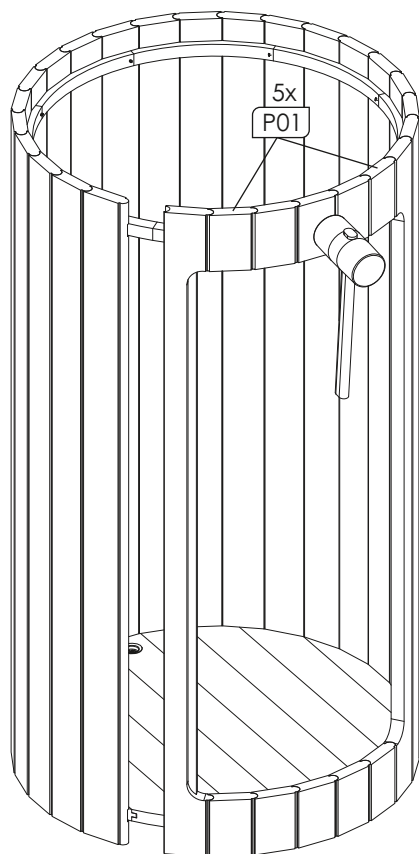

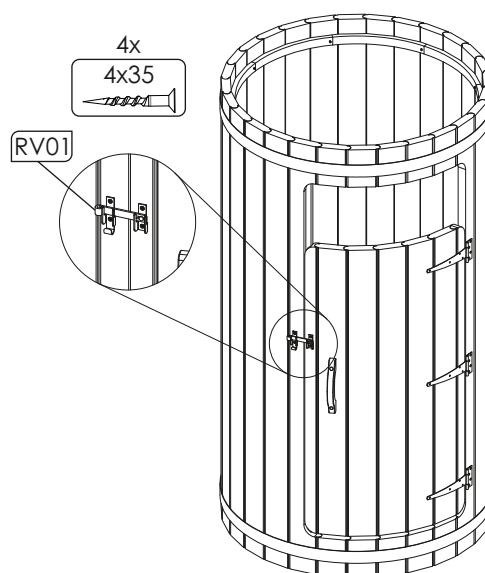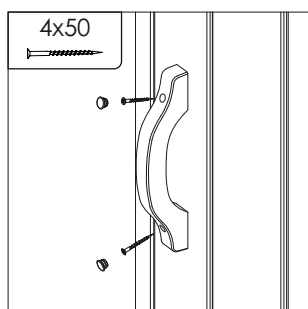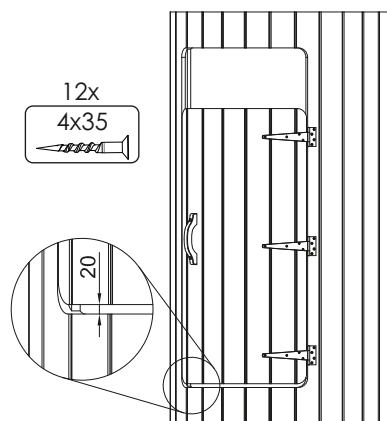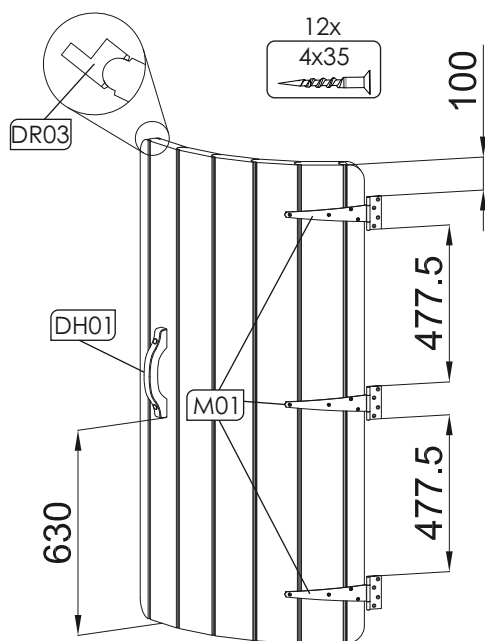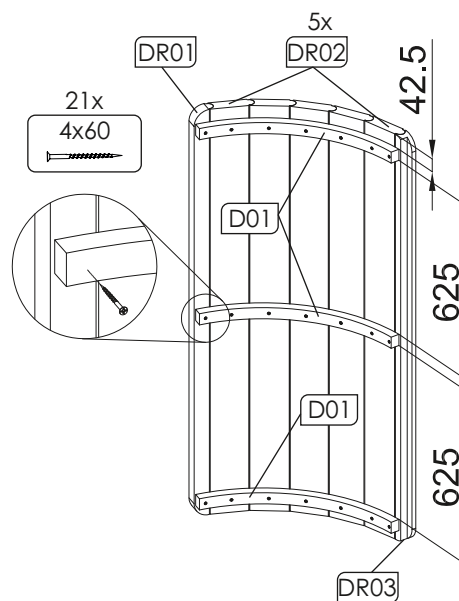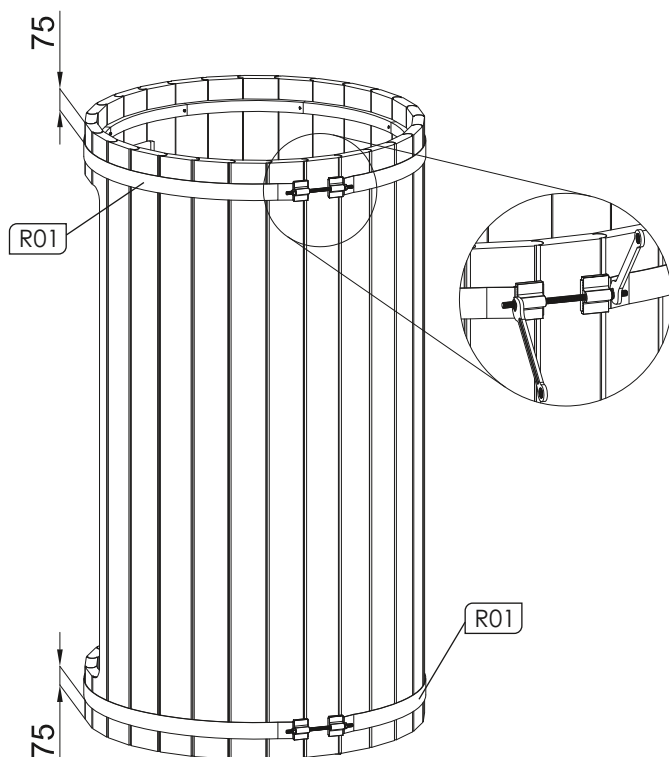

Nr.	Size	Qty.	Preview
BT01	651x1150	1	
BT02	508x1142	1	
L01	100x40x1070	1	
L02	100x40x700	2	
P01	145x40x190	10	
P02	145x40x2176	1	
P03	145x40x2176	1	
P04	145x40x2176	20	
P05-1	45x40x2176	1	
P05-2	100x40x2176	1	
H01	40x40x441	8	
R01	L3790	2	
DR01	72.5x40x1455	1	

Nr.	Size	Qty.	Preview
DR02	145x40x1455	5	
DR03	55x40x1455	1	
D01	30x40x671	3	
DH01	65x28x270	1	
M01	100x285	3	
DR01		1	
	4x35	40	
	4x50	2	
	4x60	25	
	4x70	8	
	6x120	20	
	†15,†20,†25	1+1+1	
		Set	