

## **Sauna door installation guide**


- Installation of the glass door requires two people.
- The glass does not withstand impacts with heavy objects.
- The glass may break upon impact with floor or wall.
- Never place the glass directly on the floor – place a suitable base on the floor before starting work (e.g. pieces of wood for supporting the glass). Place suitable pieces also between the wall and the glass.

Before installing the sauna door, check that the door is undamaged and without defects. In case of defects, please contact the dealer.

Andrese Dekoori AS is not responsible for defects that are caused by:

- ignoring the installation instructions or conditions for use of the product;
- *force majeure*, an accident, intentional or careless activity by the user or a third party;
- breakage of the glass or discovery of defects after the product has been delivered to the user;
- defects as a result from foreign bodies, fluids and insects inside the package or defects caused by extreme temperature;
- normal wear and tear as a result of intensive use of the product.

1. Open the package and check that all the details are included. Kit includes a glass door, hinges (2 pcs) and a door knob.
2. Before starting installation works, check that the door aperture is both vertically and horizontally level and correctly sized. Check that all the corners of the door aperture are at 90°.
3. Install the door glass in the door aperture in its place (figure 1). Make sure there is a 3-5 mm gap between the glass and the ceiling.

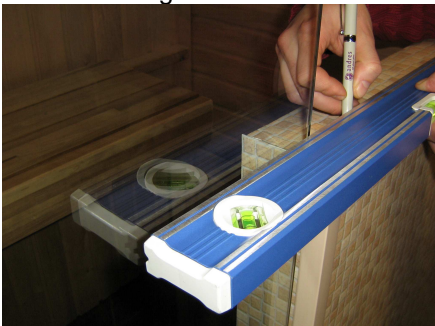

(Figure 1)

4. Place the glass door with the hinges against the wall. Check that the door is vertically level and fasten the hinges with screws. If necessary, mark the fastening points, drill holes, insert dowels in the holes and fasten the hinges with screws.
5. In order to adjust the door hinges, close the door and adjust the hinges to a suitable position by tightening the hexagon socket screws (figure 2).



(Figure 2)

6. Install the door knob.

**NB! Hinge screws of the door must be retightened once a month (see section 5 of the manual).**

## **Sauna window installation guide**


- Installation of the glass window requires two people.
- The glass does not withstand impacts with heavy objects.
- The glass may break upon impact with floor or wall.
- Never place the glass directly on the floor – place a suitable base on the floor before commencing work (e.g. pieces of wood for supporting the glass). Place suitable pieces also between the wall and the glass.

Before installing the sauna window, check that the window is undamaged and without defects. In case of defects, please contact the dealer.

Andrese Dekoori AS is not responsible for defects that are caused by:

- ignoring the installation instructions or conditions for use of the product;
- *force majeure*, an accident, intentional or careless activity by the user or a third party;
- breakage of the glass or discovery of defects after the product has been delivered to the user;
- defects as a result from foreign bodies, fluids, insects inside the package or defects caused by extreme temperature;
- normal wear and tear as a result of intensive use of the product.

1. Open the package and check that all the details are included. Kit includes a door glass, U-profiles (3 pcs), screws and silicone.
2. Before starting installation works, check that the window aperture is both vertically and horizontally level and correctly sized. Check that all the corners of the window aperture are at 90°.
3. Install the upper and lower U-profiles of the window, align them with the door glass (figure 1) and mark the fastening points of the screws (figure 2).

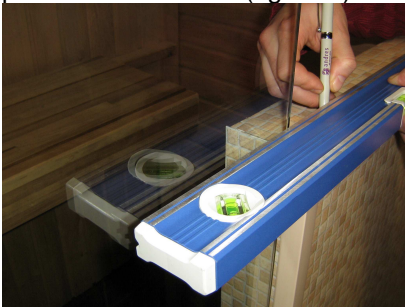

(Figure 1)



(Figure 2)

4. At first fasten the vertical U-profile (figure 3).



(Figure 3)

5. Fasten the upper and lower U-profiles from the door side fastening holes (at the center of the U-profile, see figures 4 and 4.1).



(Figure 4)



(Figure 4.1)

6. Make sure the screw heads do not protrude from the bottom of the U-profile (figure 5).



(Figure 5)

7. Apply silicone to the U-profiles (thickness 1-2 mm, see the user guide for silicone).

8. Turn the upper and lower U-profiles at an angle with regard to the wall. This allows placing the glass between the U-profiles (figure 6).



(Figure 6)

9. Place the glass carefully between the U-profiles (figure 6.1). NB! Do not push the glass all the way against the wall. Make sure the fastening holes for the screws on the side of the upper and lower U-profiles remain open (figures 8 and 8.1).



(Figure 6.1)

10. Turn the U-profiles with the window glass and align with the sauna door. Make sure the vertical U-profile and the upper and lower U-profiles are aligned (figure 7).



(Figure 7)

11. Fasten the screws on the other side of the upper and lower U-profiles (figure 8 and 8.1). Make sure the screw heads do not protrude from the bottom of the U-profile (figure 5).



(Figure 8)



(Figure 8.1)

12. Push the glass carefully all the way against the wall (figure 9).




(Figure 9)

13. Check that there is a 3-5 mm gap between the window and the door (can be adjusted by moving the window glass, see figure 10).



(Figure 10)

14. In order to adjust the door hinges, close the door and adjust the hinges to a suitable position by tightening the hexagon socket screws (figure 11). See also the separate user guide for hinges.

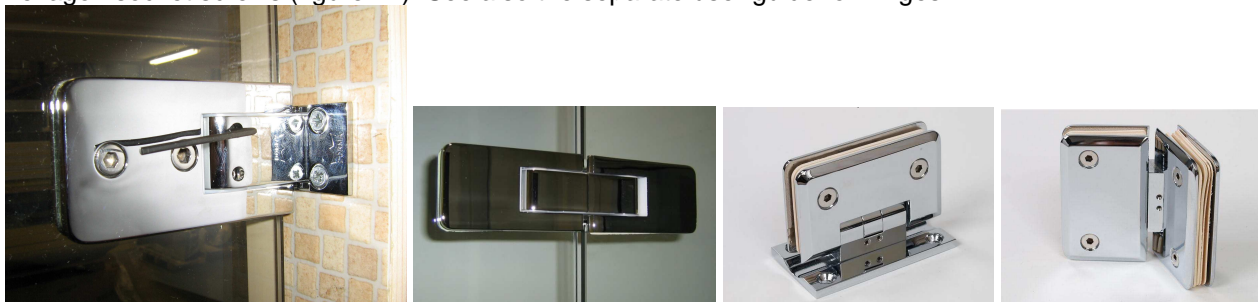

(Figure 11)

15. Silicone must dry for 24 hours before use.

